



SM-J3308/J3300
Common

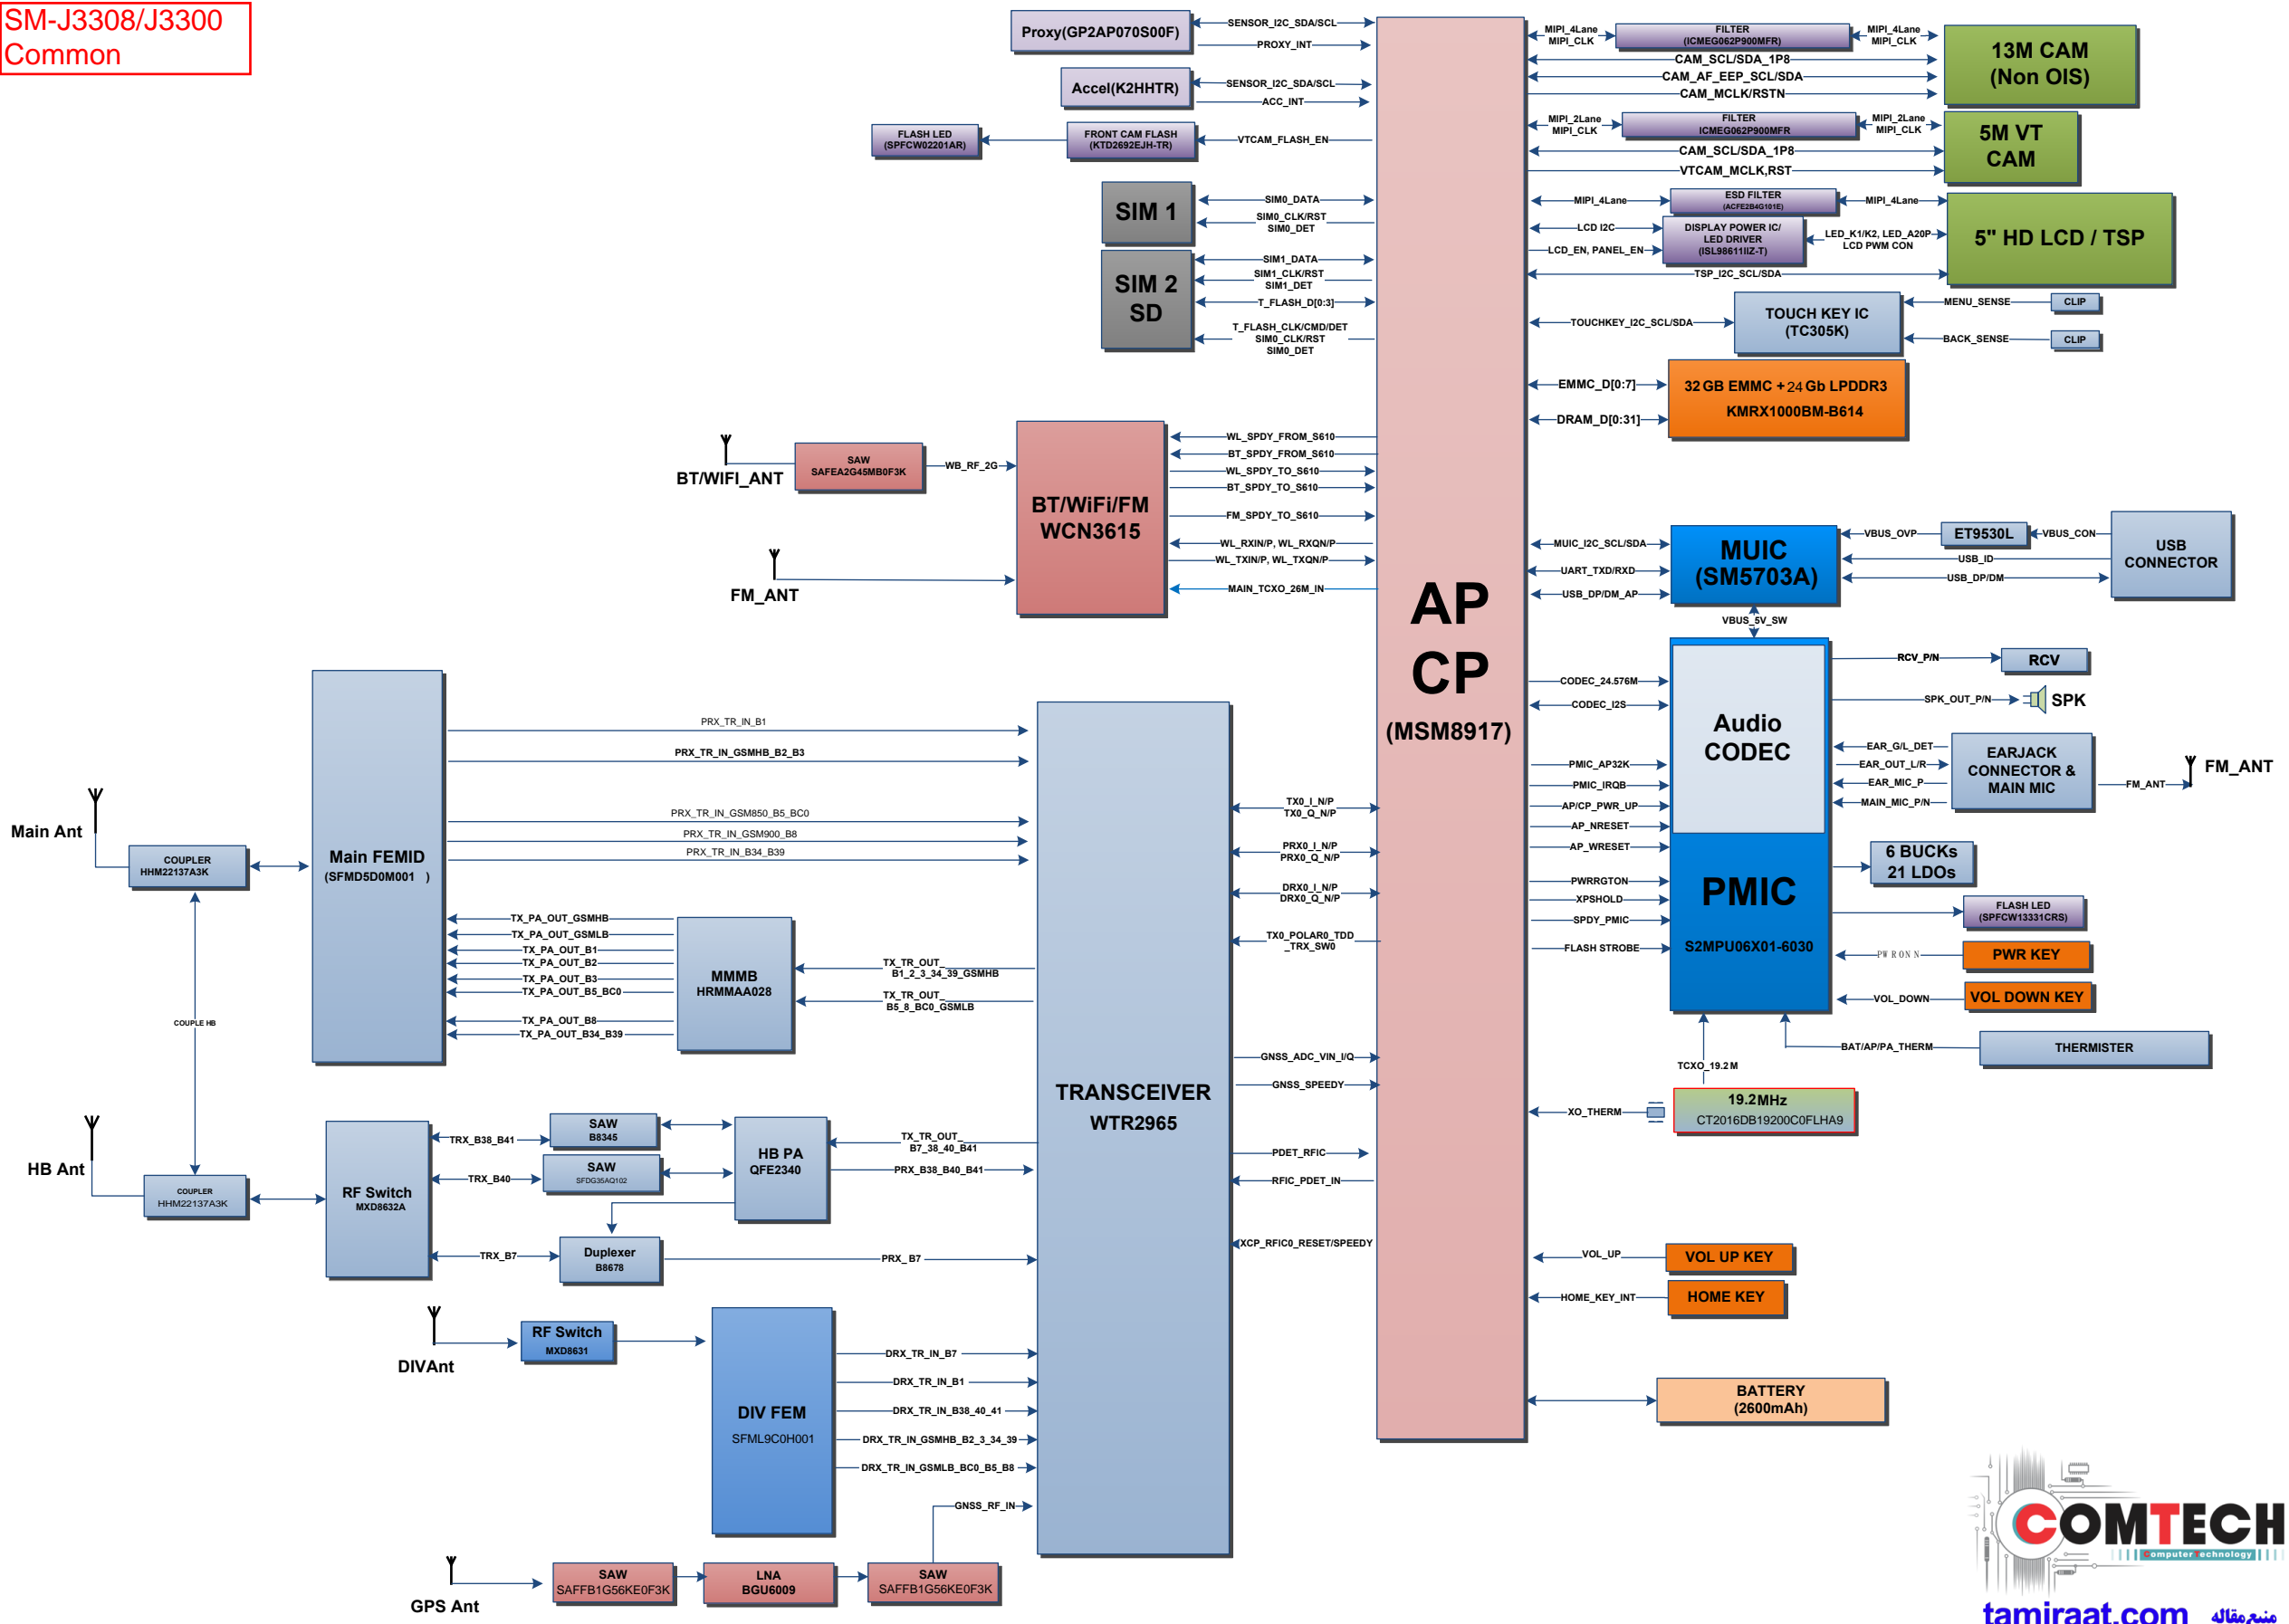




SM-J3308/J3300
Common

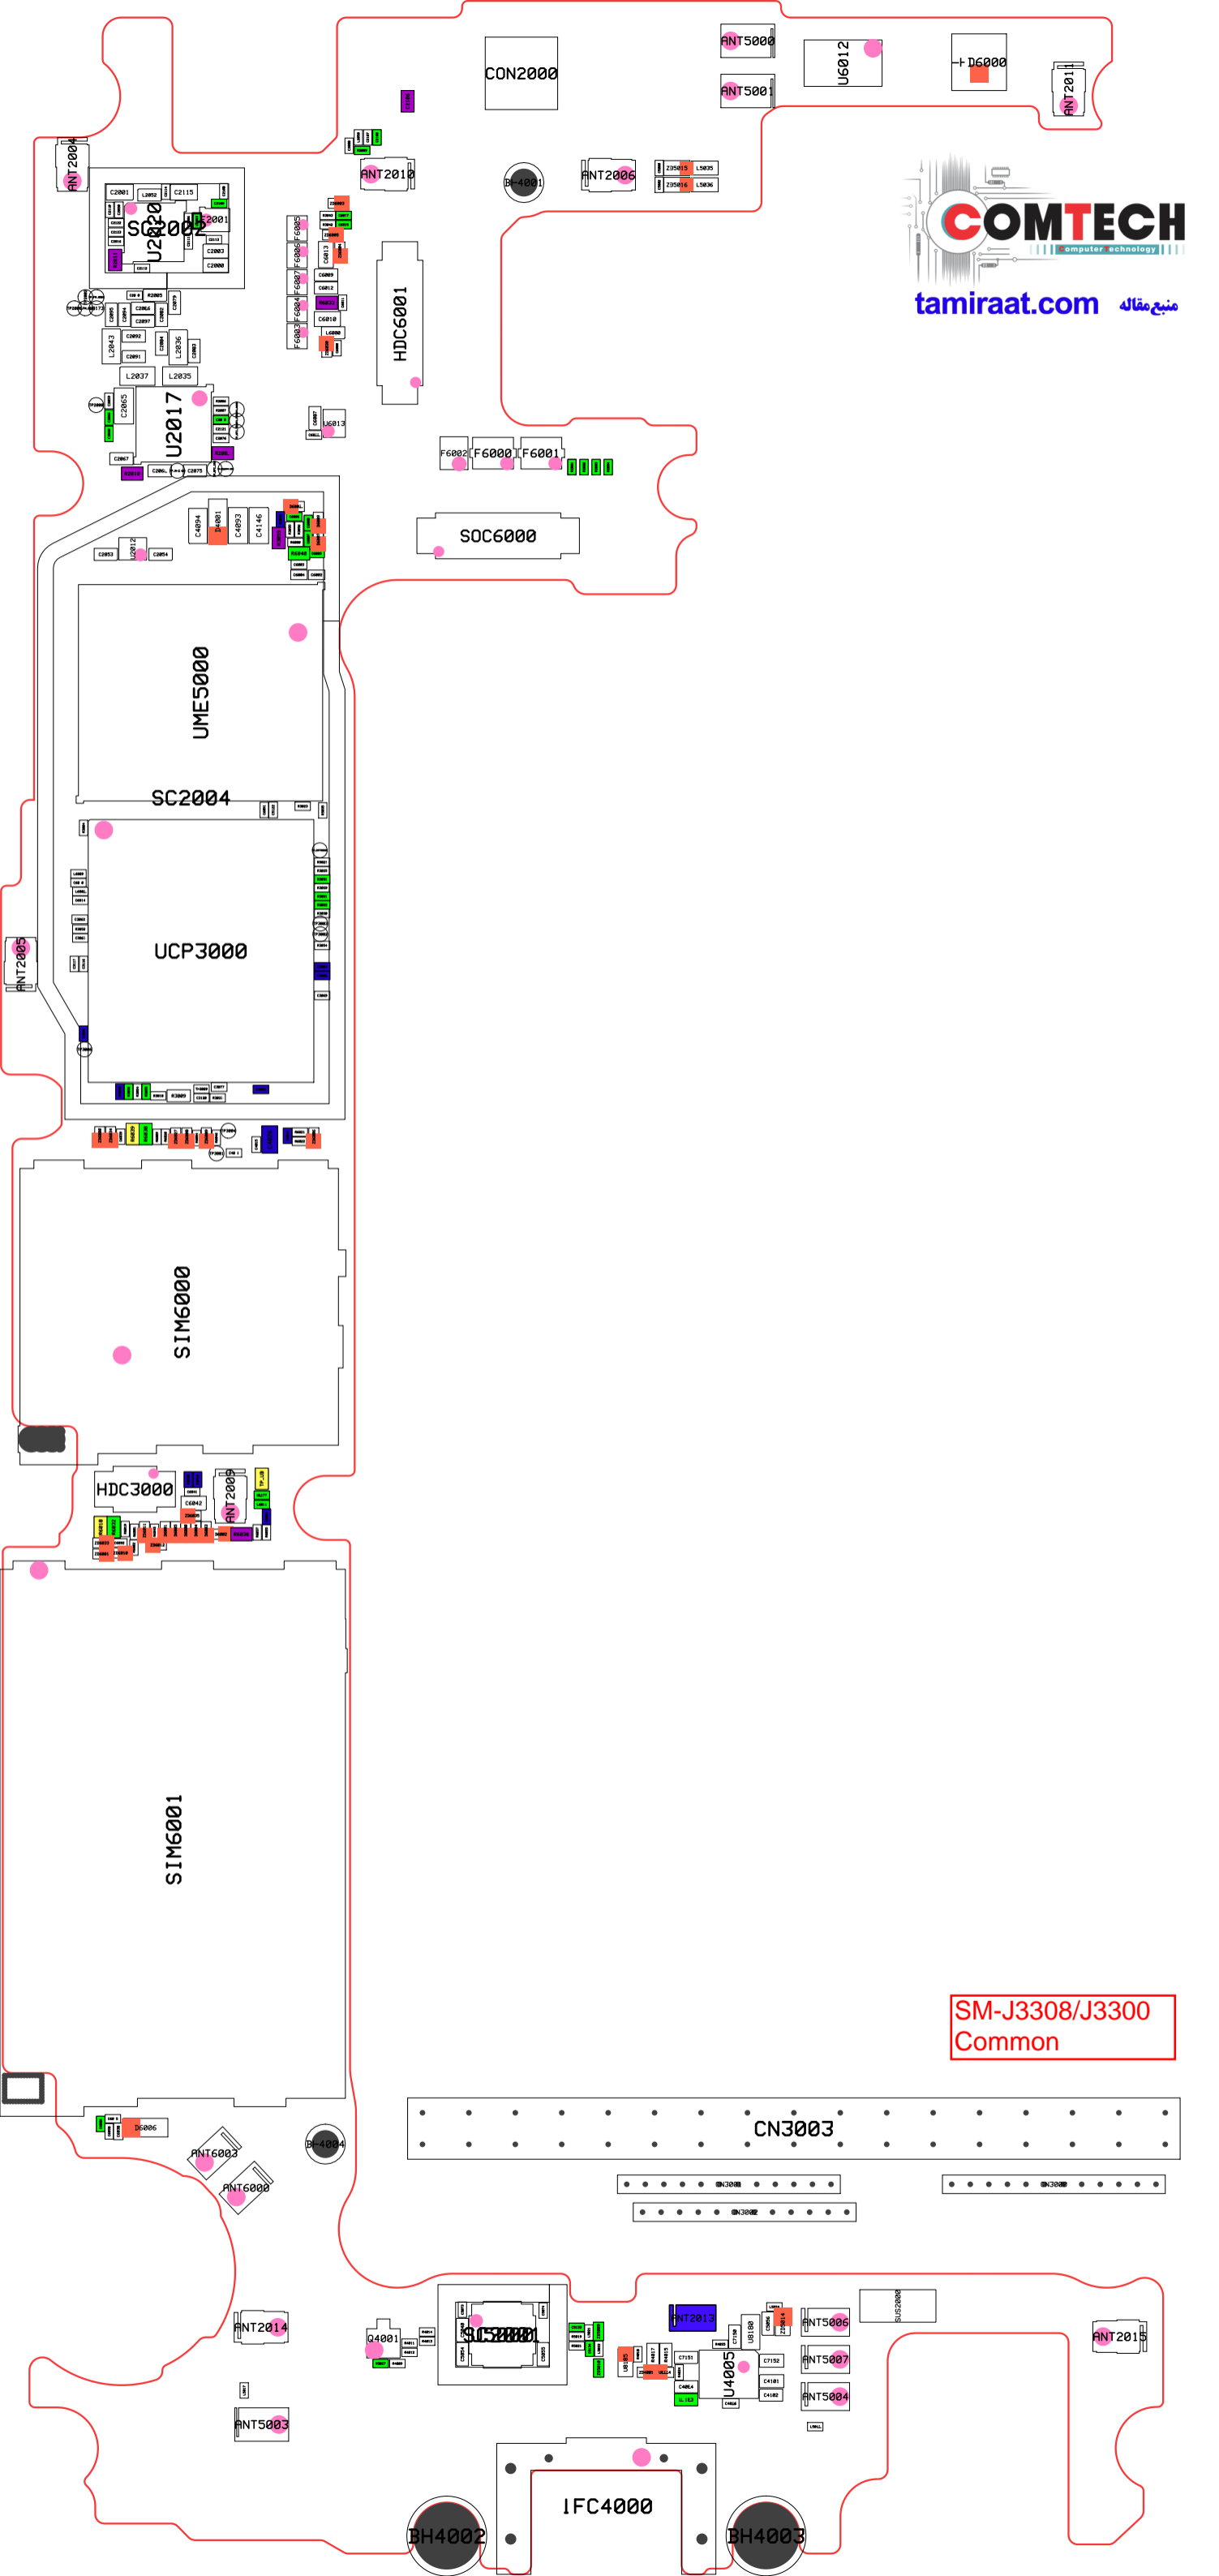

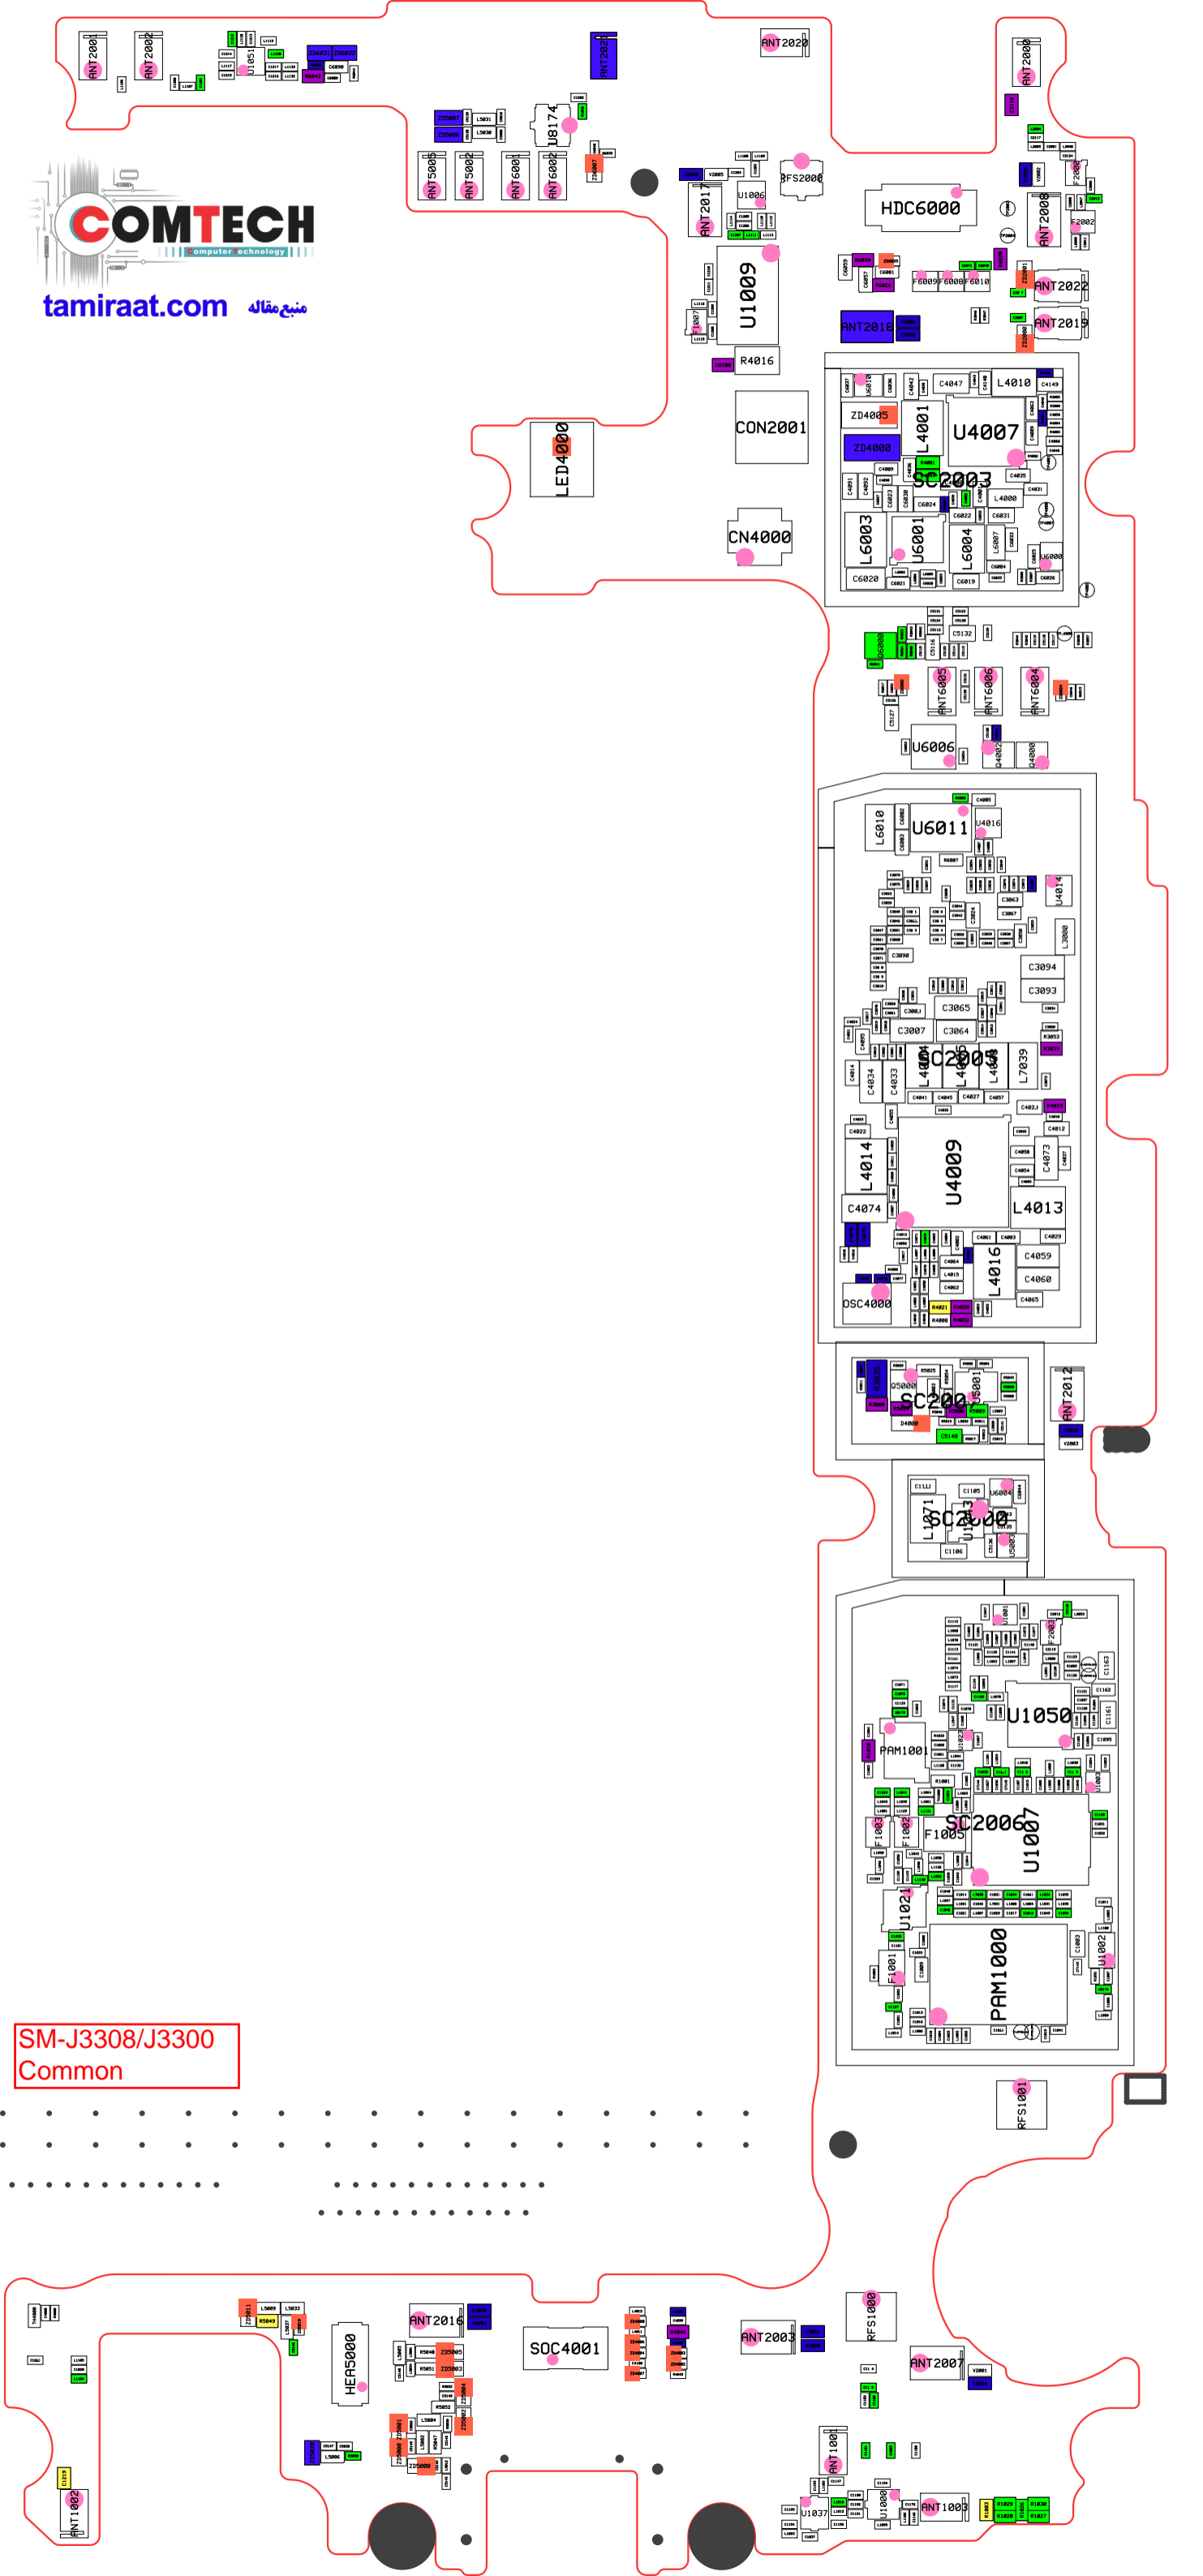





tamiraat.com منبع مقاله



SM-J3308/J3300
Common


8. Level 3 Repair

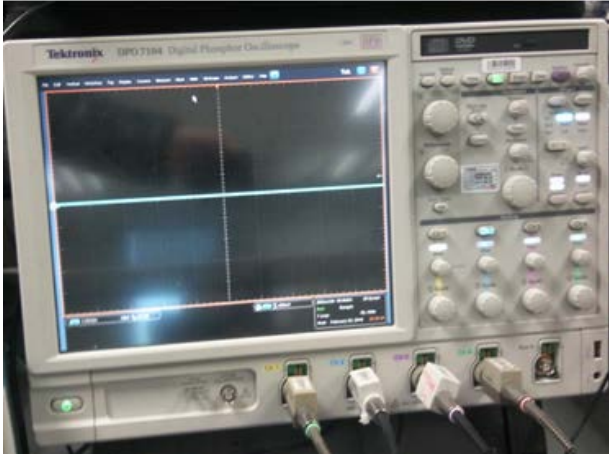8-3. Flow chart of Troubleshooting.

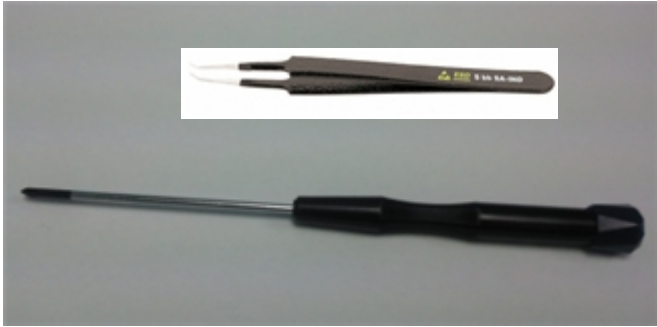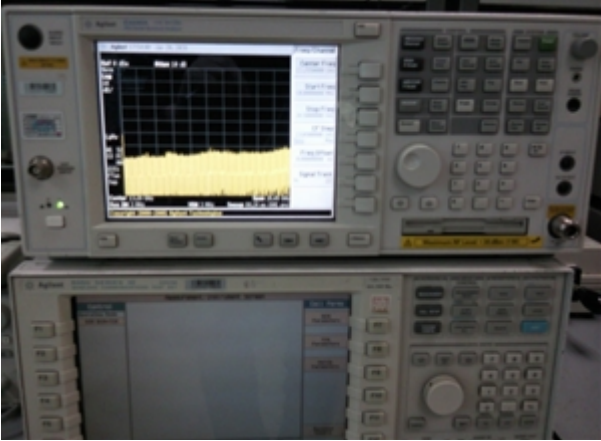	
<p>Oscilloscope</p>	<p>Digital Multimeter</p>
	
<p>Power Supply</p>	<p>+ driver, ESD Safe Tweezer</p>
	
<p>8960 & Spectrum Analyzer</p>	<p>Soldering iron</p>


8. Level 3 Repair

8-4-1. Power On

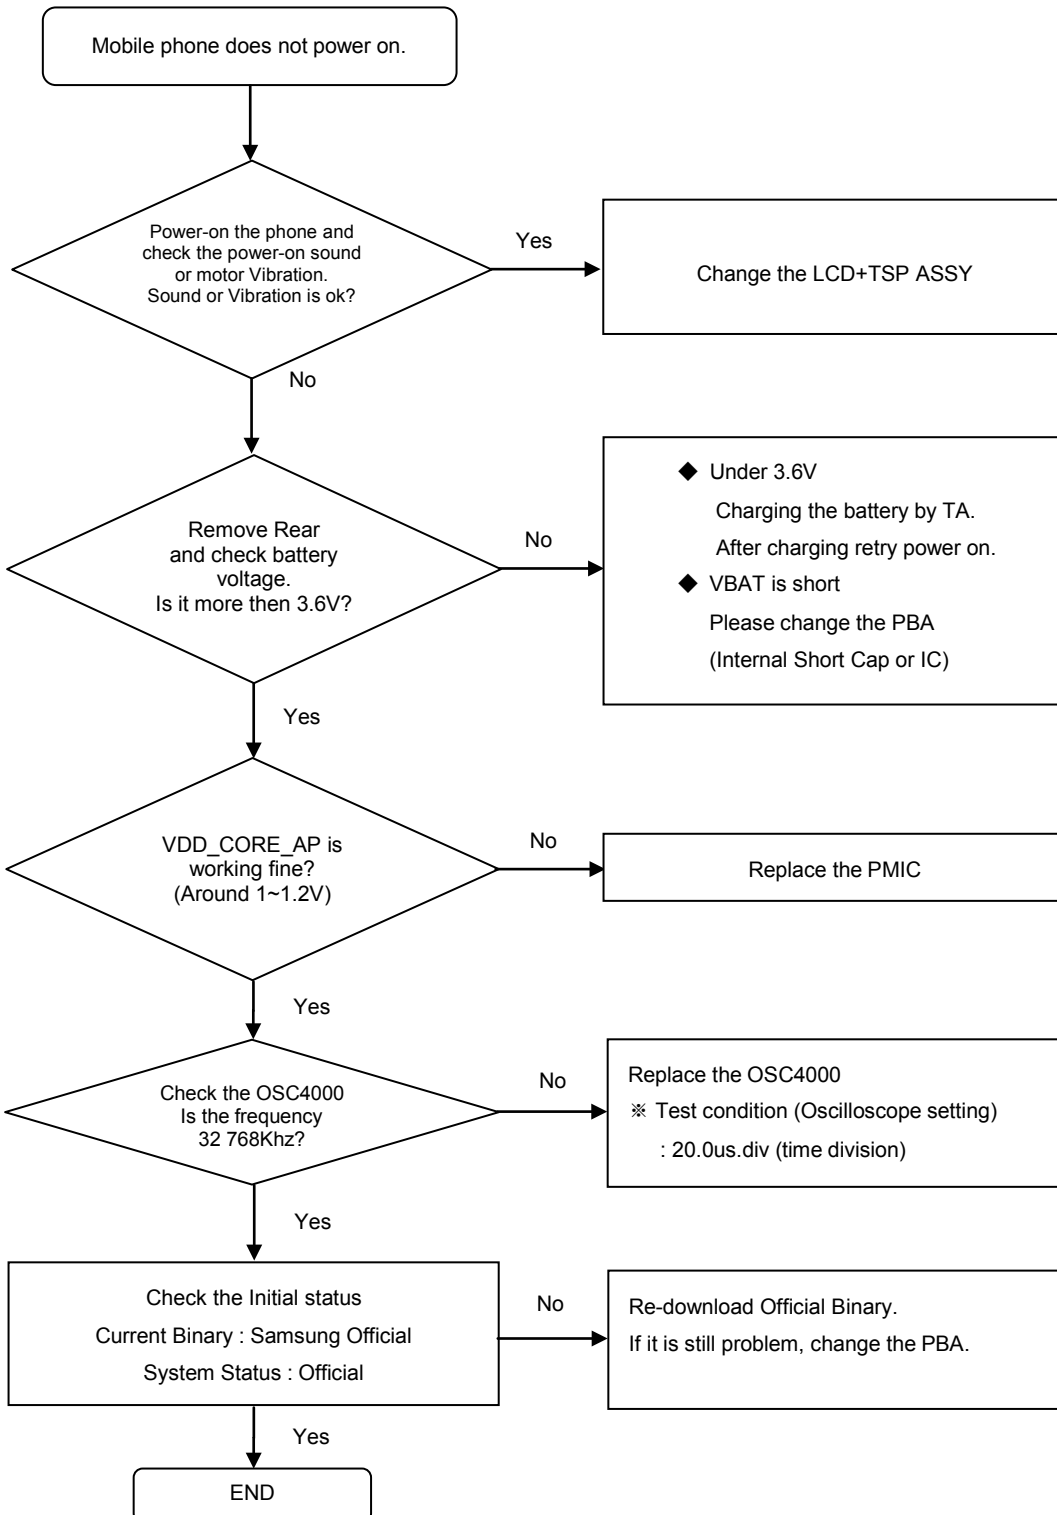


8. Level 3 Repair

8-4-2. Initial

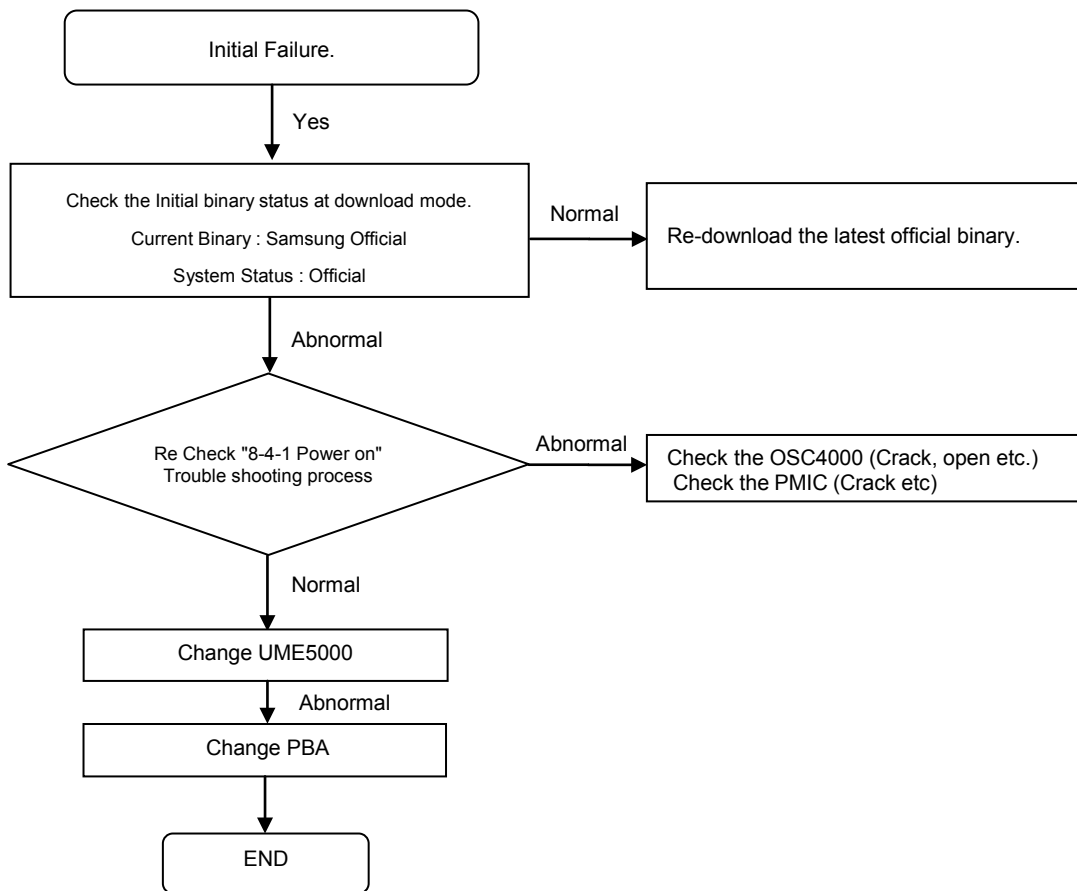


8. Level 3 Repair

8-4-3. No Service

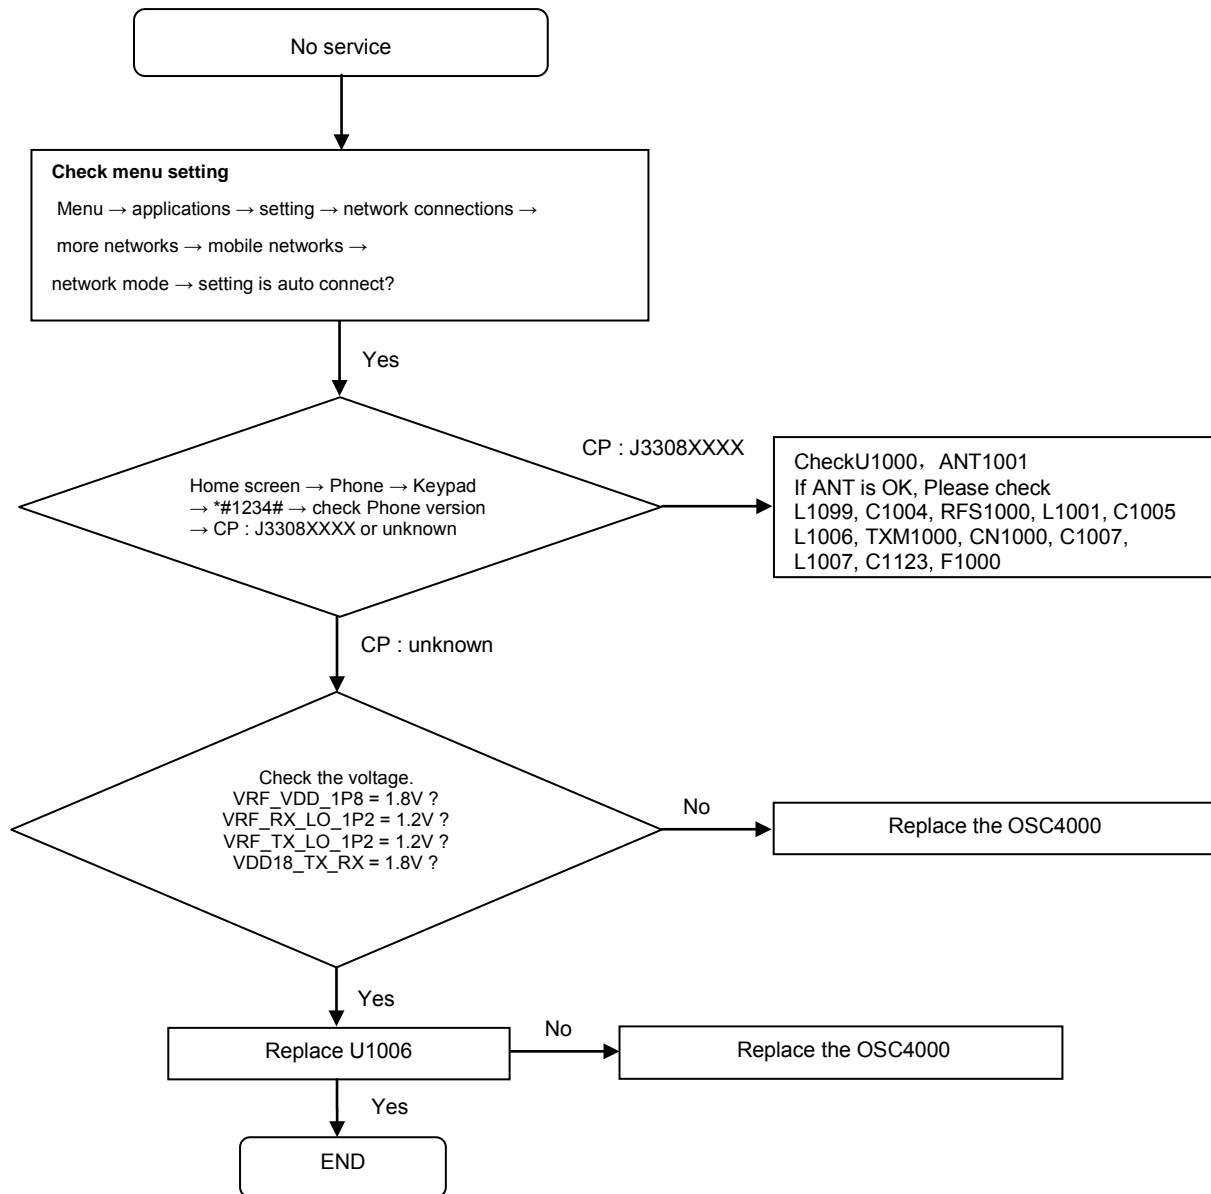


8. Level 3 Repair

8-4-4. SIM1 Part

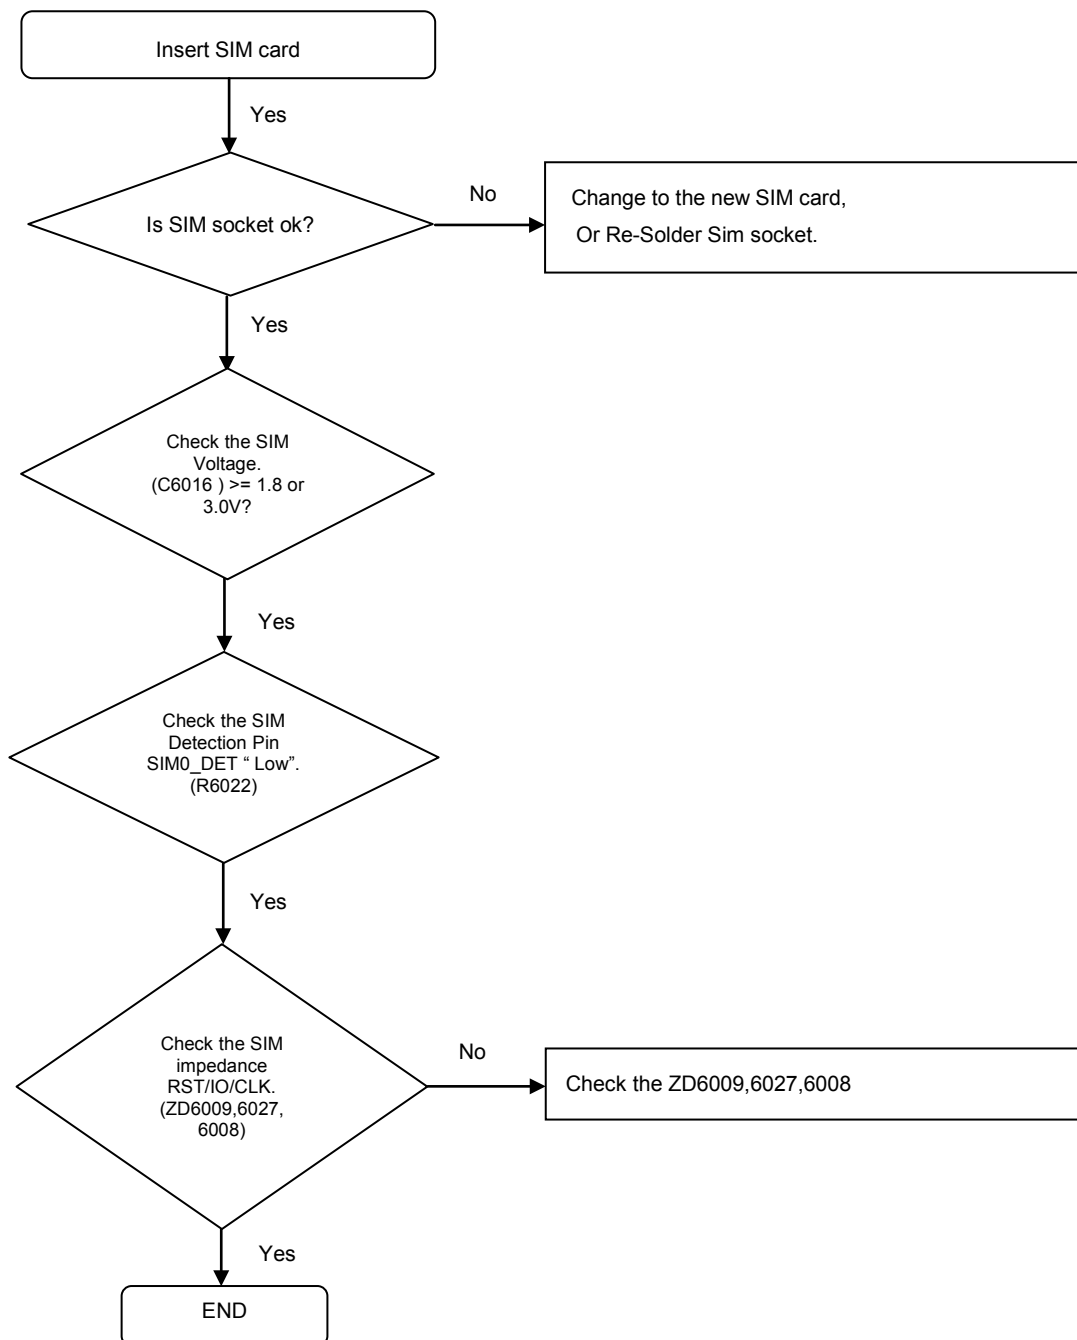


8. Level 3 Repair

8-4-5. SIM2 Part

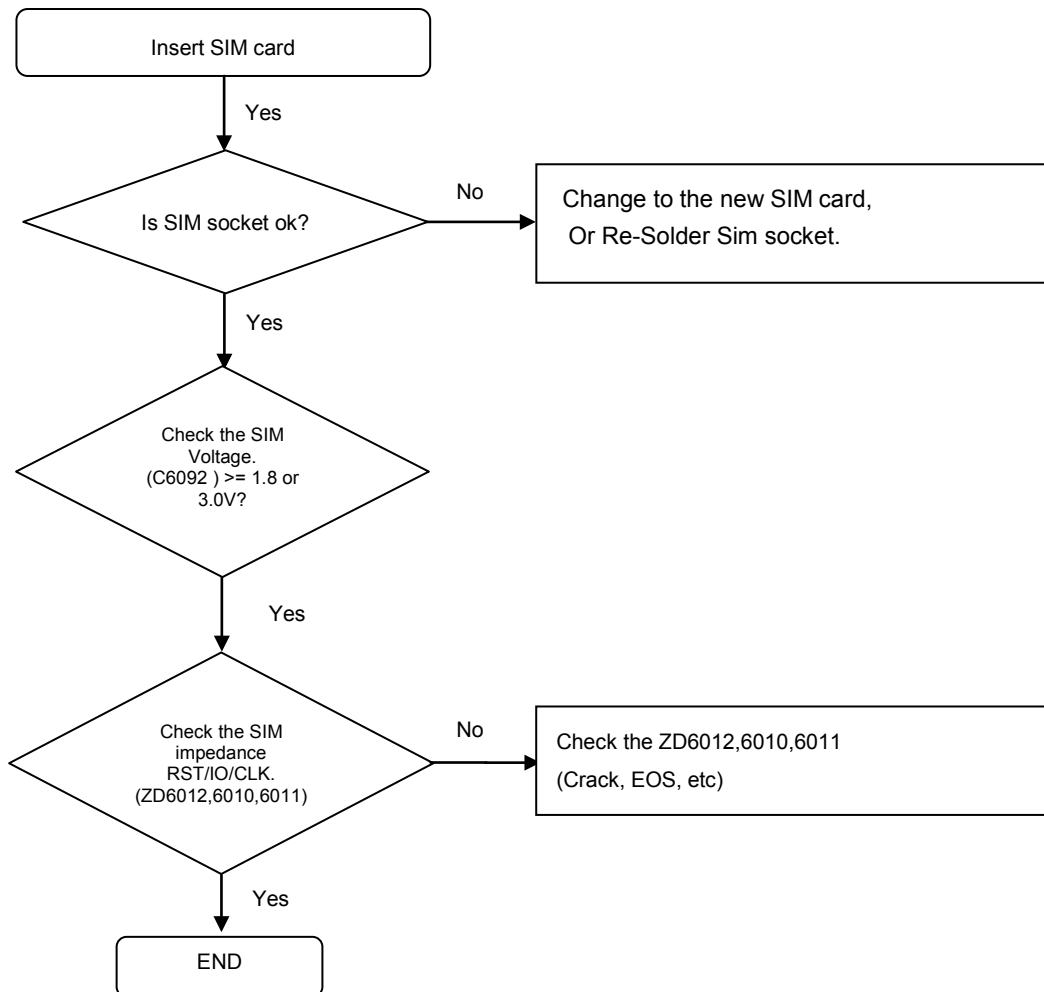


8. Level 3 Repair

8-4-6. T-Flash Part

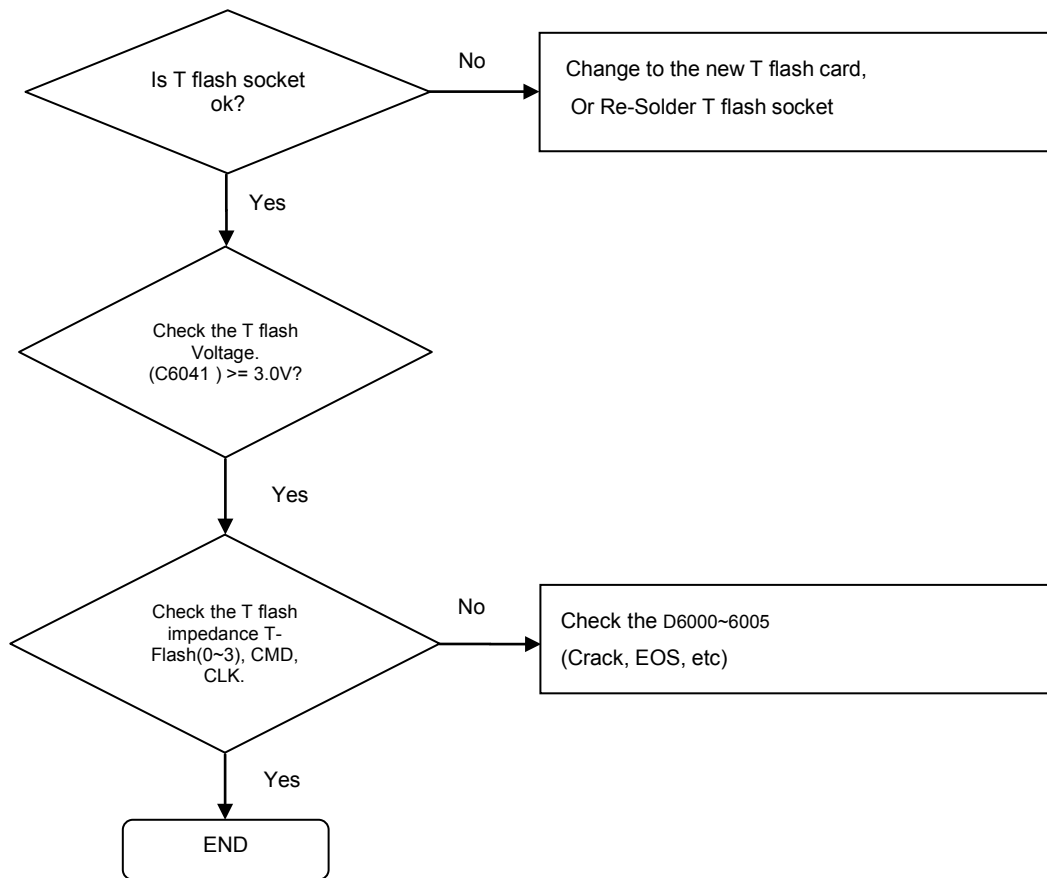


8. Level 3 Repair

8-4-7. Charging Part

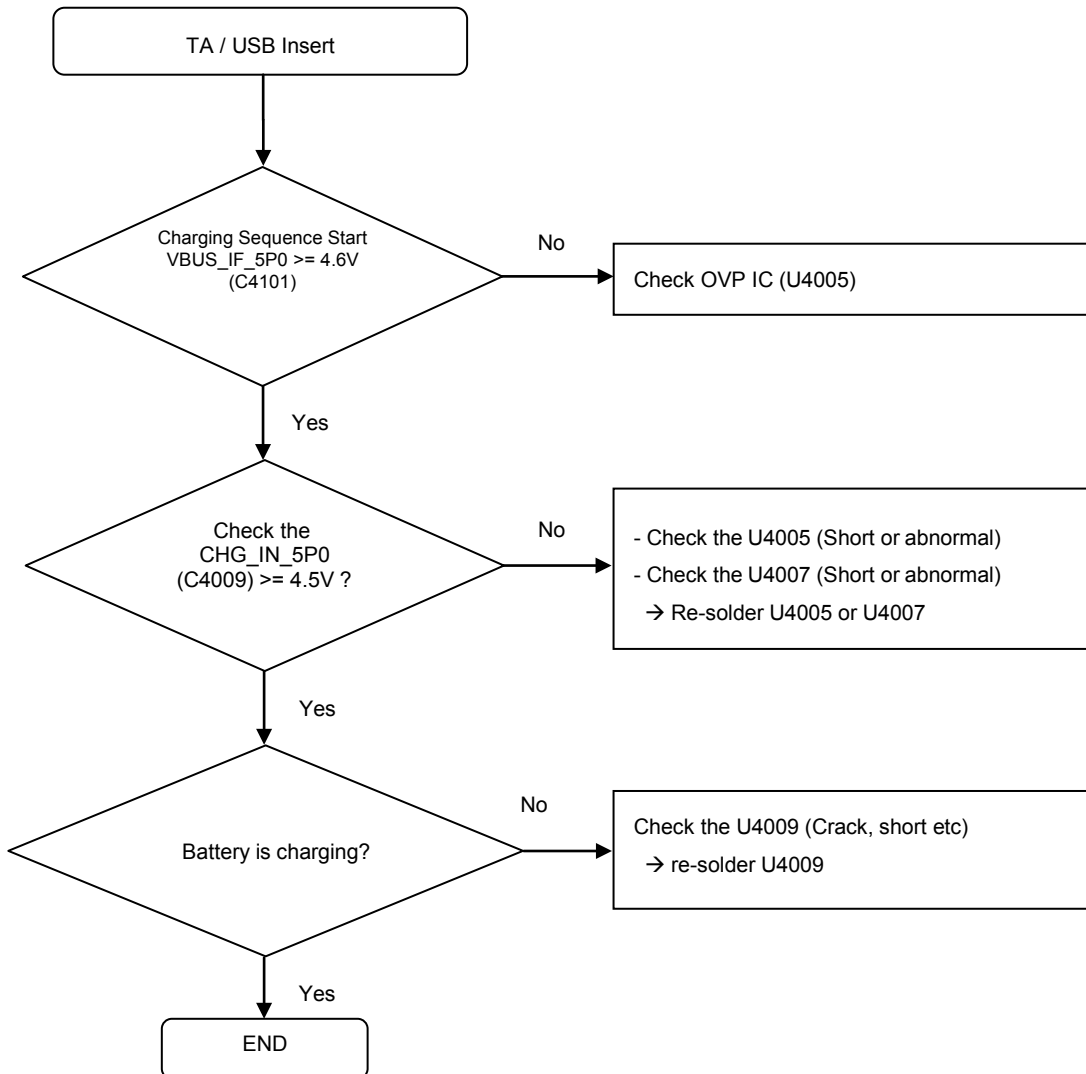


8. Level 3 Repair

8-4-8-1. Accel Sensor

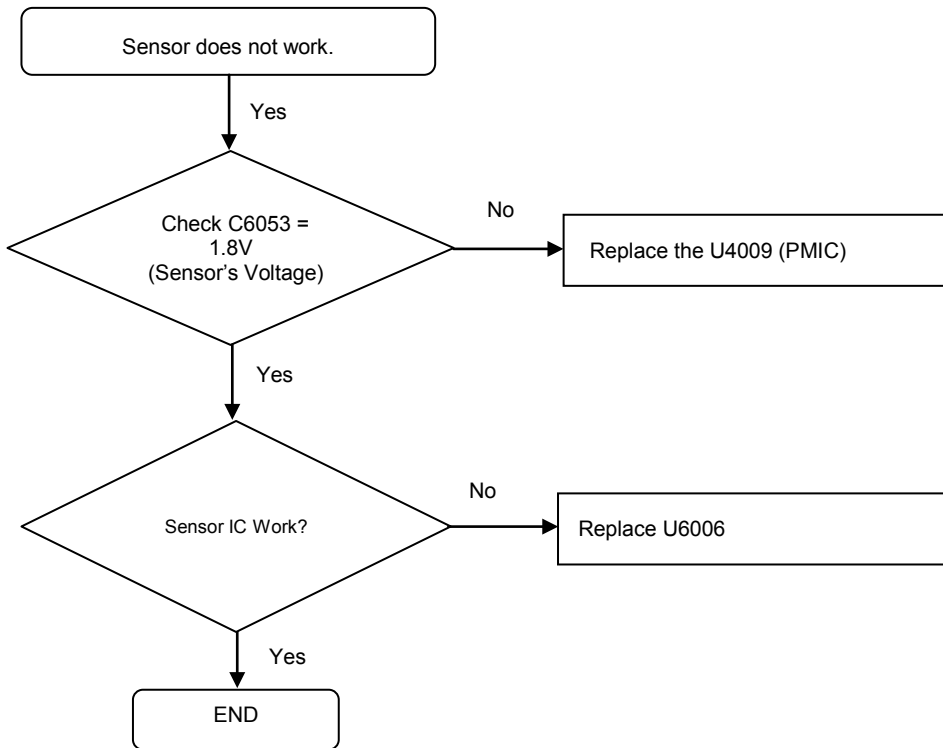


8. Level 3 Repair

8-4-8-2. Proxy Sensor

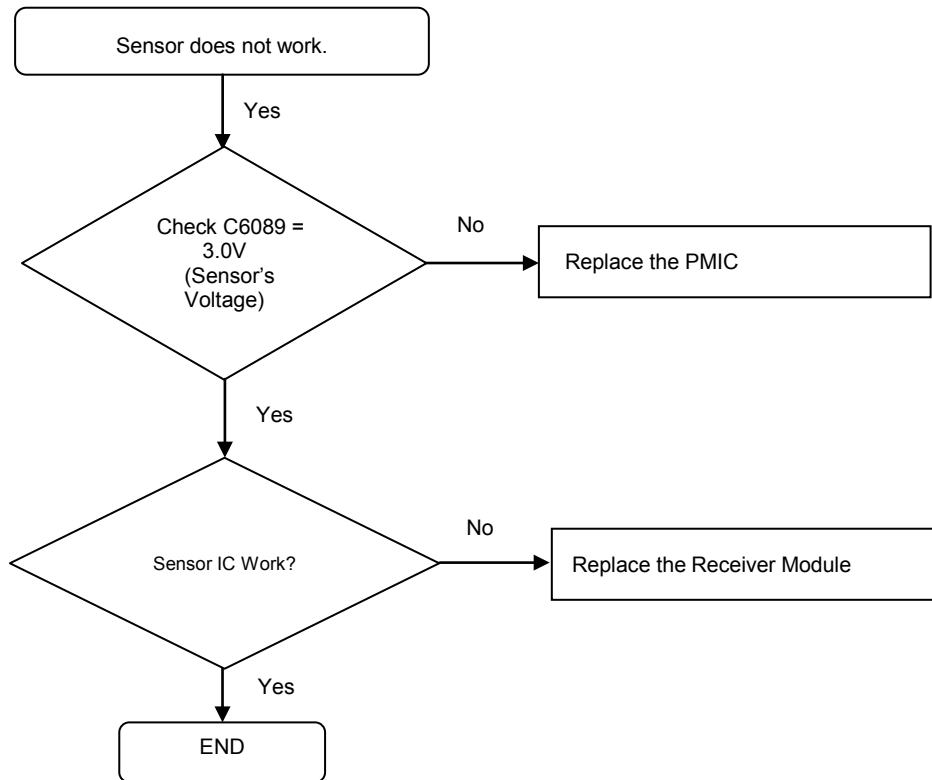


8. Level 3 Repair

8-4-9. Speaker Part

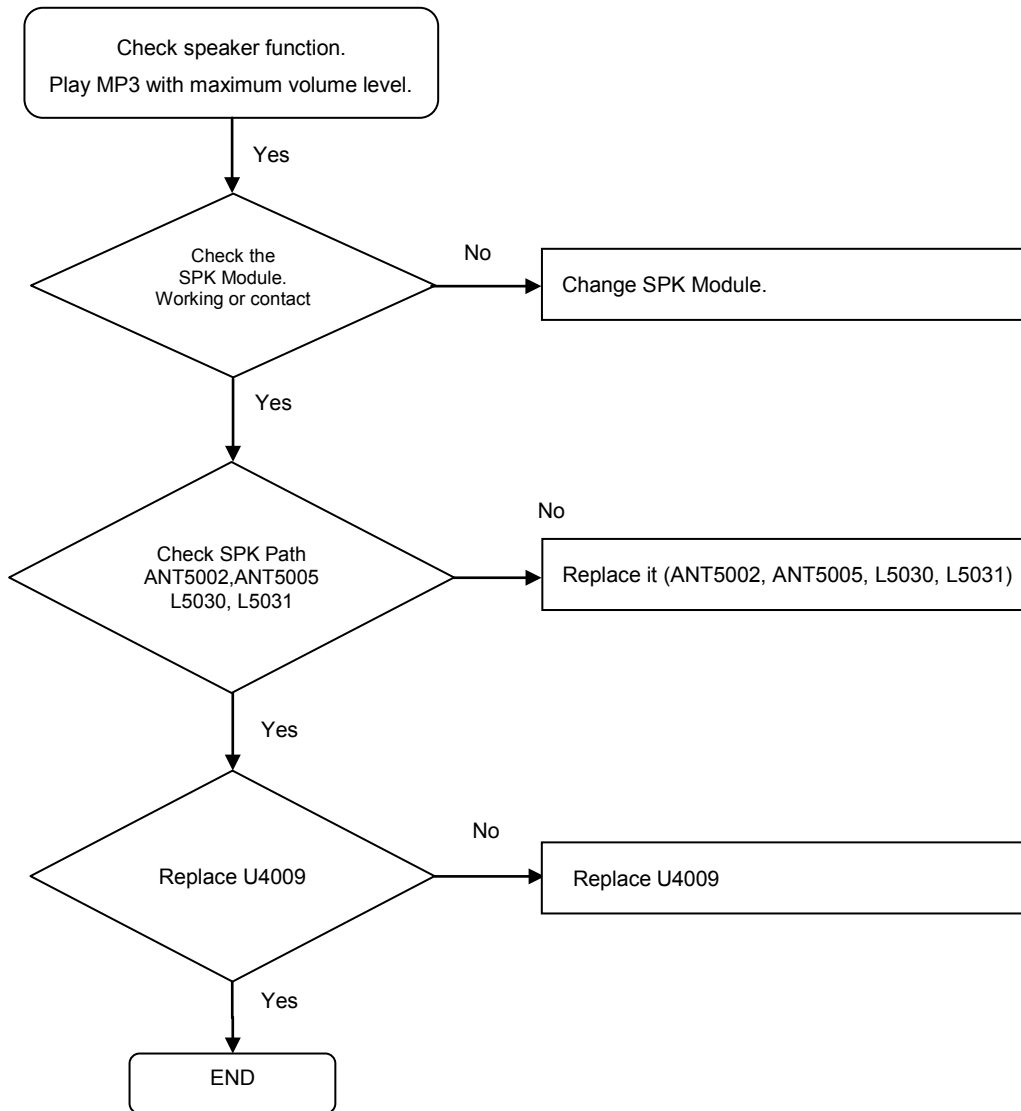


8. Level 3 Repair

8-4-10. Receiver Part

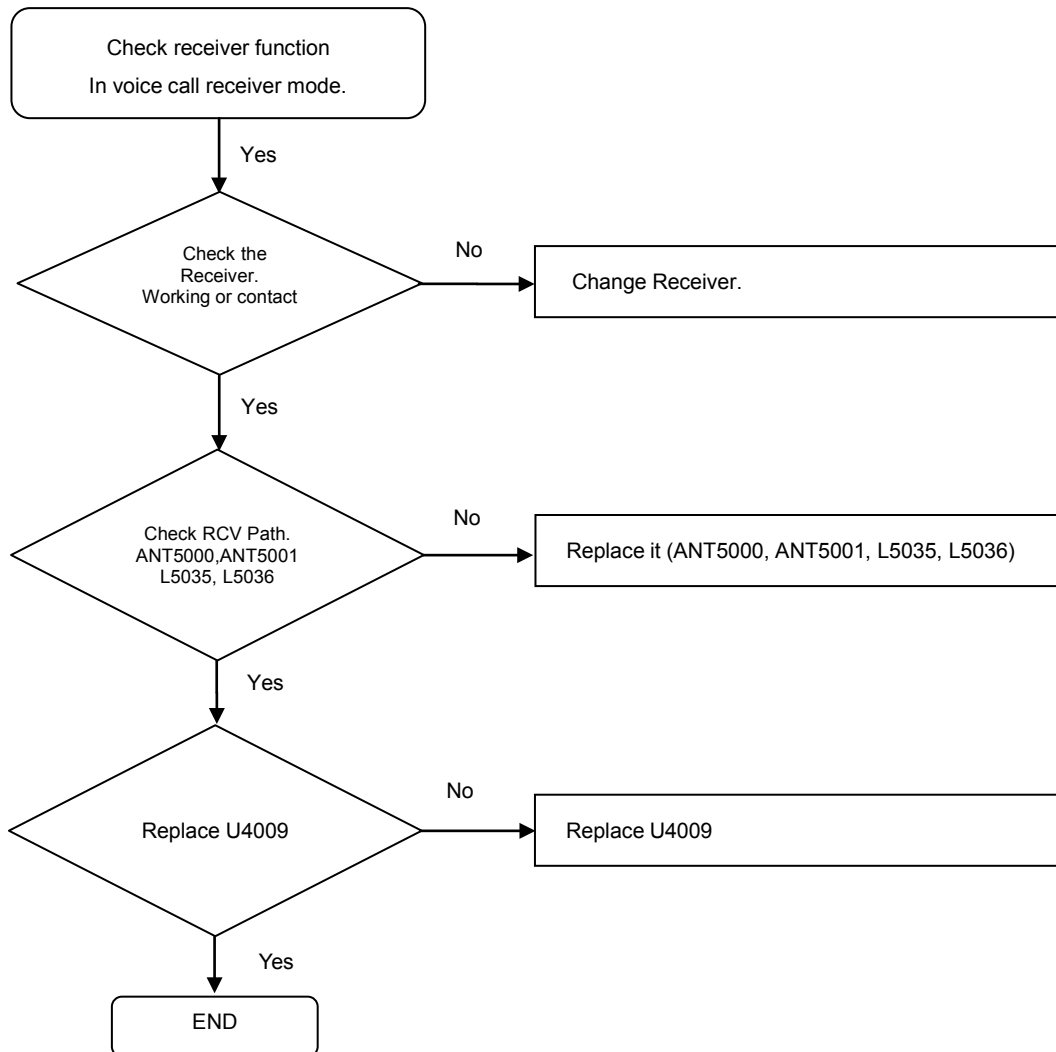


8. Level 3 Repair

8-4-11. In-cell TFT-LCD

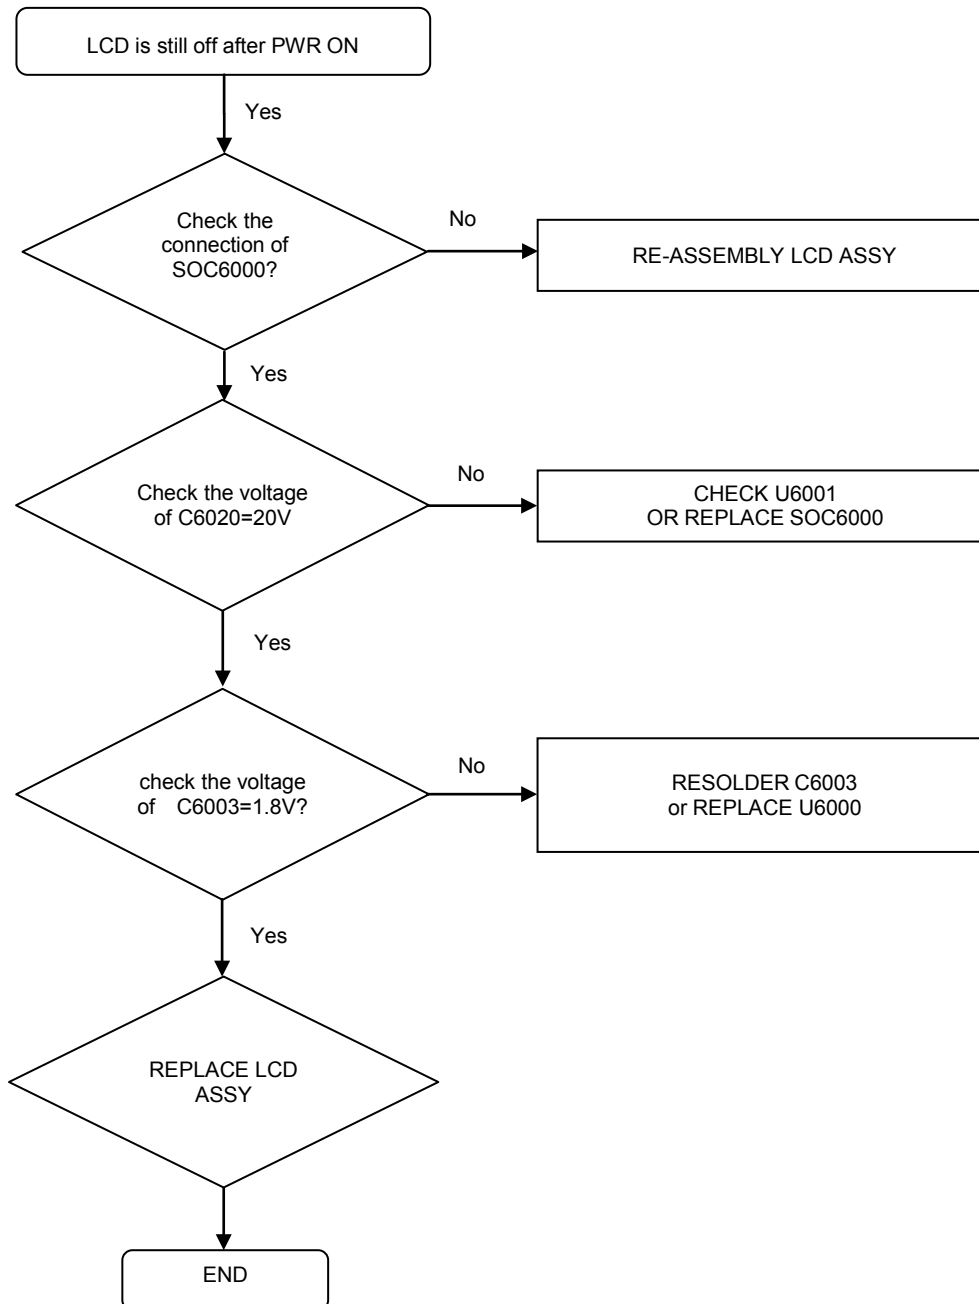


8. Level 3 Repair

8-4-12. TSP

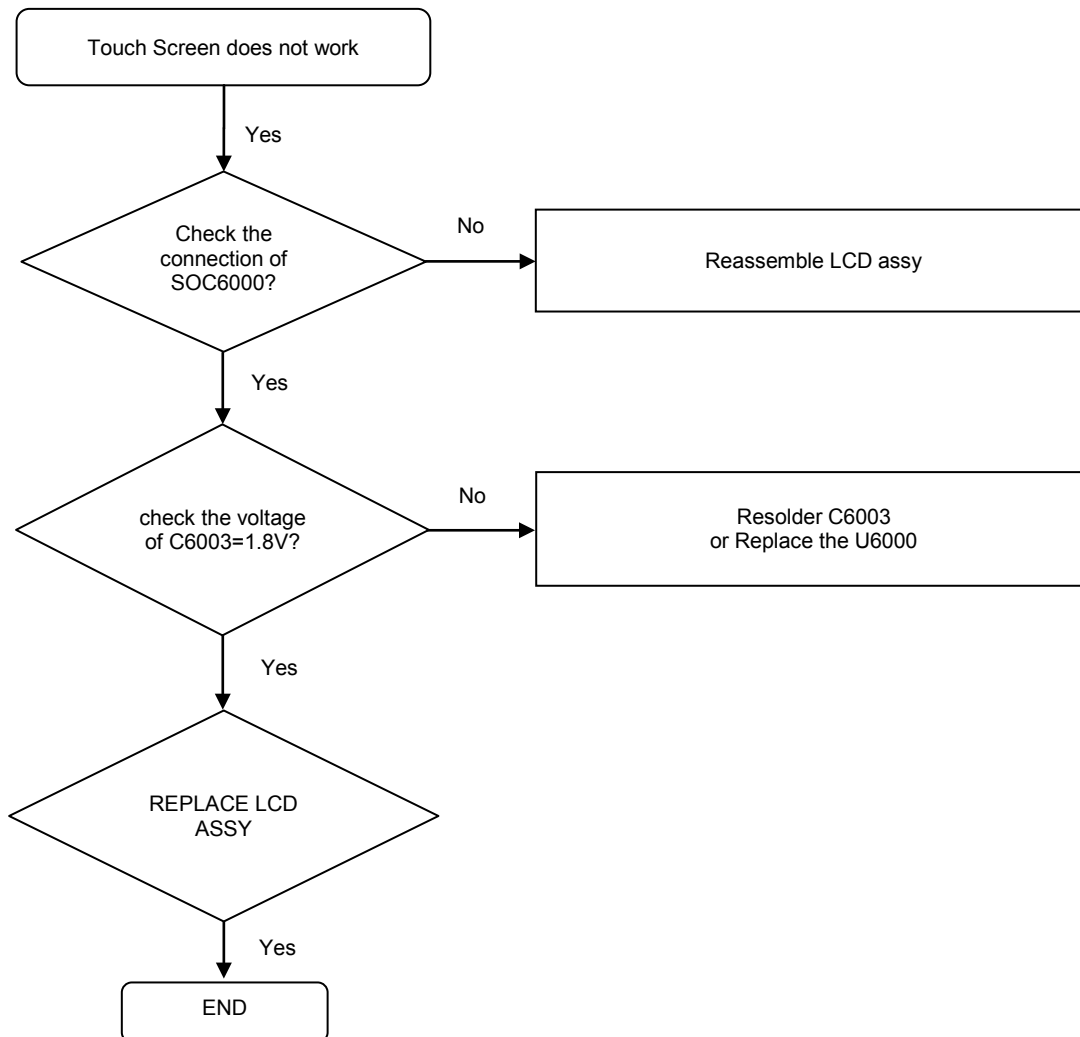


8. Level 3 Repair

8-4-13. 13M CAMERA

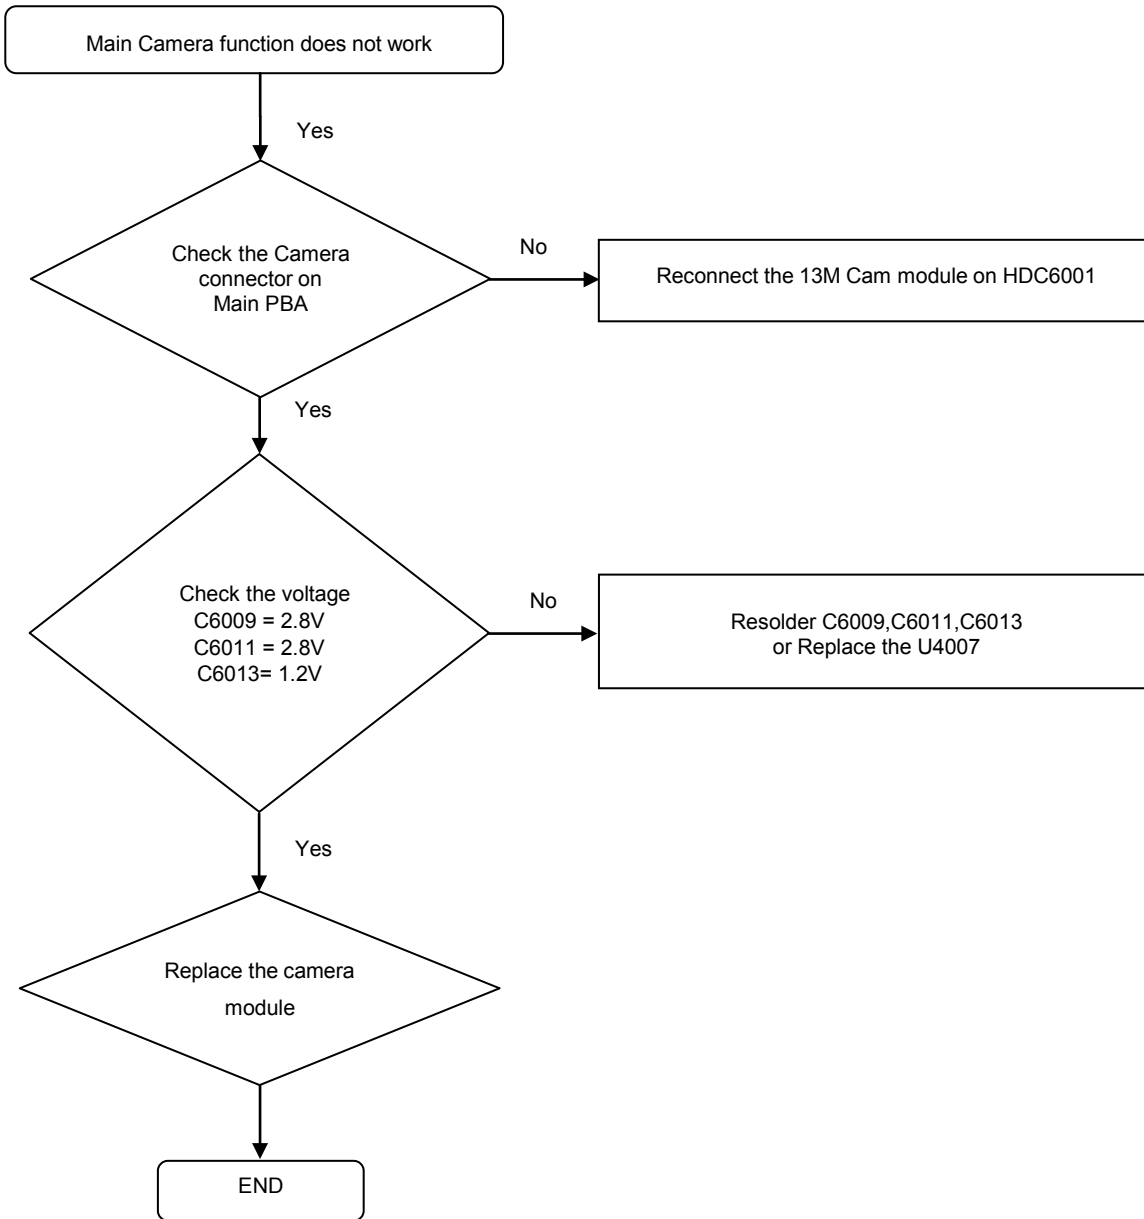


8. Level 3 Repair

8-4-14. 5M CAMERA

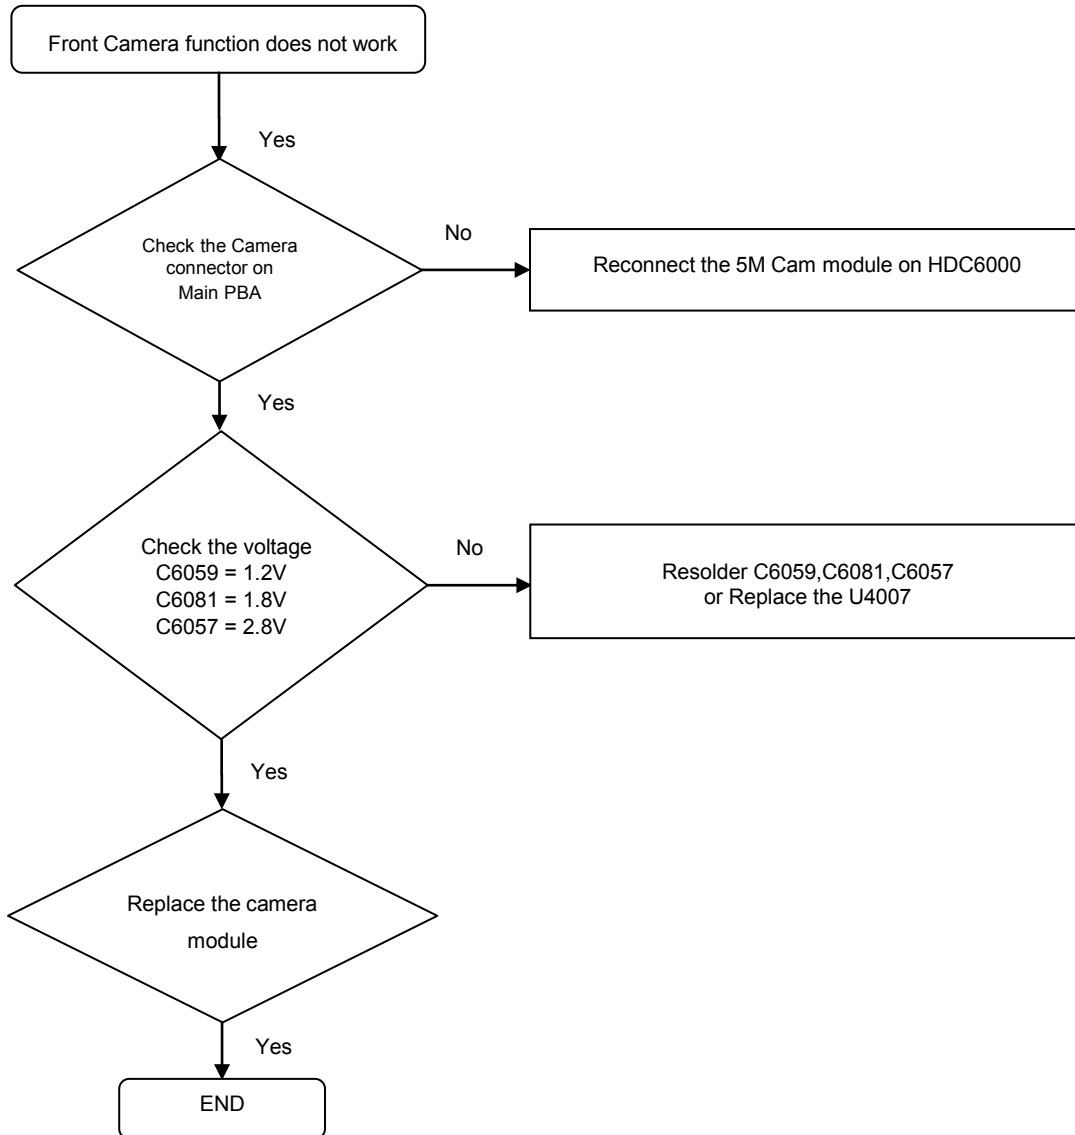


8. Level 3 Repair

8-4-15. GSM 850 / WCDMA 850 / LTE B5 / CDMA BC0 Rx

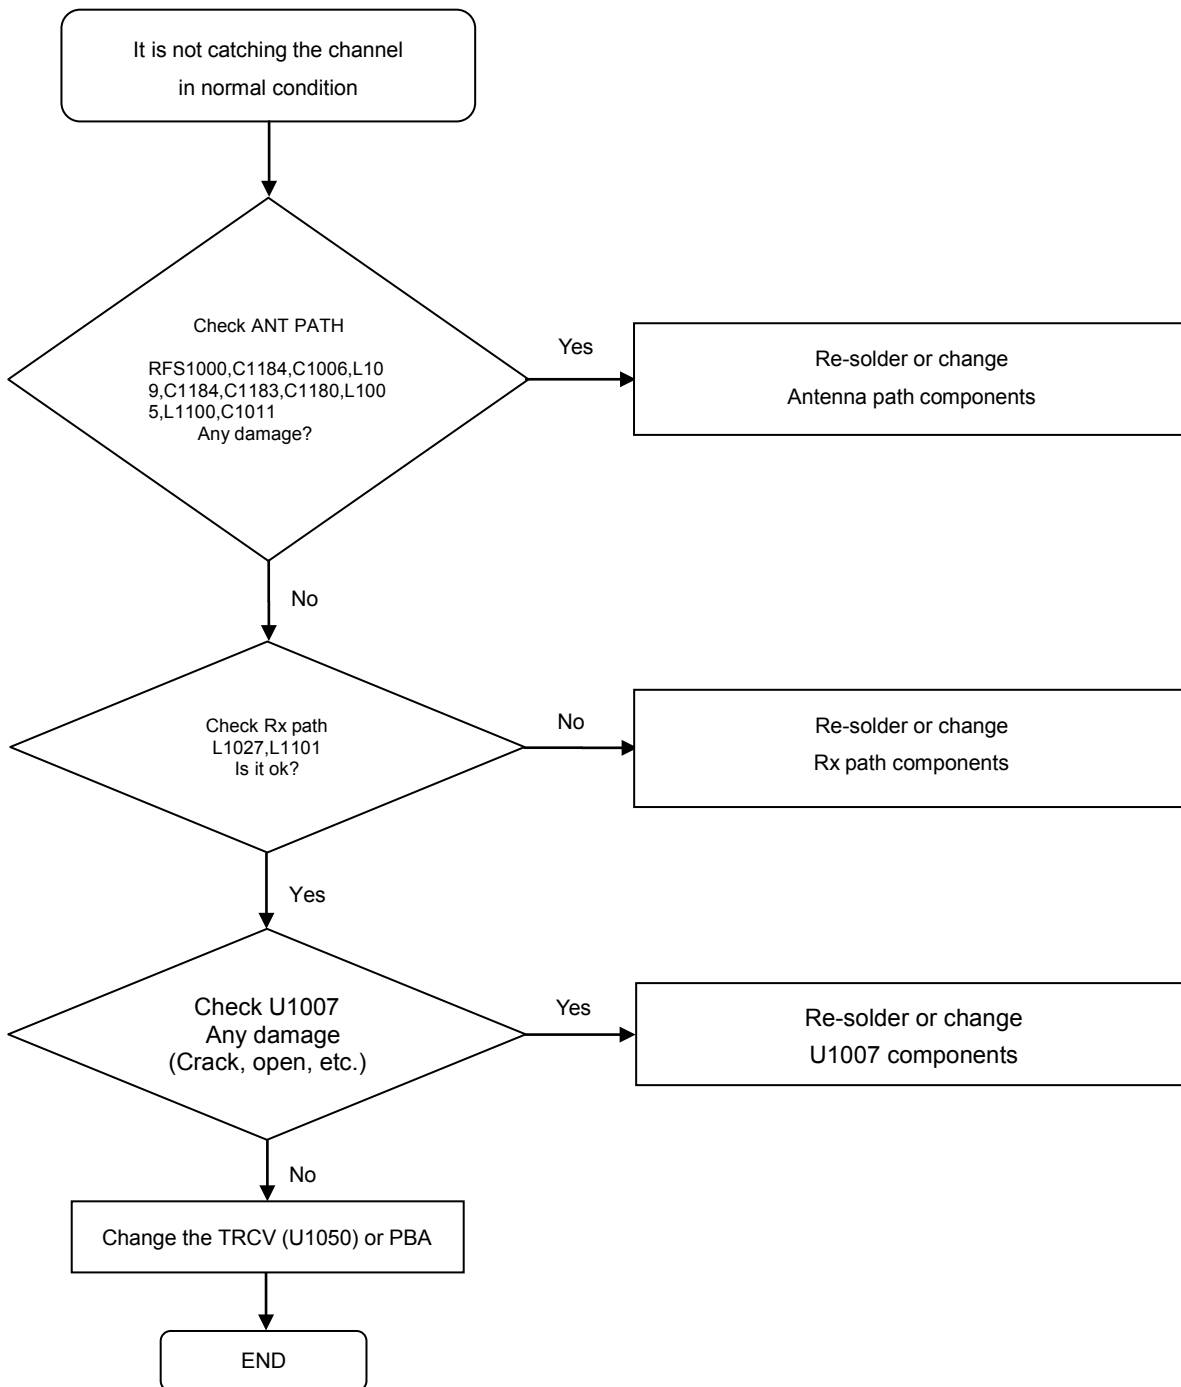


8. Level 3 Repair

8-4-16. GSM900 / WCDMA 900 / LTE B8 Rx

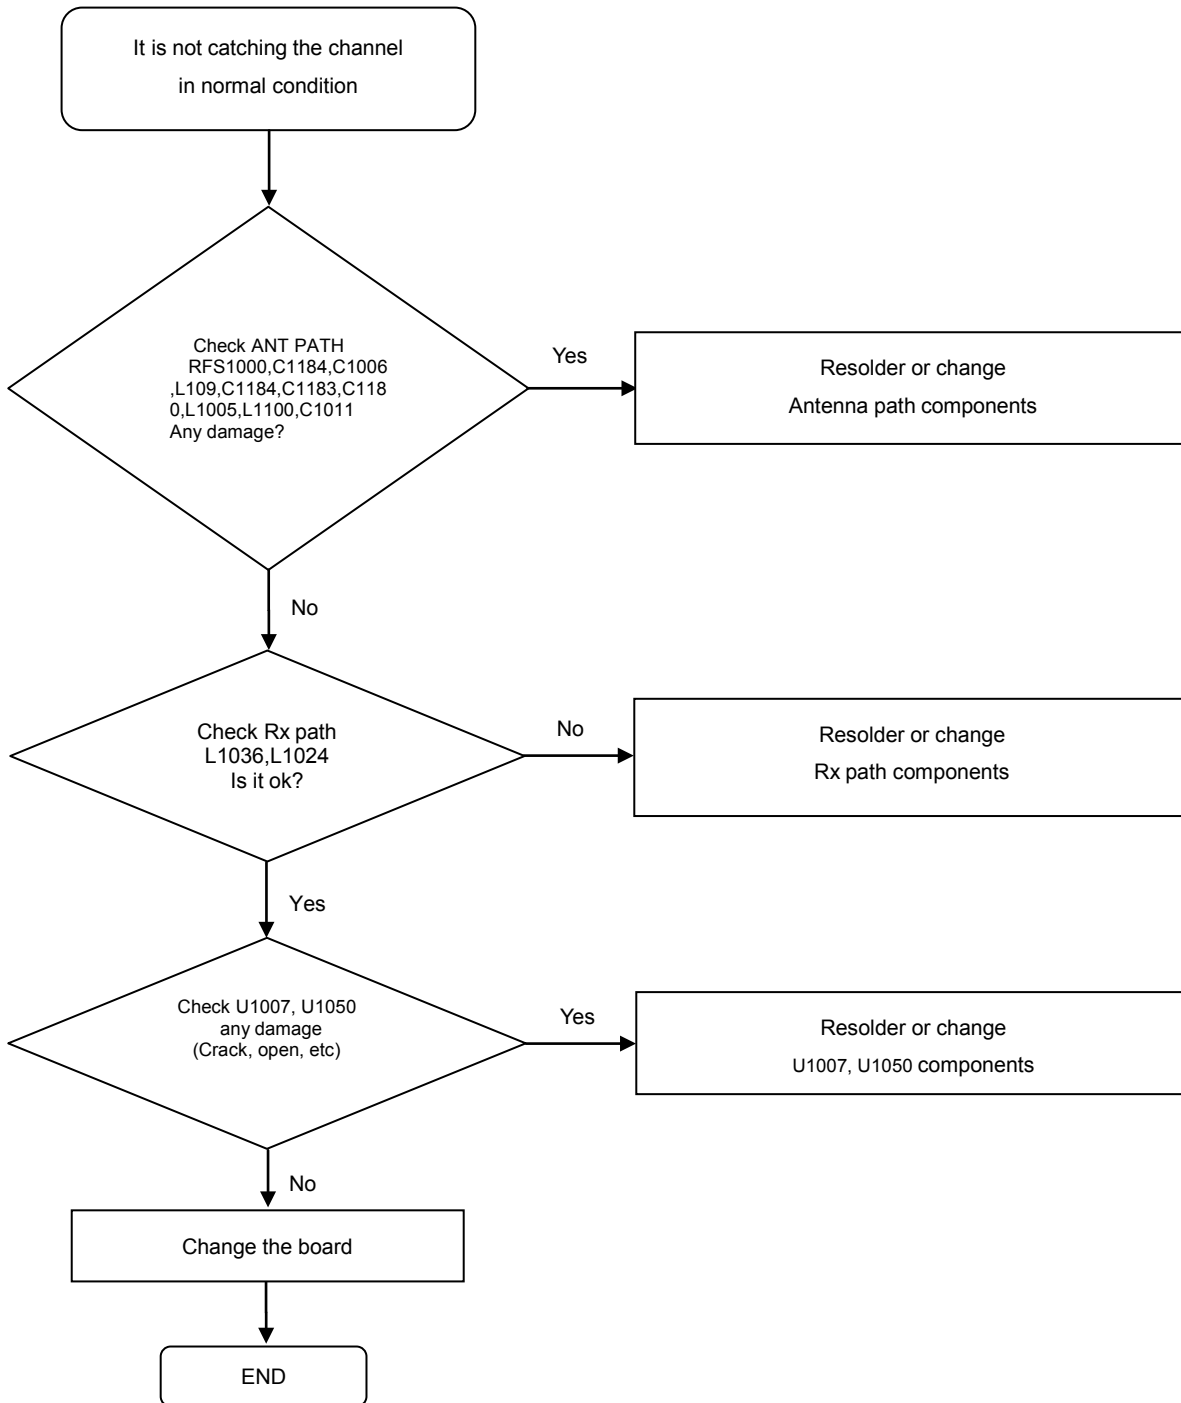


8. Level 3 Repair

8-4-17. GSM1800 /GSM1900/WCDMA B2/ LTE B3 RX

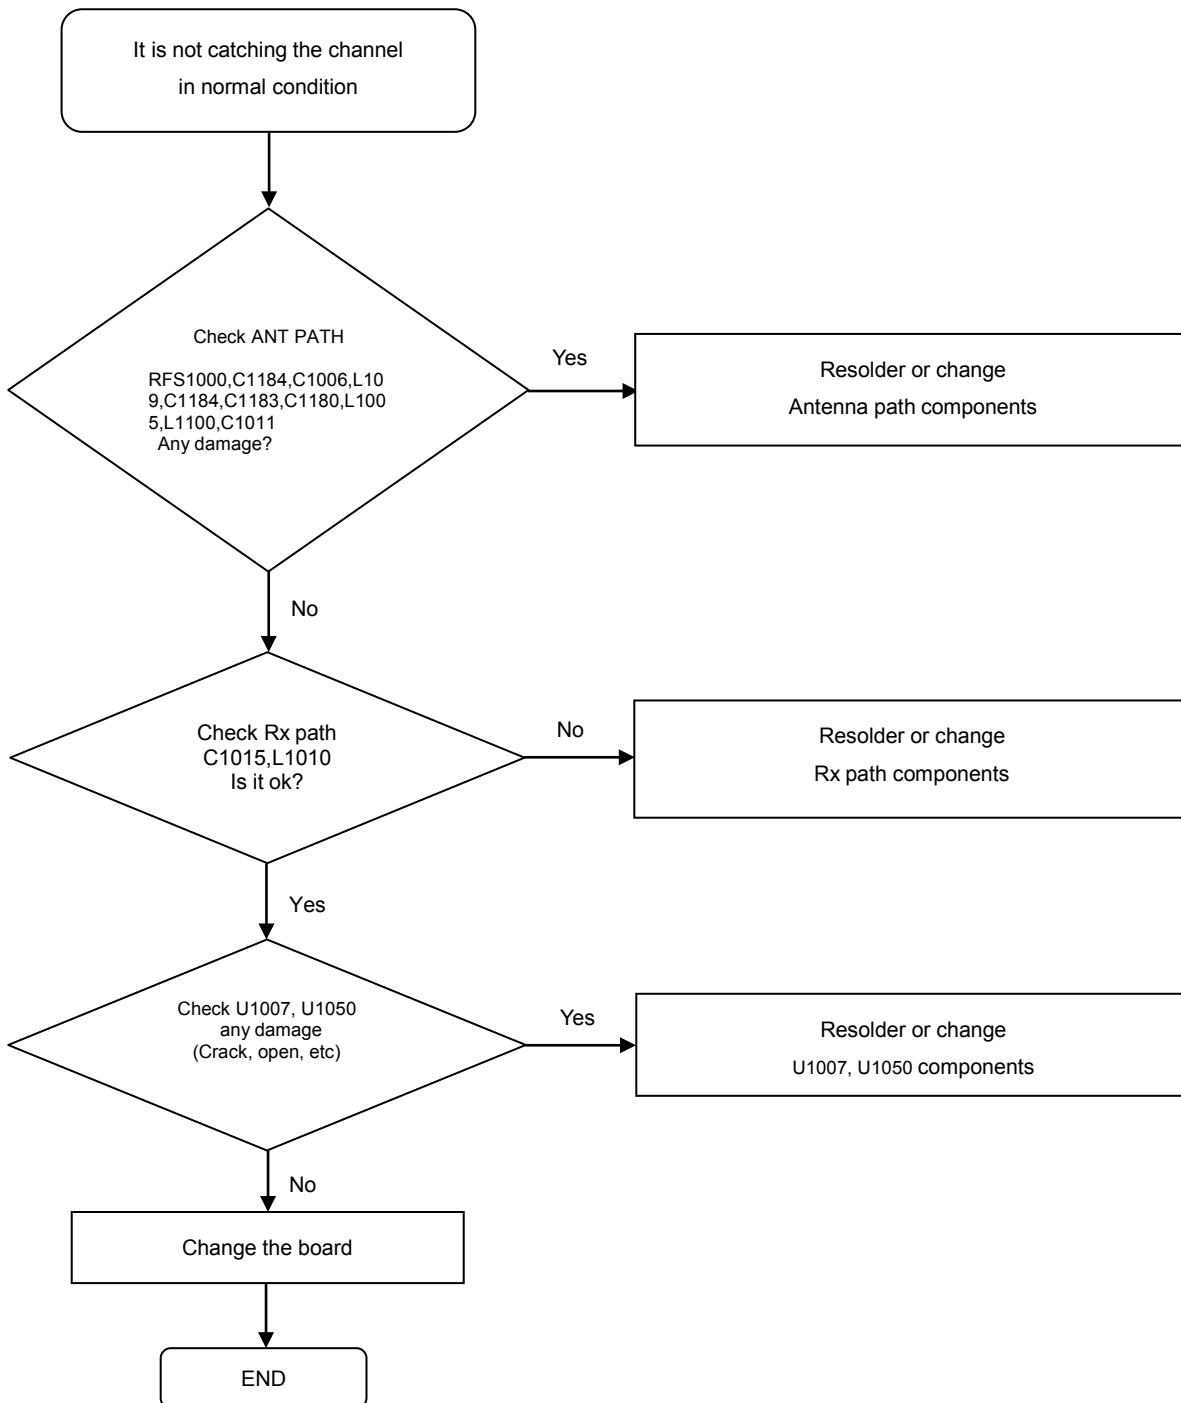


8. Level 3 Repair

8-4-18. TDS B34/ B39 LTE B34/B39 RX

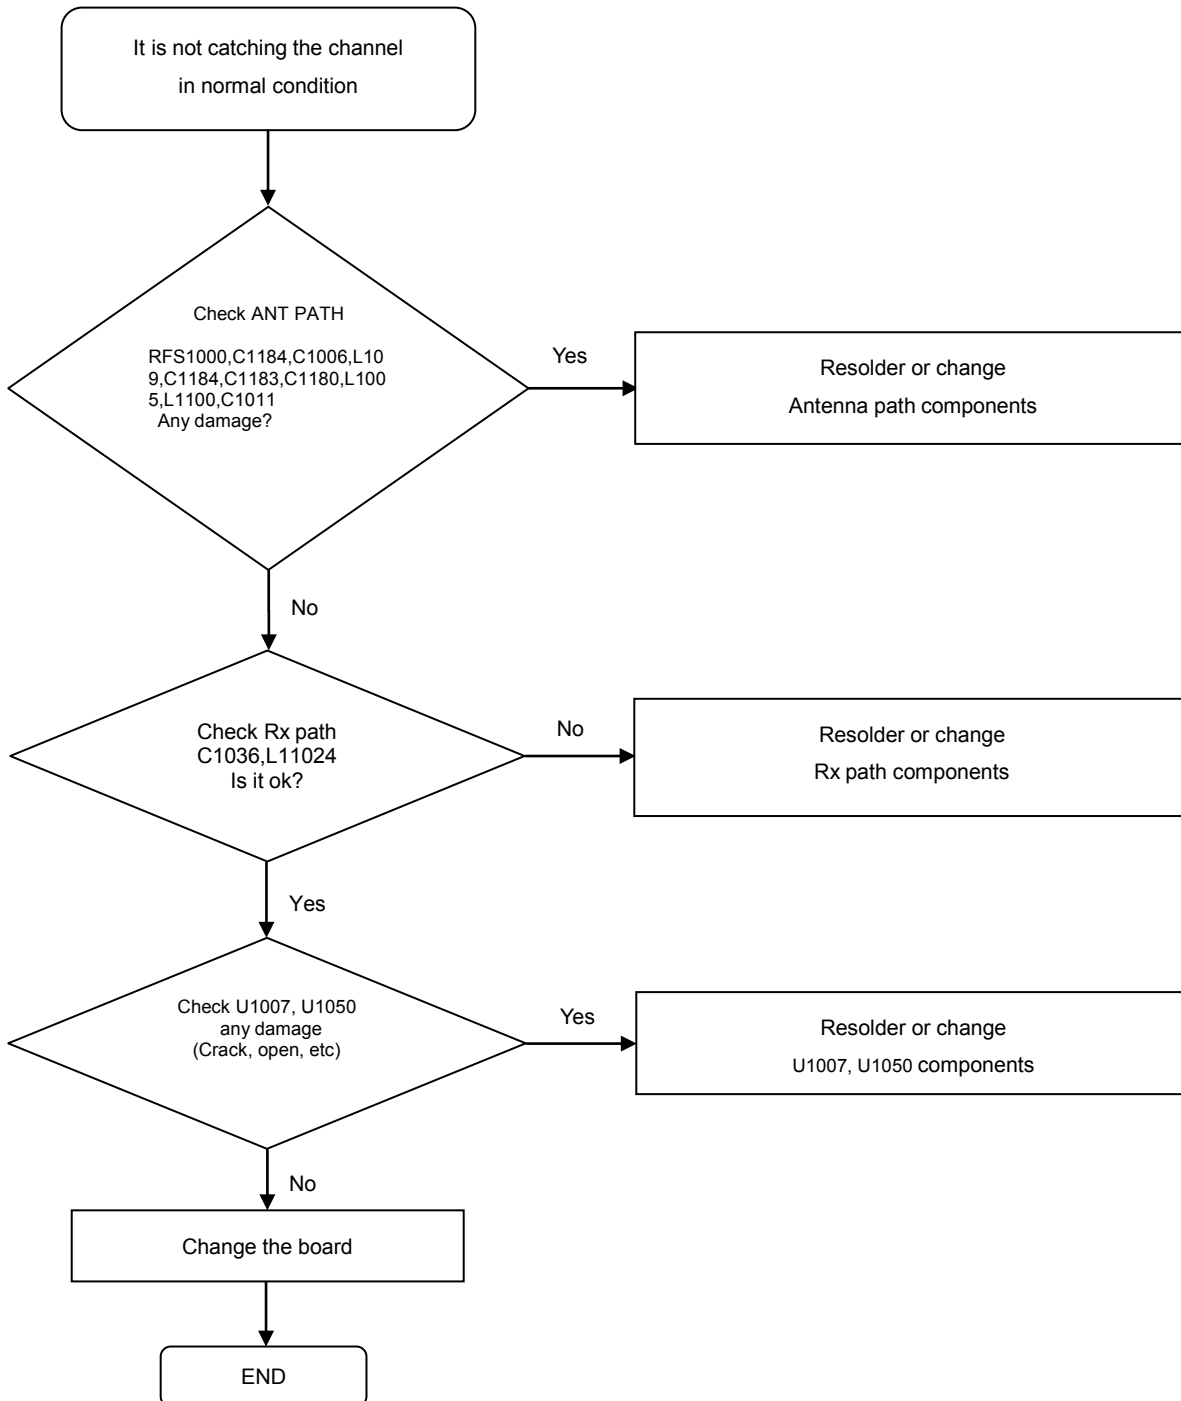


8. Level 3 Repair

8-4-19. WCDMA 2100 / LTE B1 RX

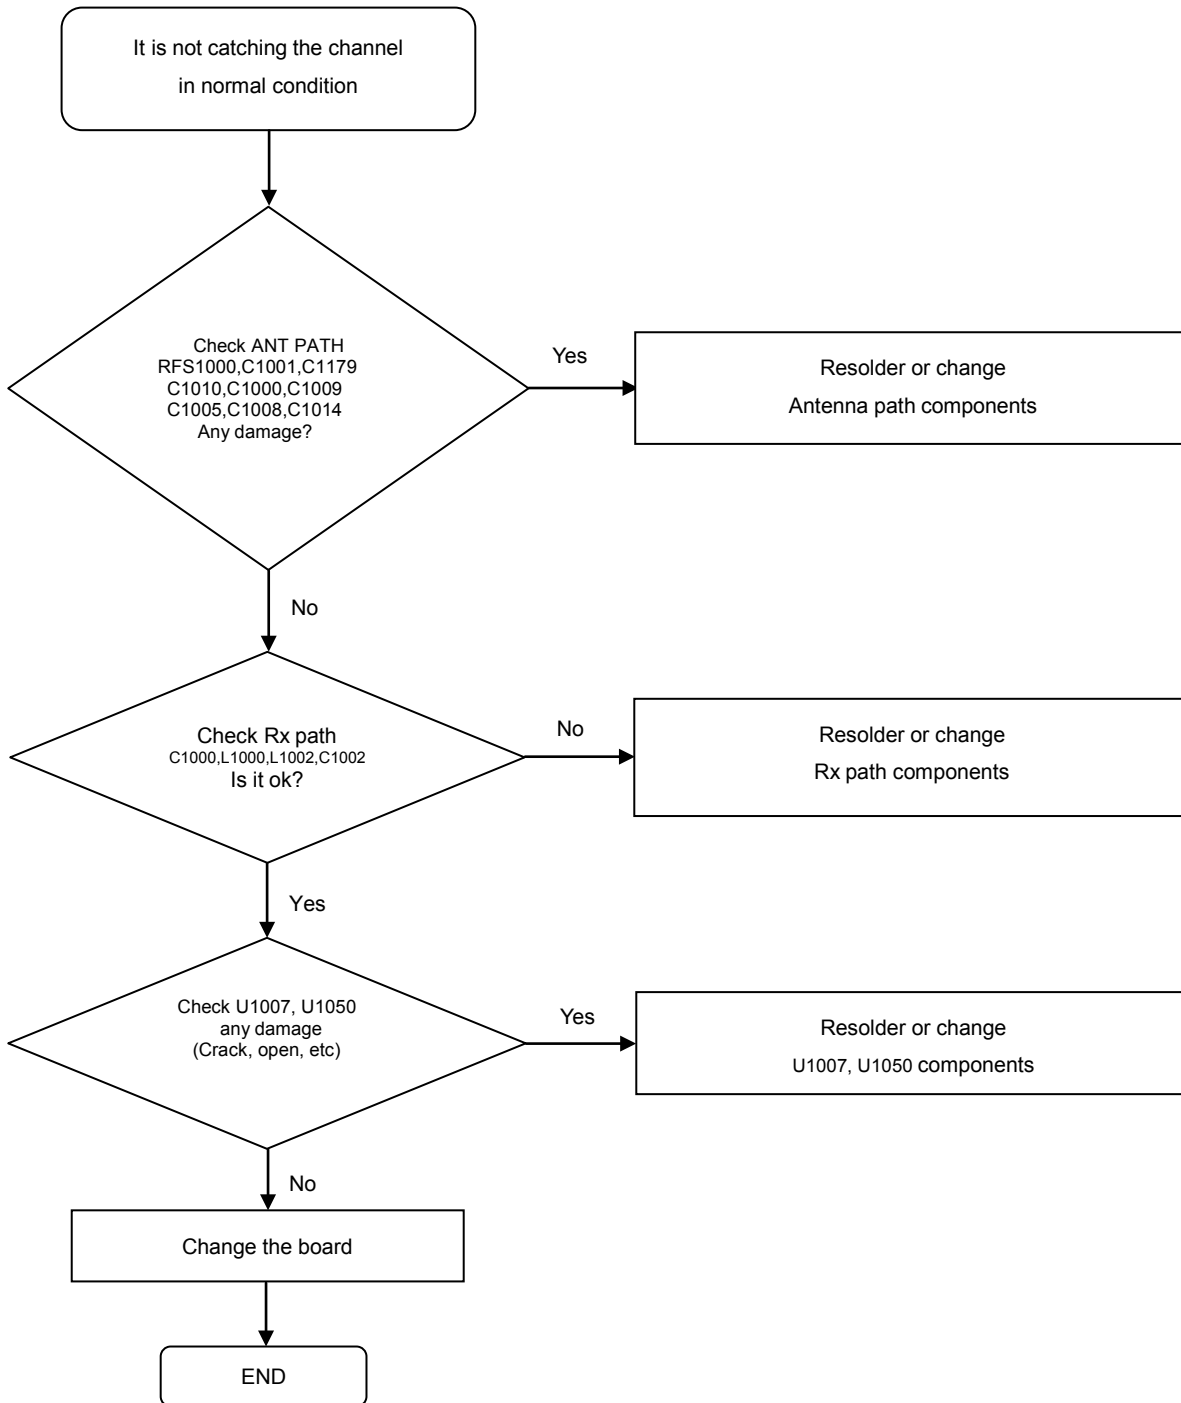


8. Level 3 Repair

8-4-20. LTE B7 RX

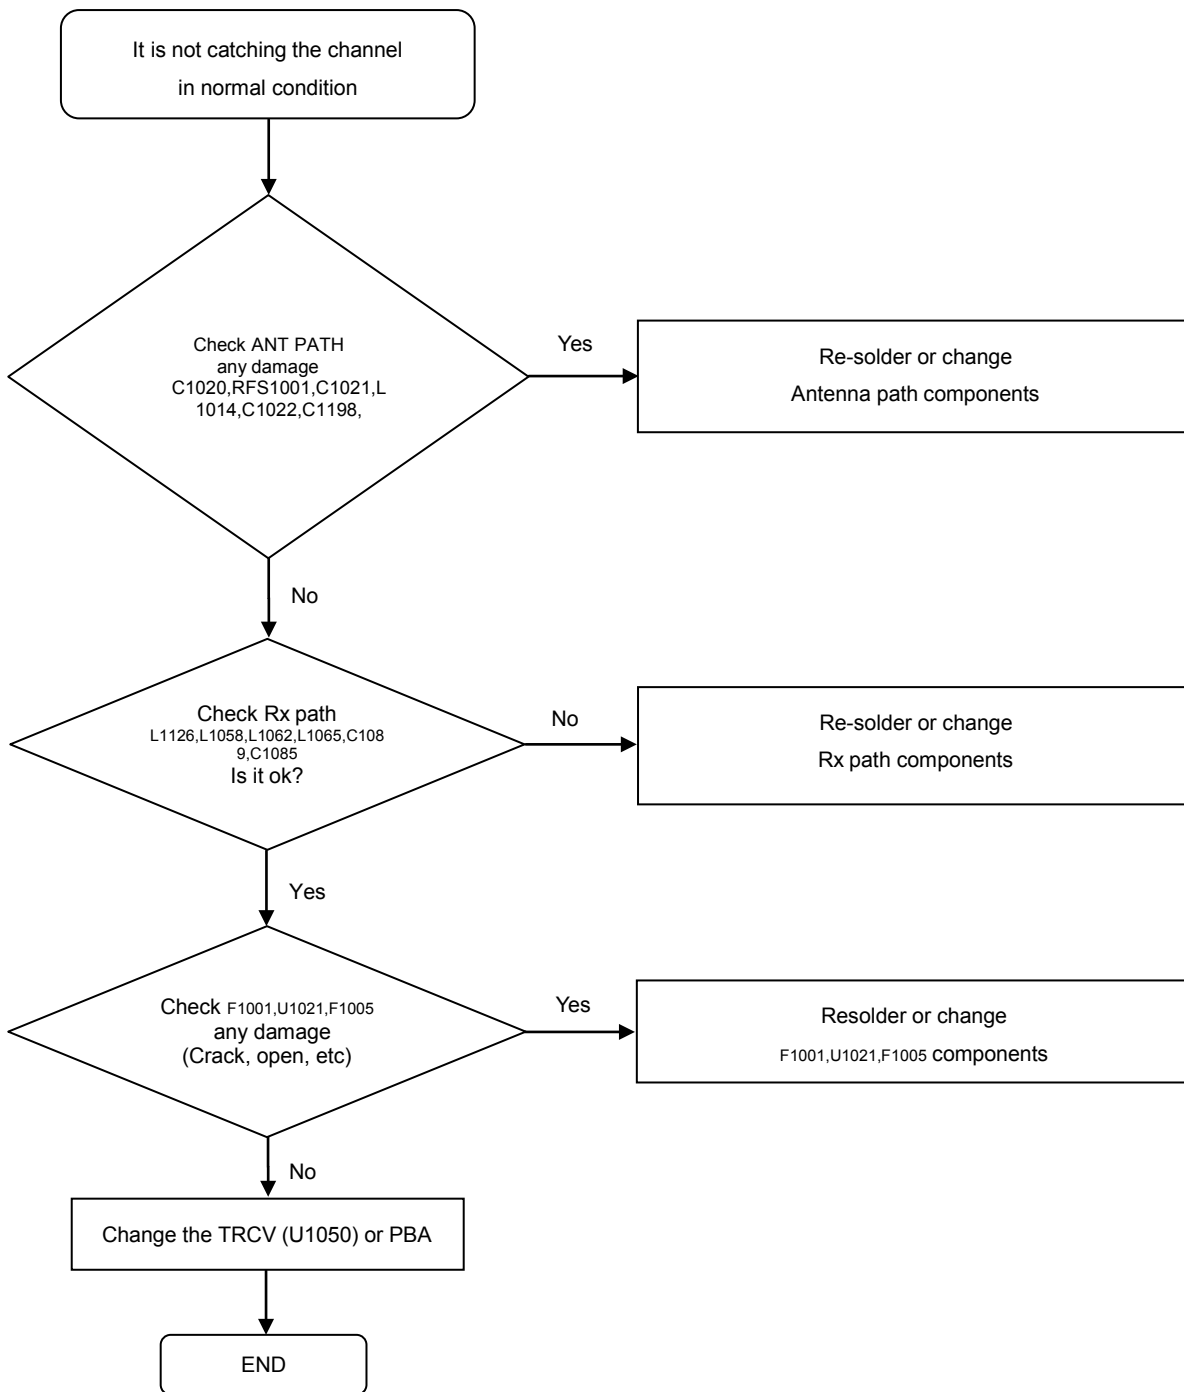


8. Level 3 Repair

8-4-21. LTE B38 /B41 RX

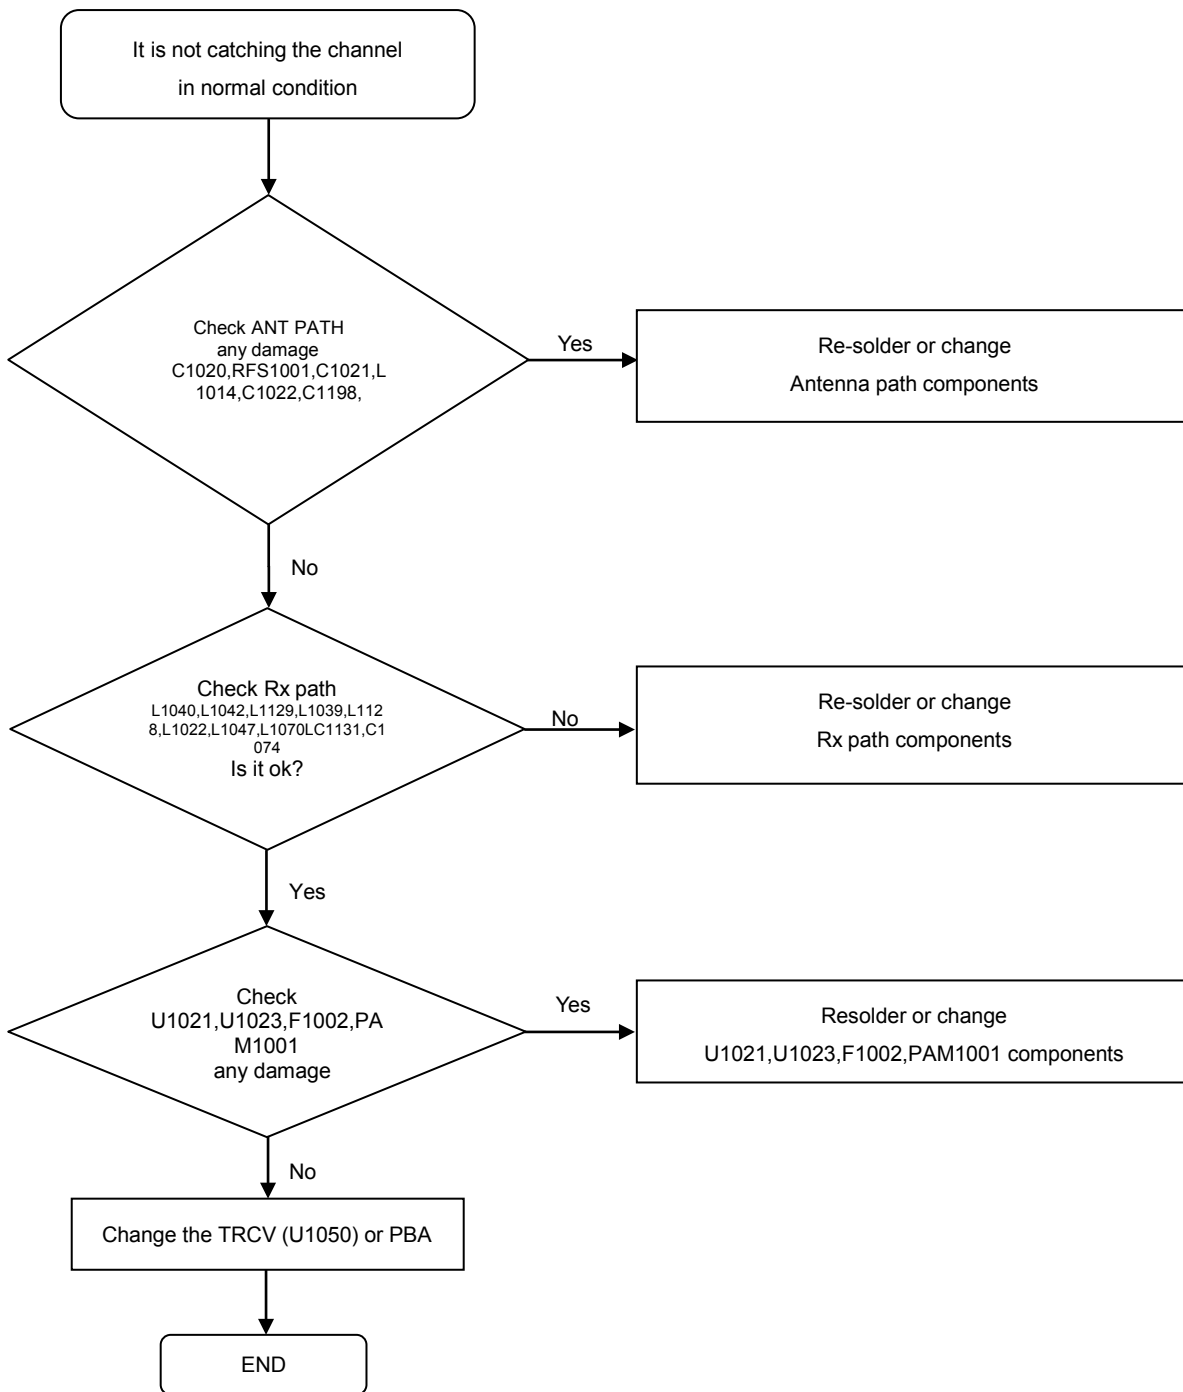


8. Level 3 Repair

8-4-22. LTE B40 RX

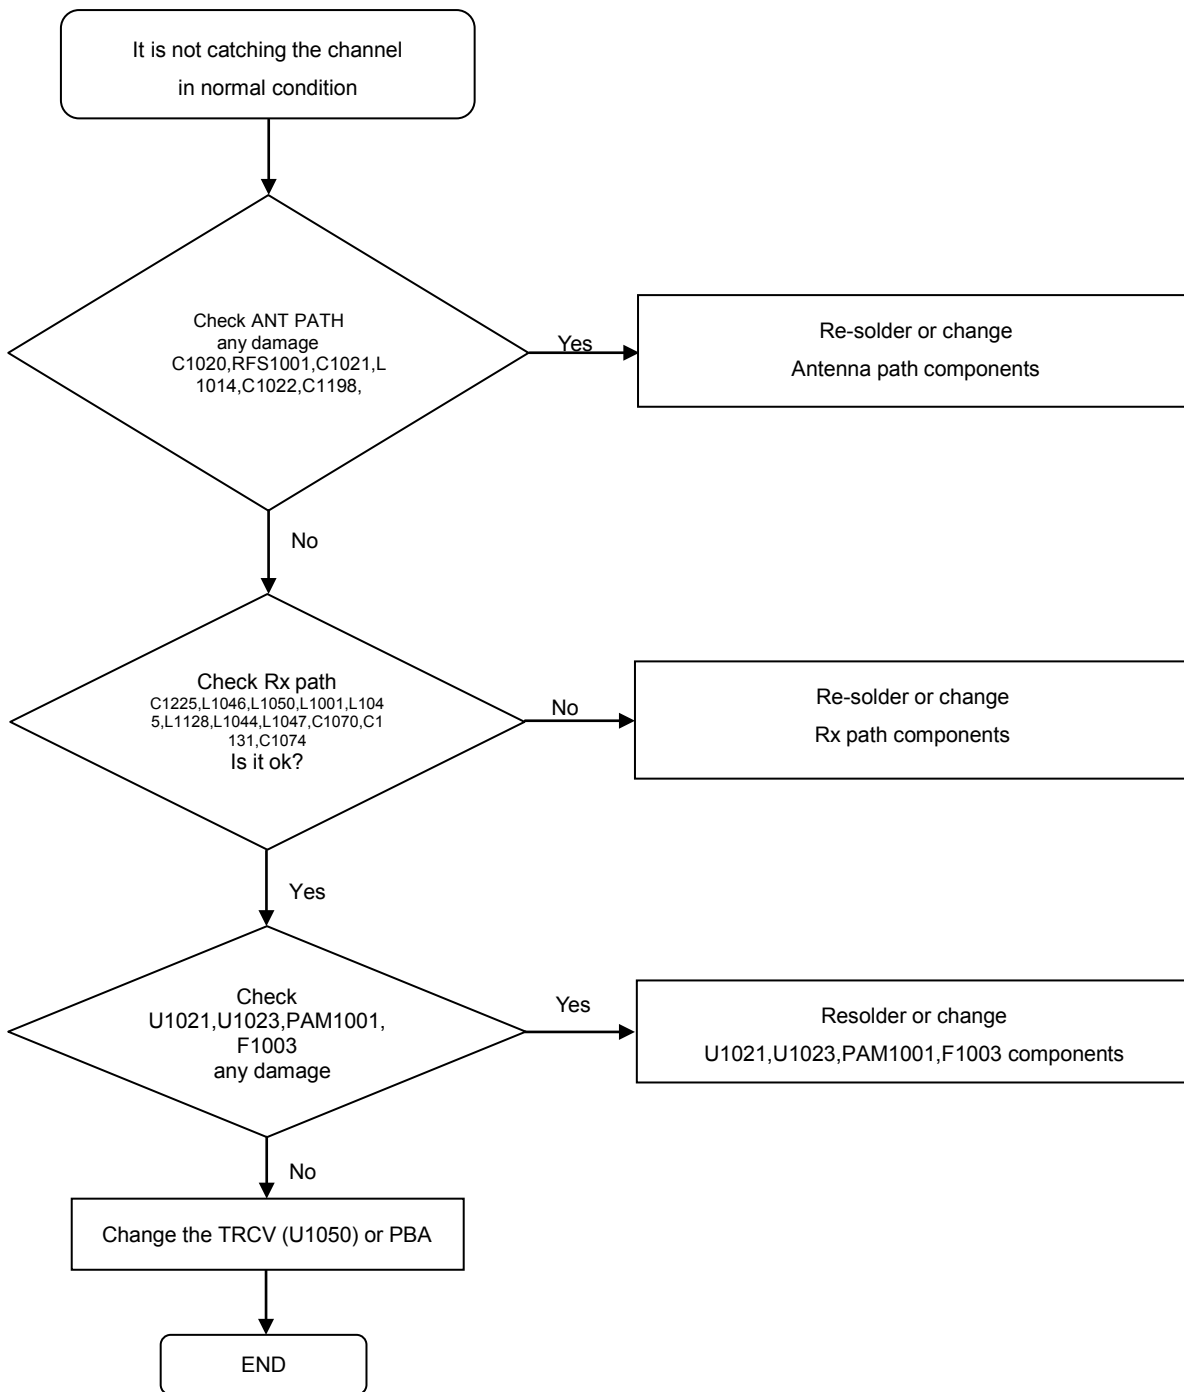


8. Level 3 Repair

8-4-23. GSM 850 / GSM 900 TX

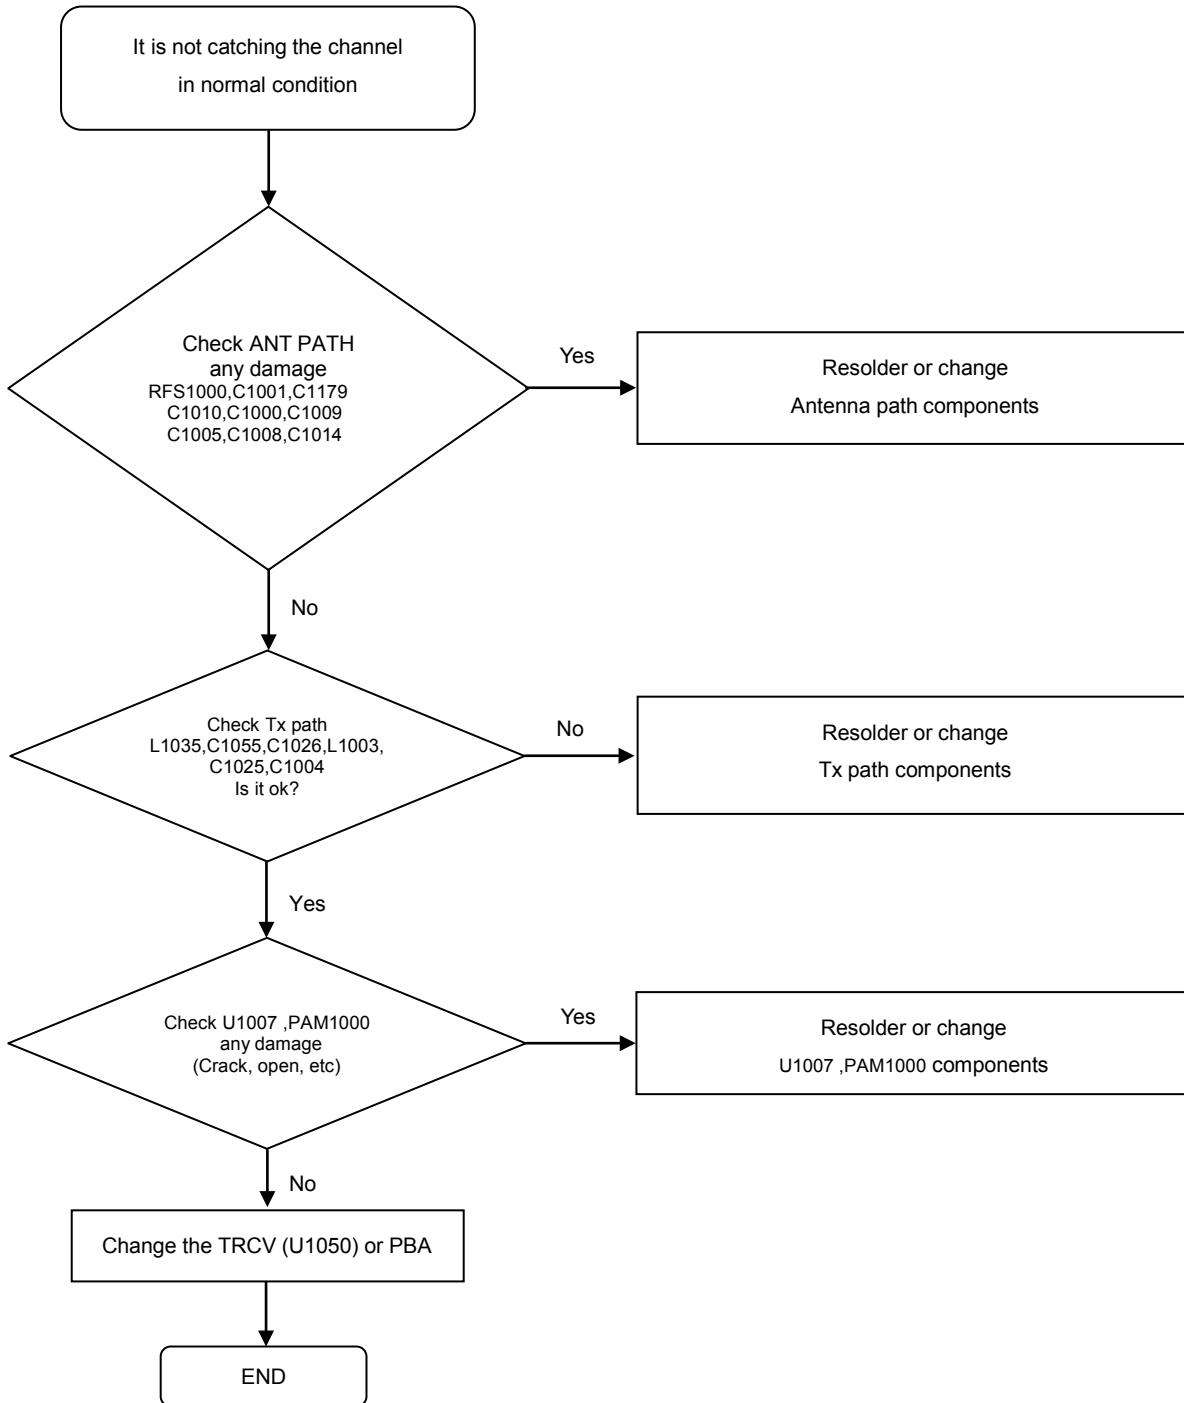


8. Level 3 Repair

8-4-24. GSM 1800 / GSM 1900 TX

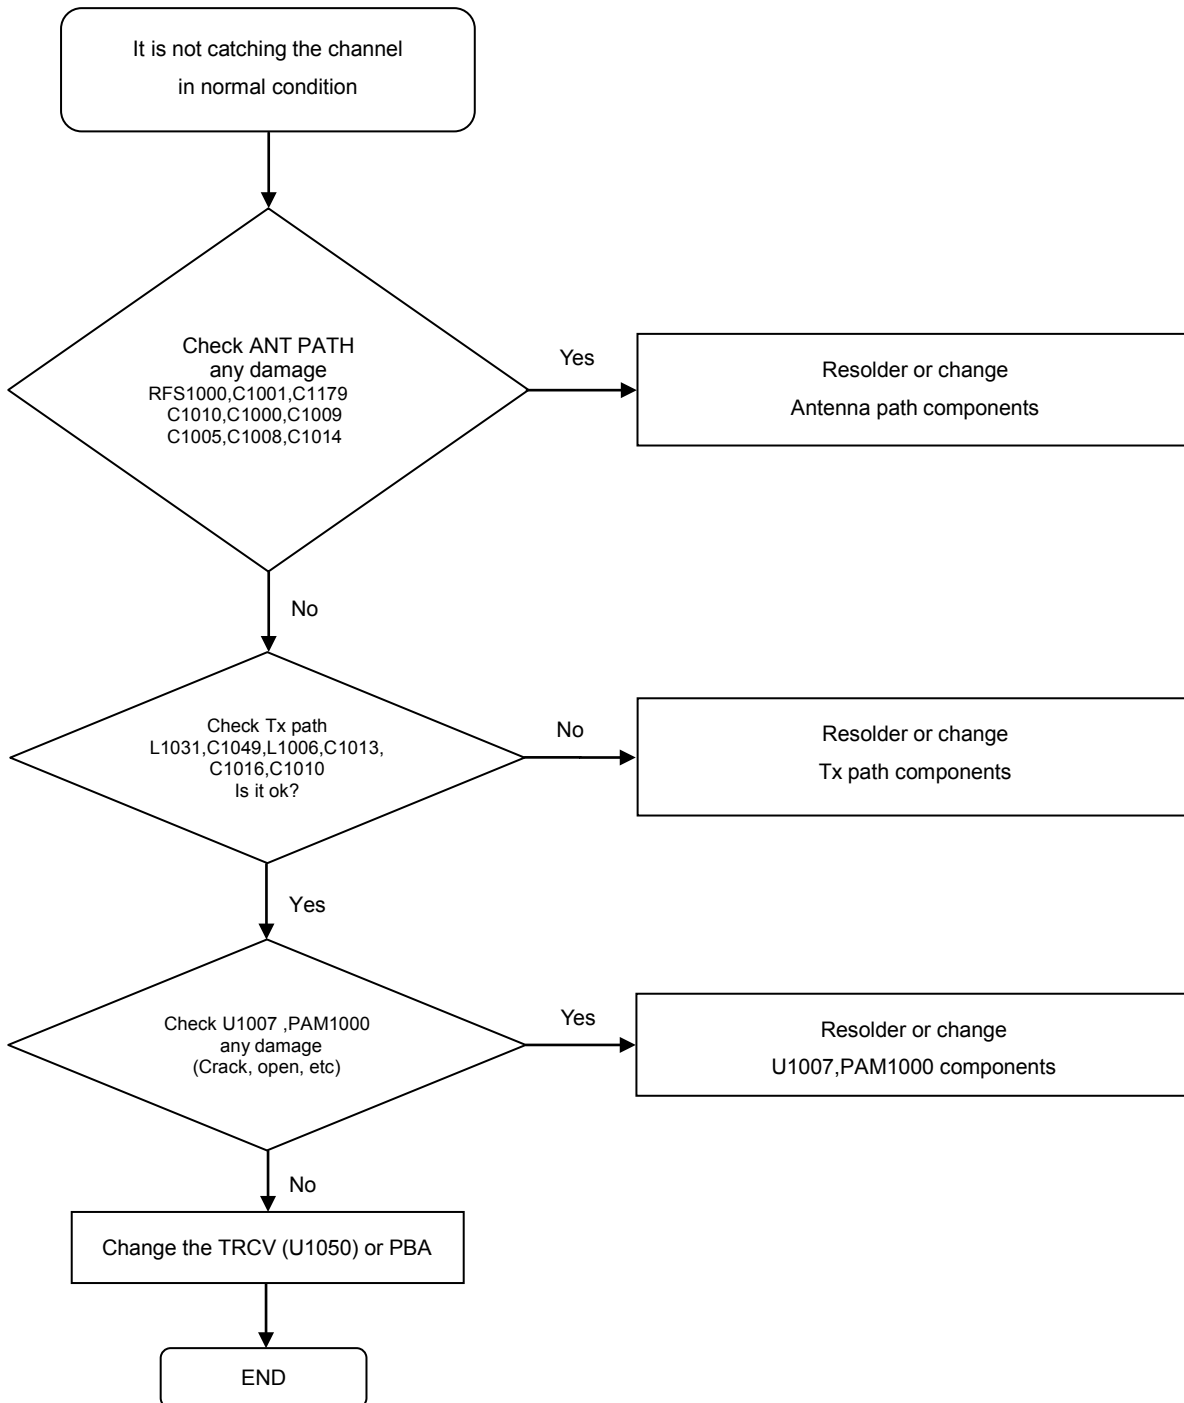


8. Level 3 Repair

8-4-25. WCDMA 2100 / LTE B1 TX

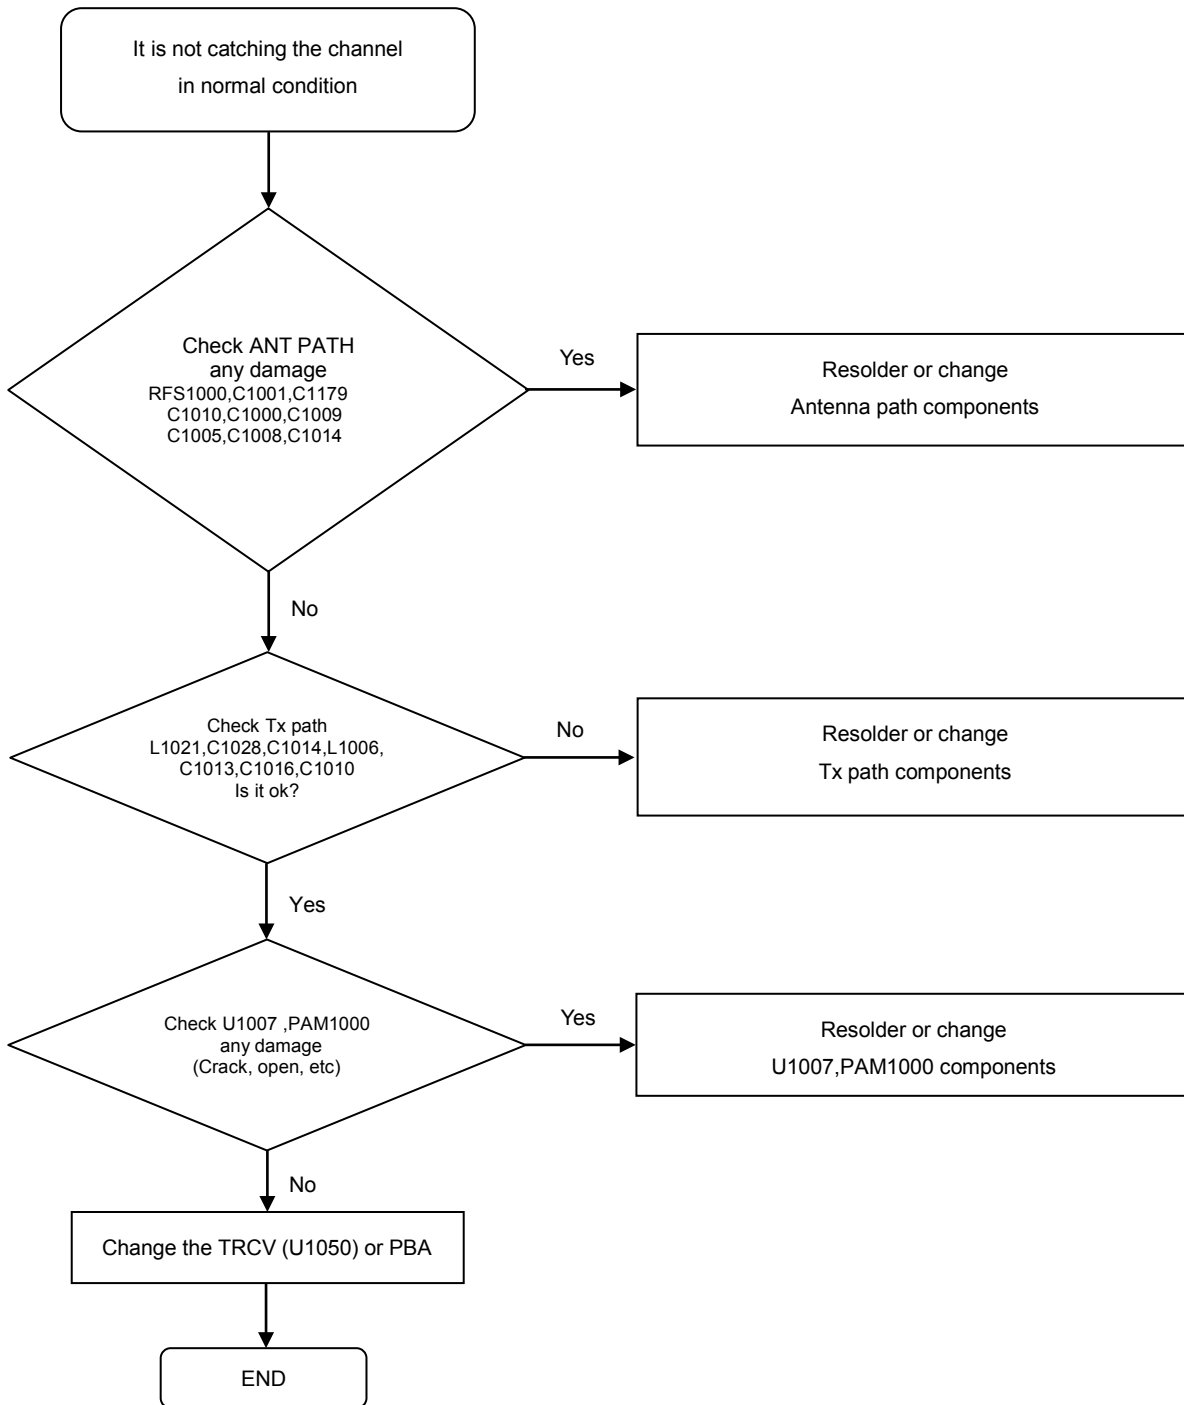


8. Level 3 Repair

8-4-26. WCDMA 1900 / LTE B2 TX

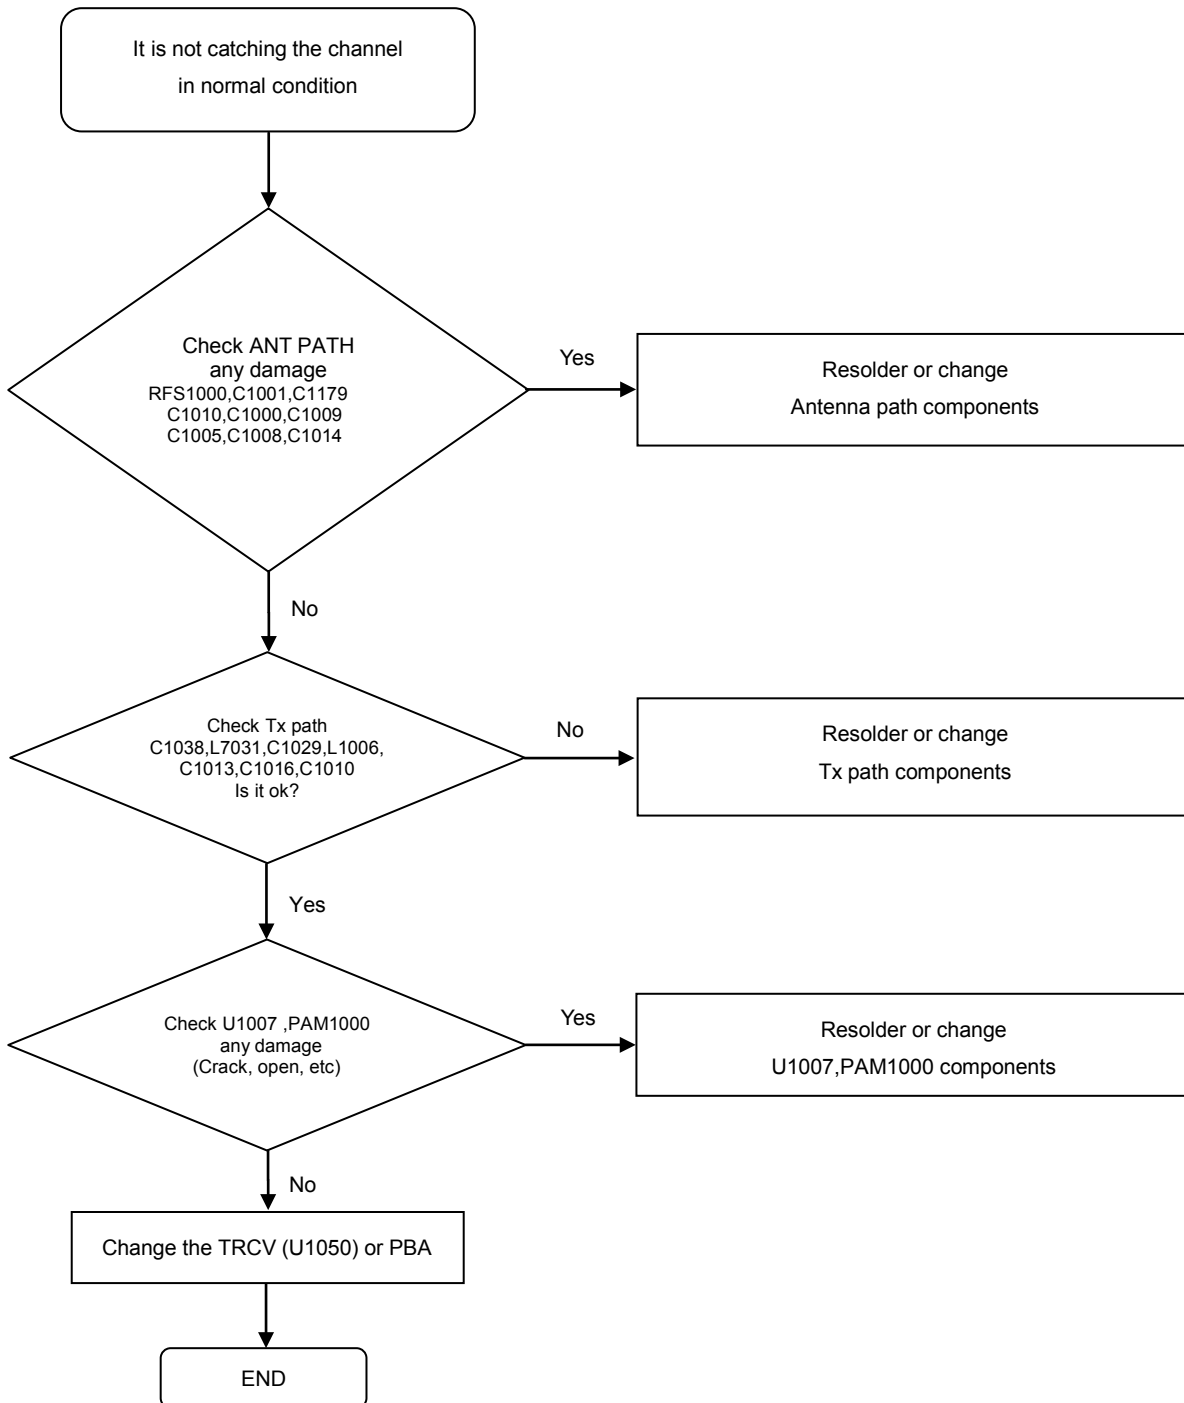


8. Level 3 Repair

8-4-27. LTE B3 TX

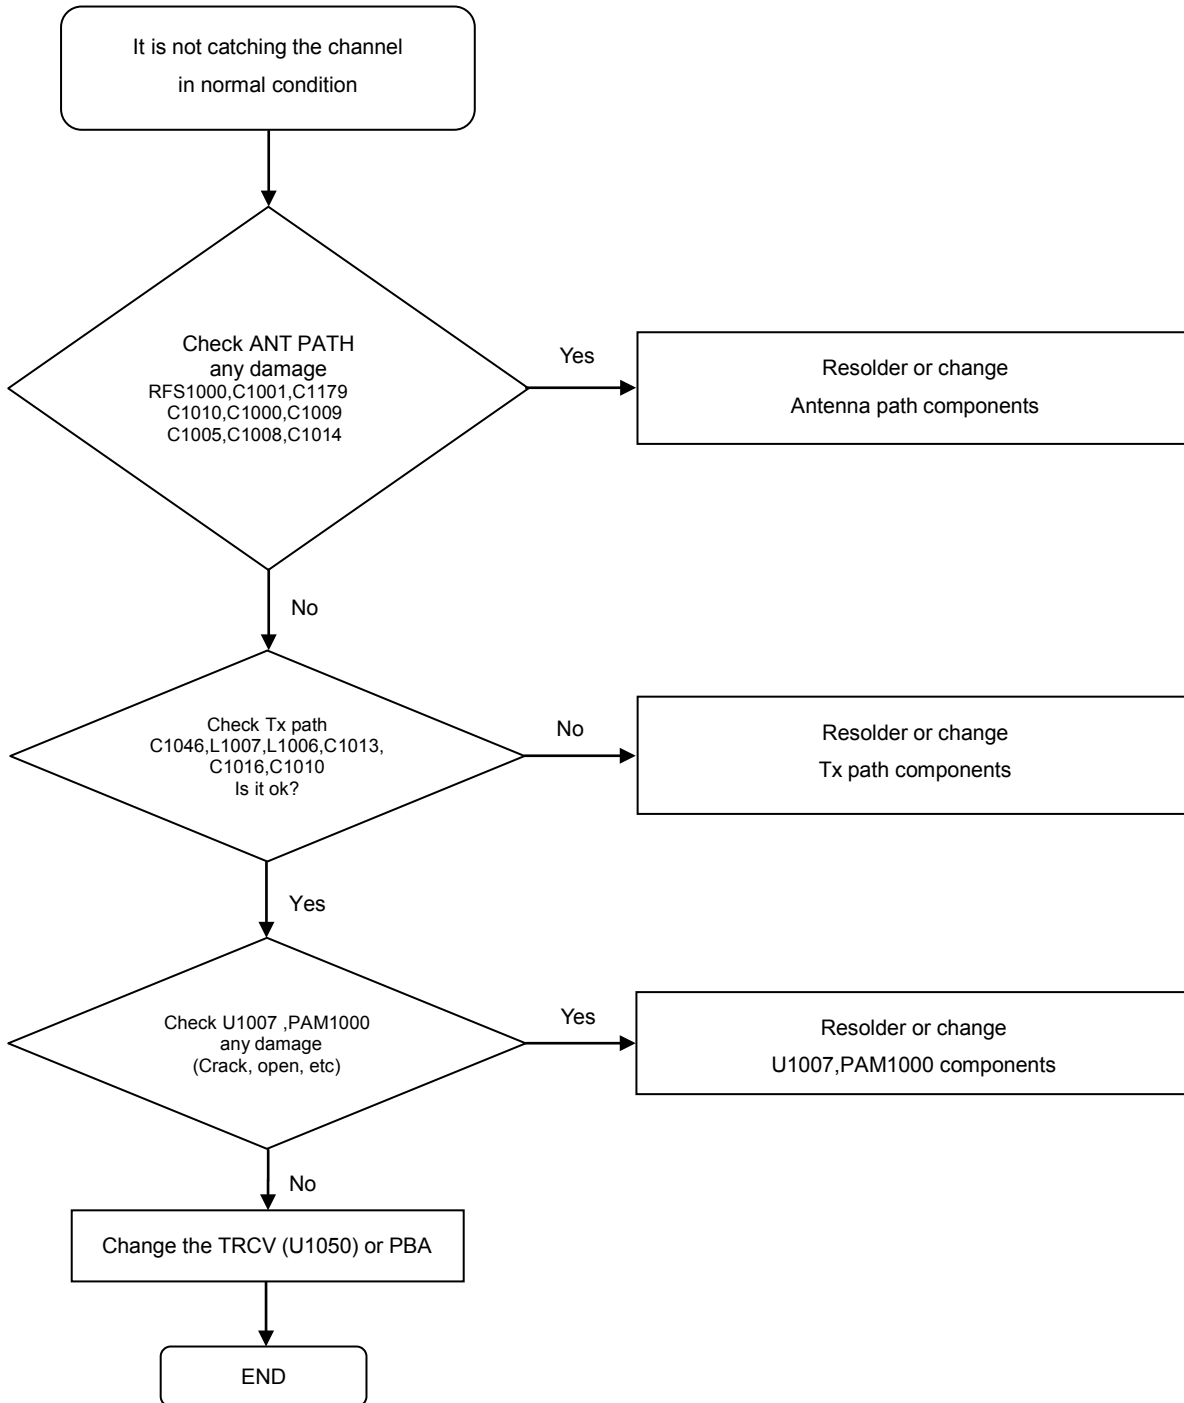


8. Level 3 Repair

8-4-28. TDS B34/B39 LTE B34/B39 TX

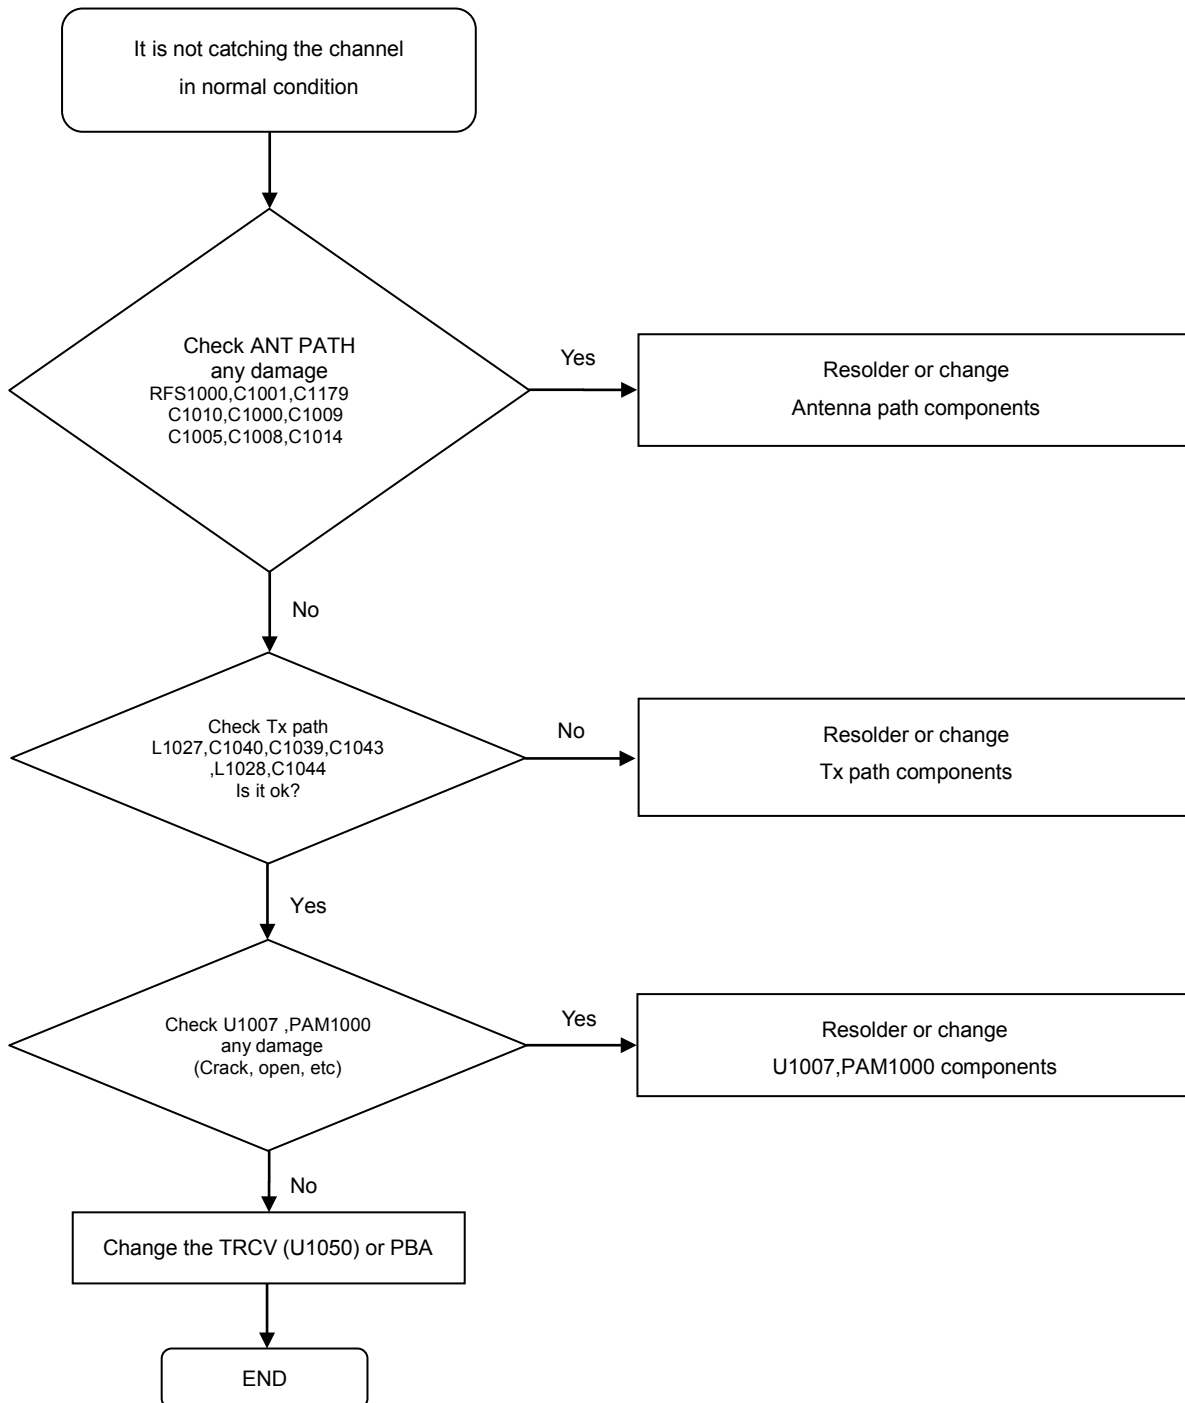


8. Level 3 Repair

8-4-29. WCDMA 850 / CDMA BC0/ LTE B5 TX

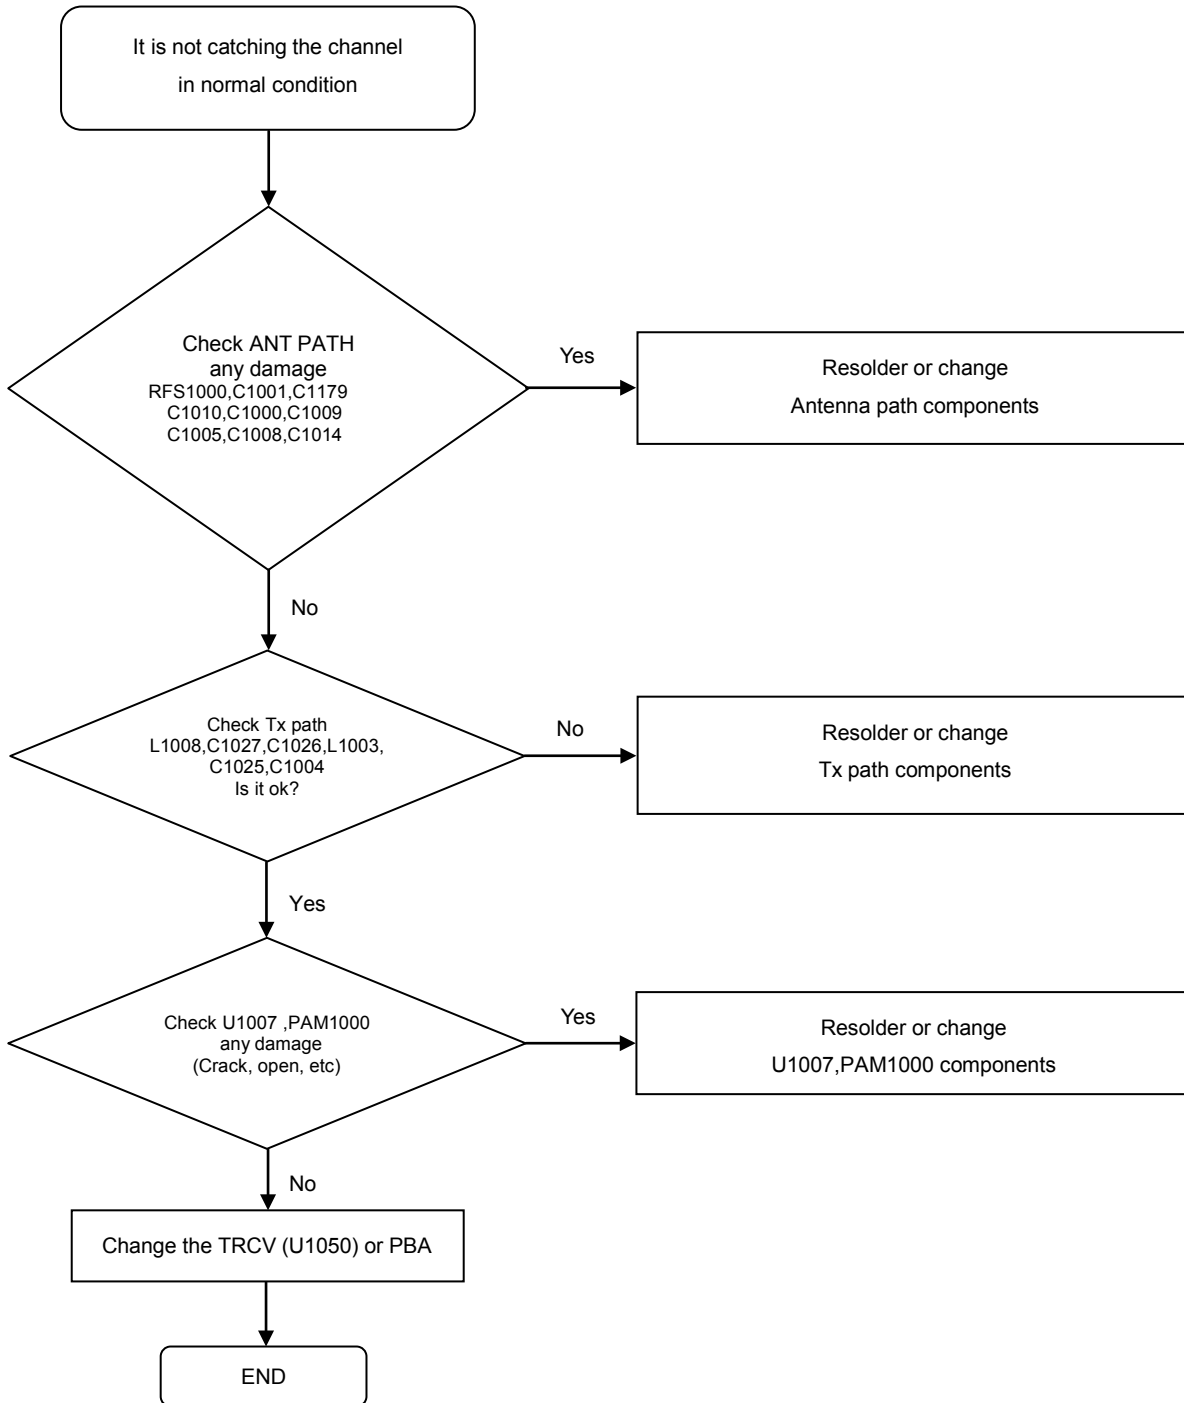


8. Level 3 Repair

8-4-30. WCDMA900 / LTE B8 TX

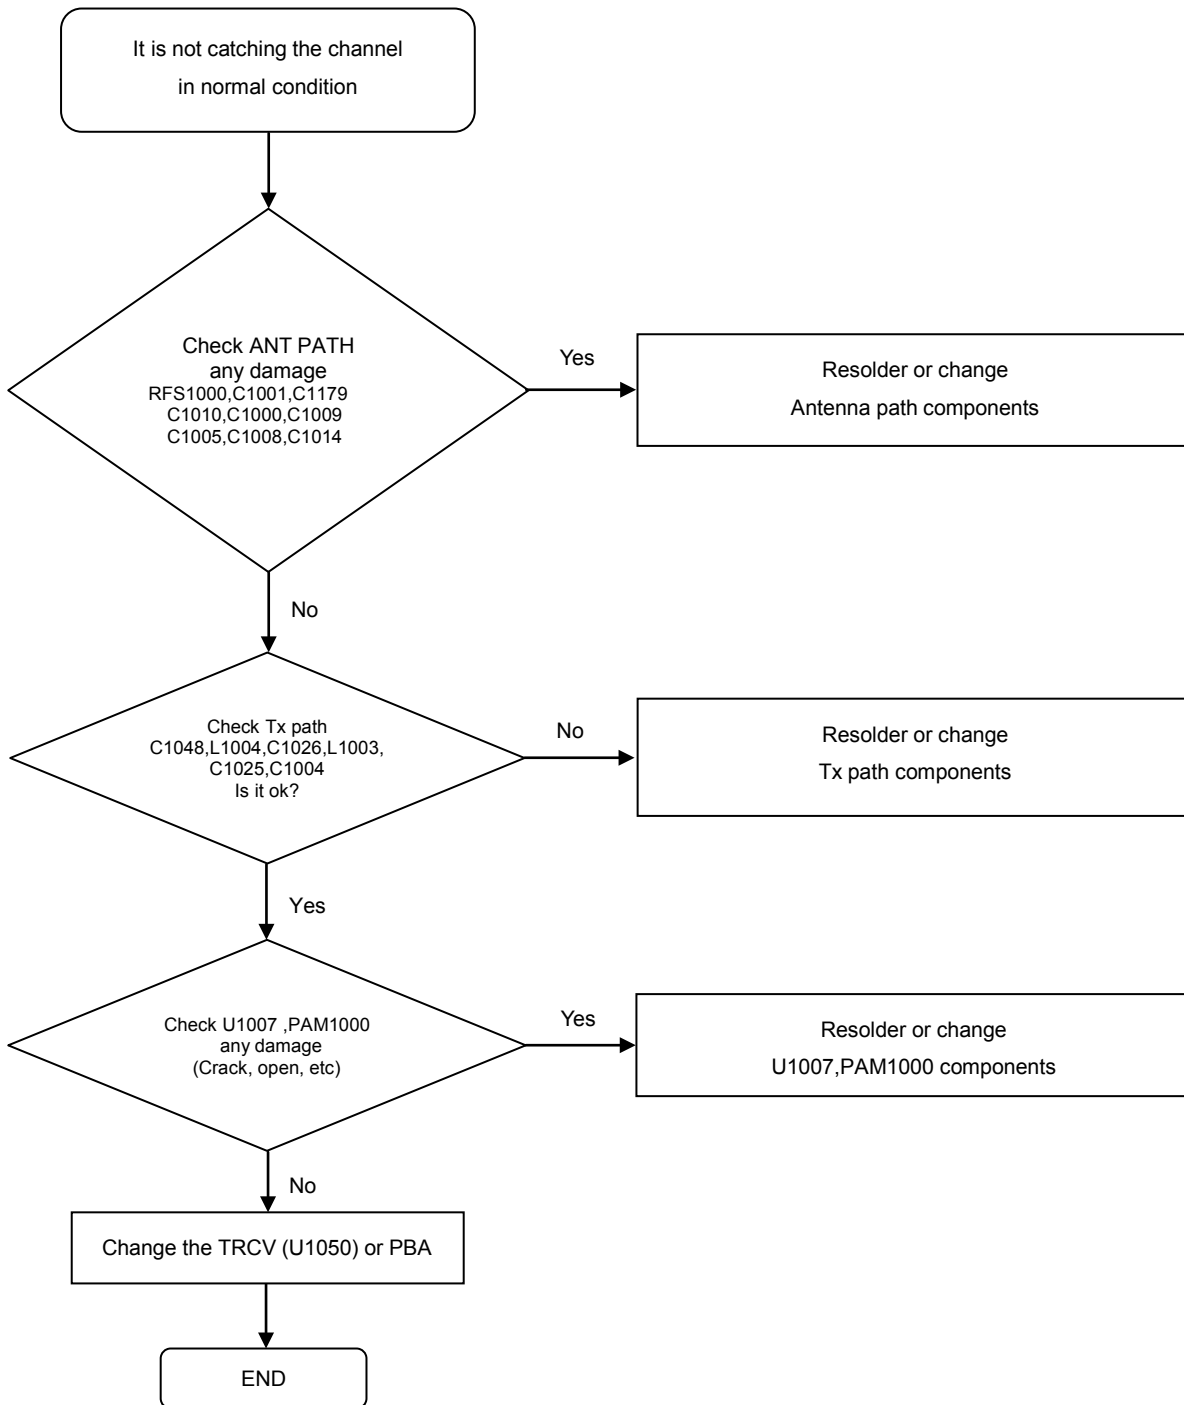


8. Level 3 Repair

8-4-31. LTE B7 TX

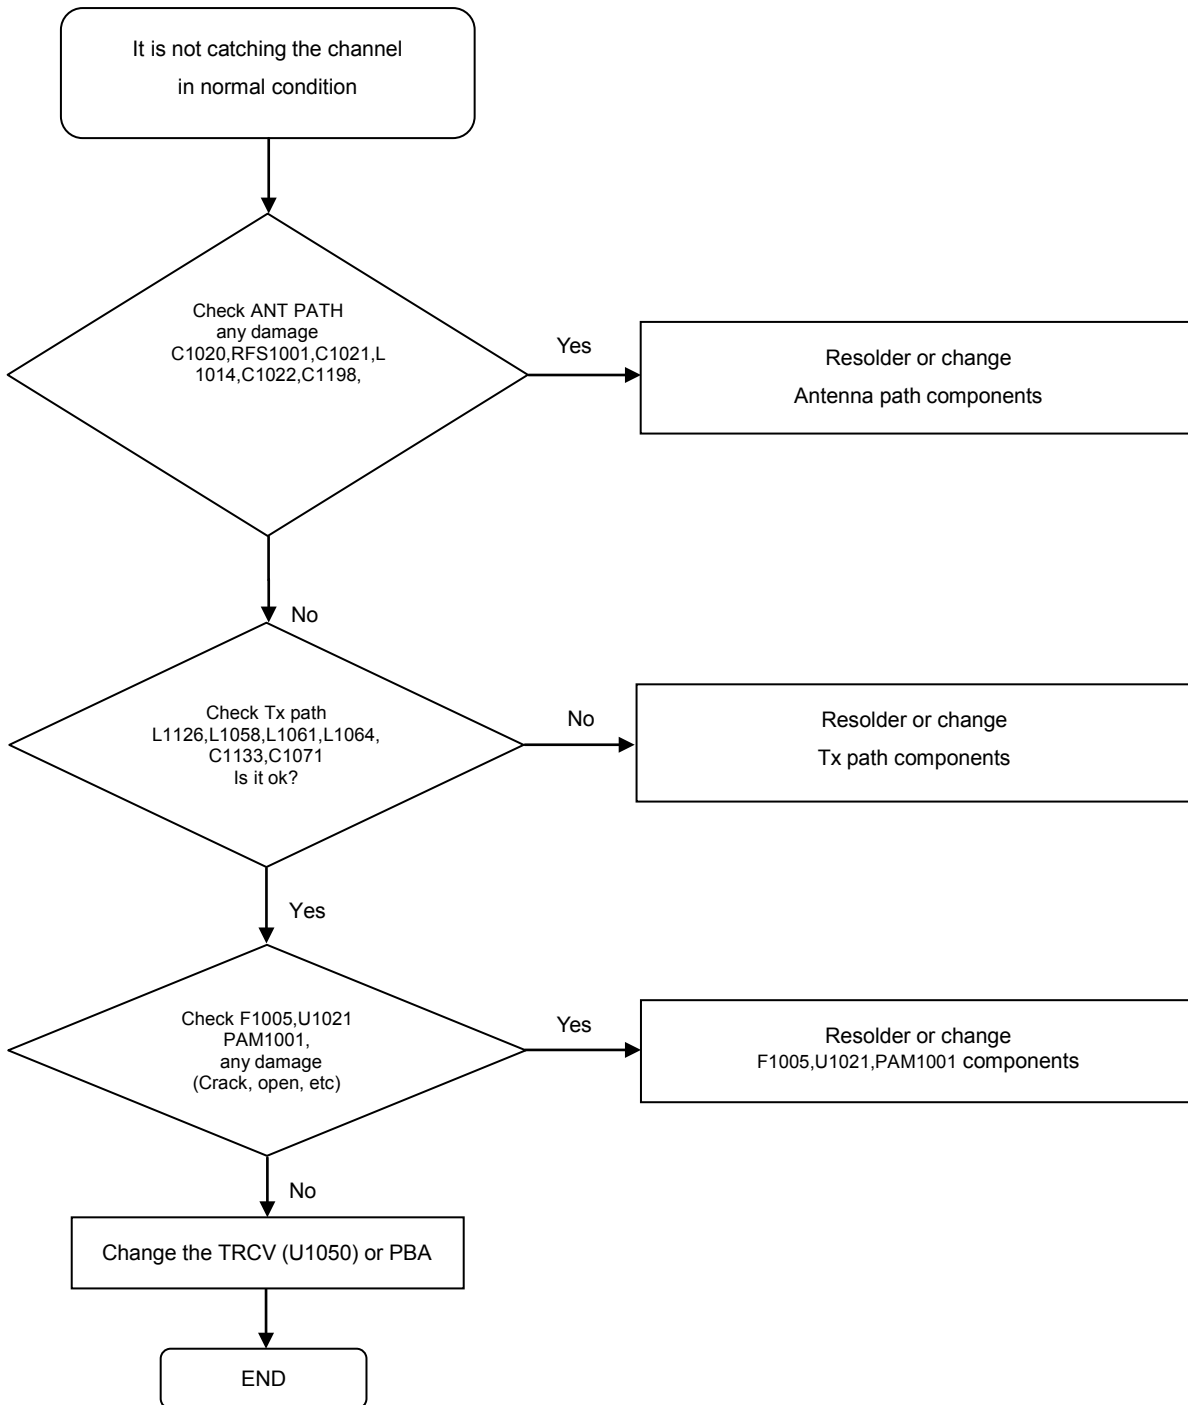


8. Level 3 Repair

8-4-32. LTE B38/B41 TX

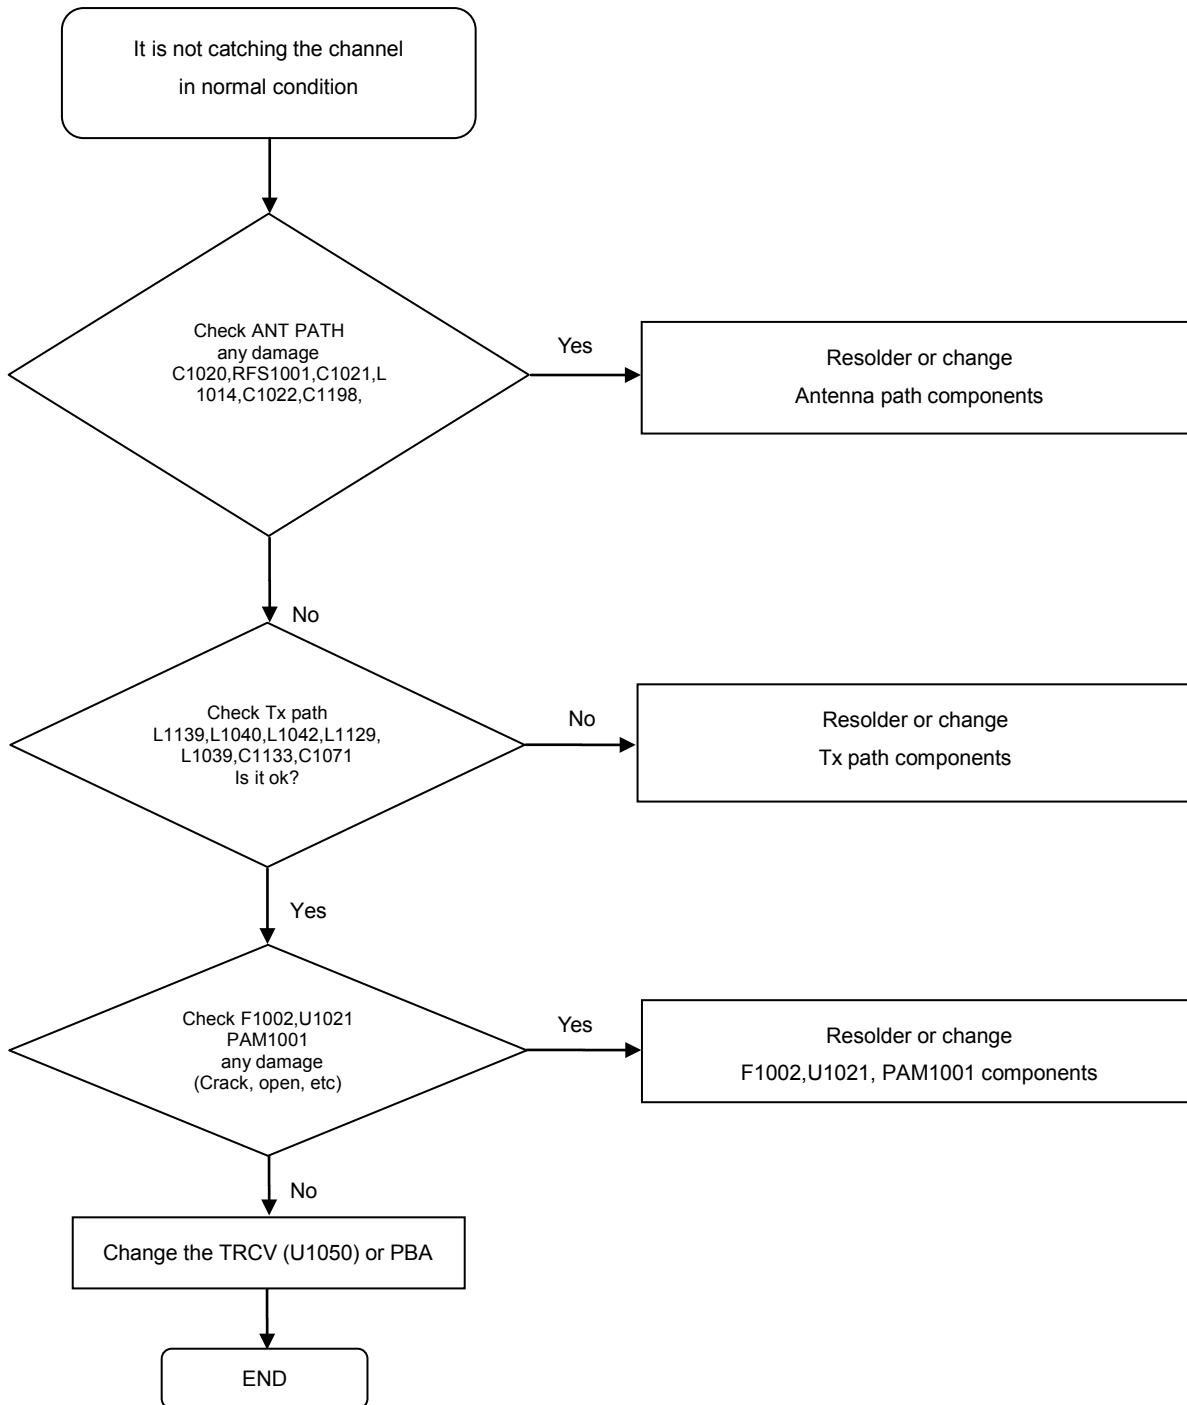


8. Level 3 Repair

8-4-33. LTE B40 TX

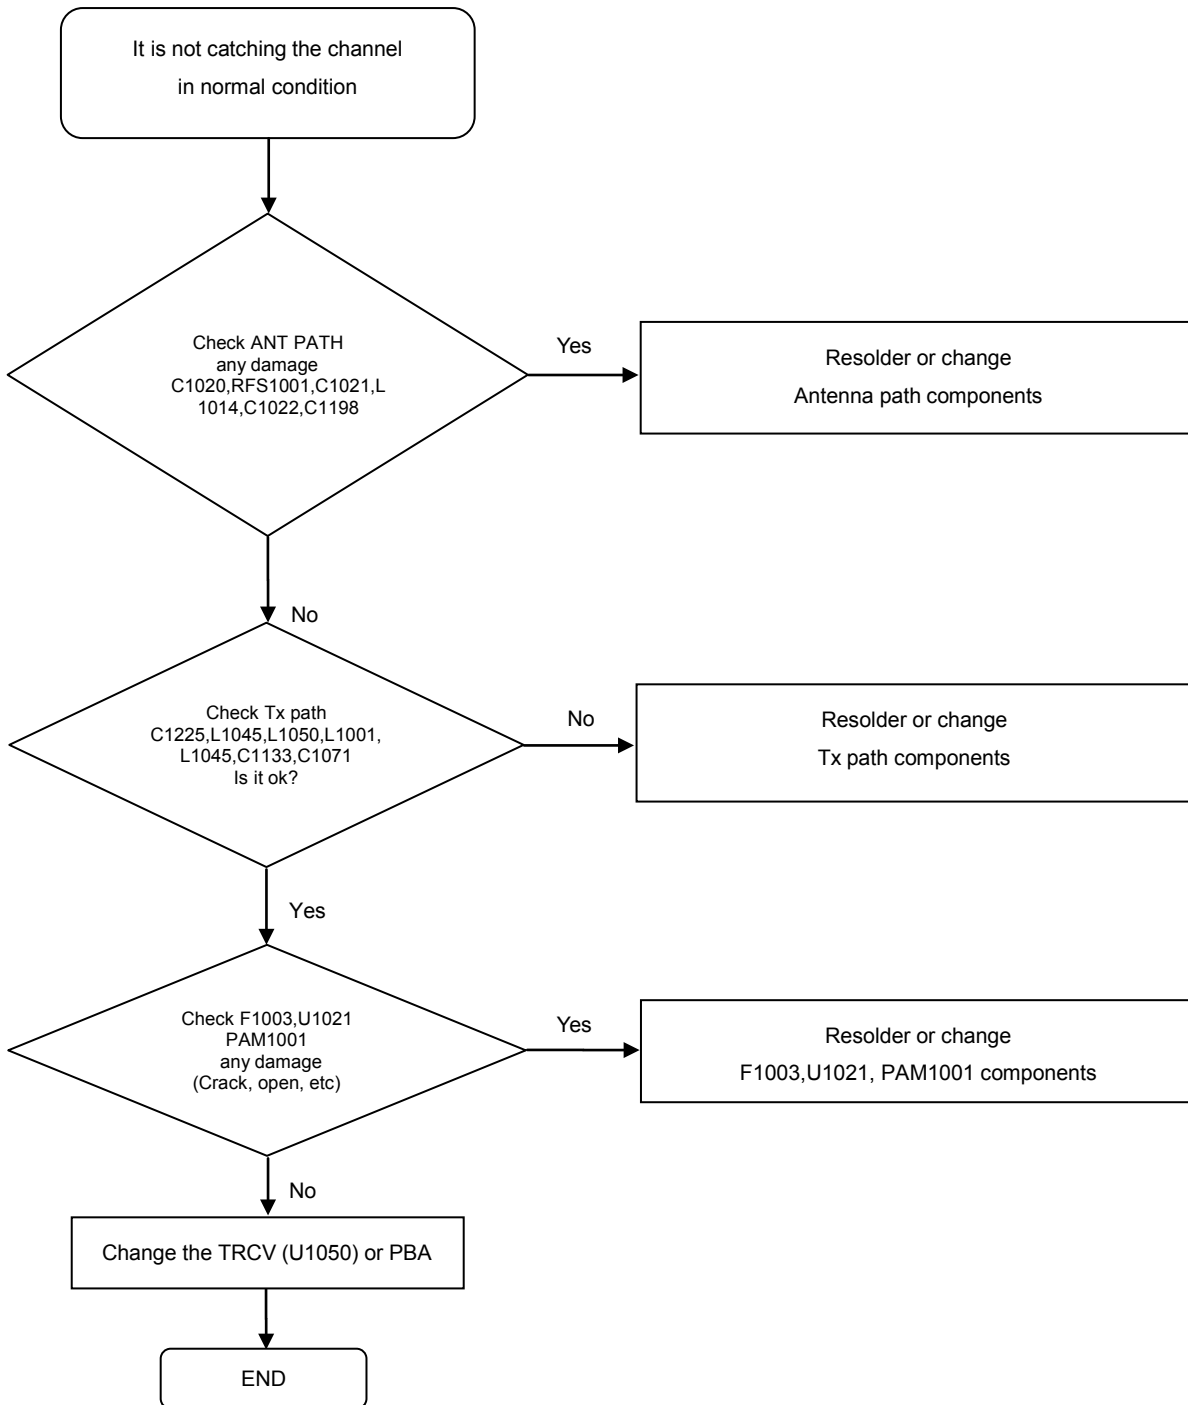


8. Level 3 Repair

8-4-34. BT/WLAN

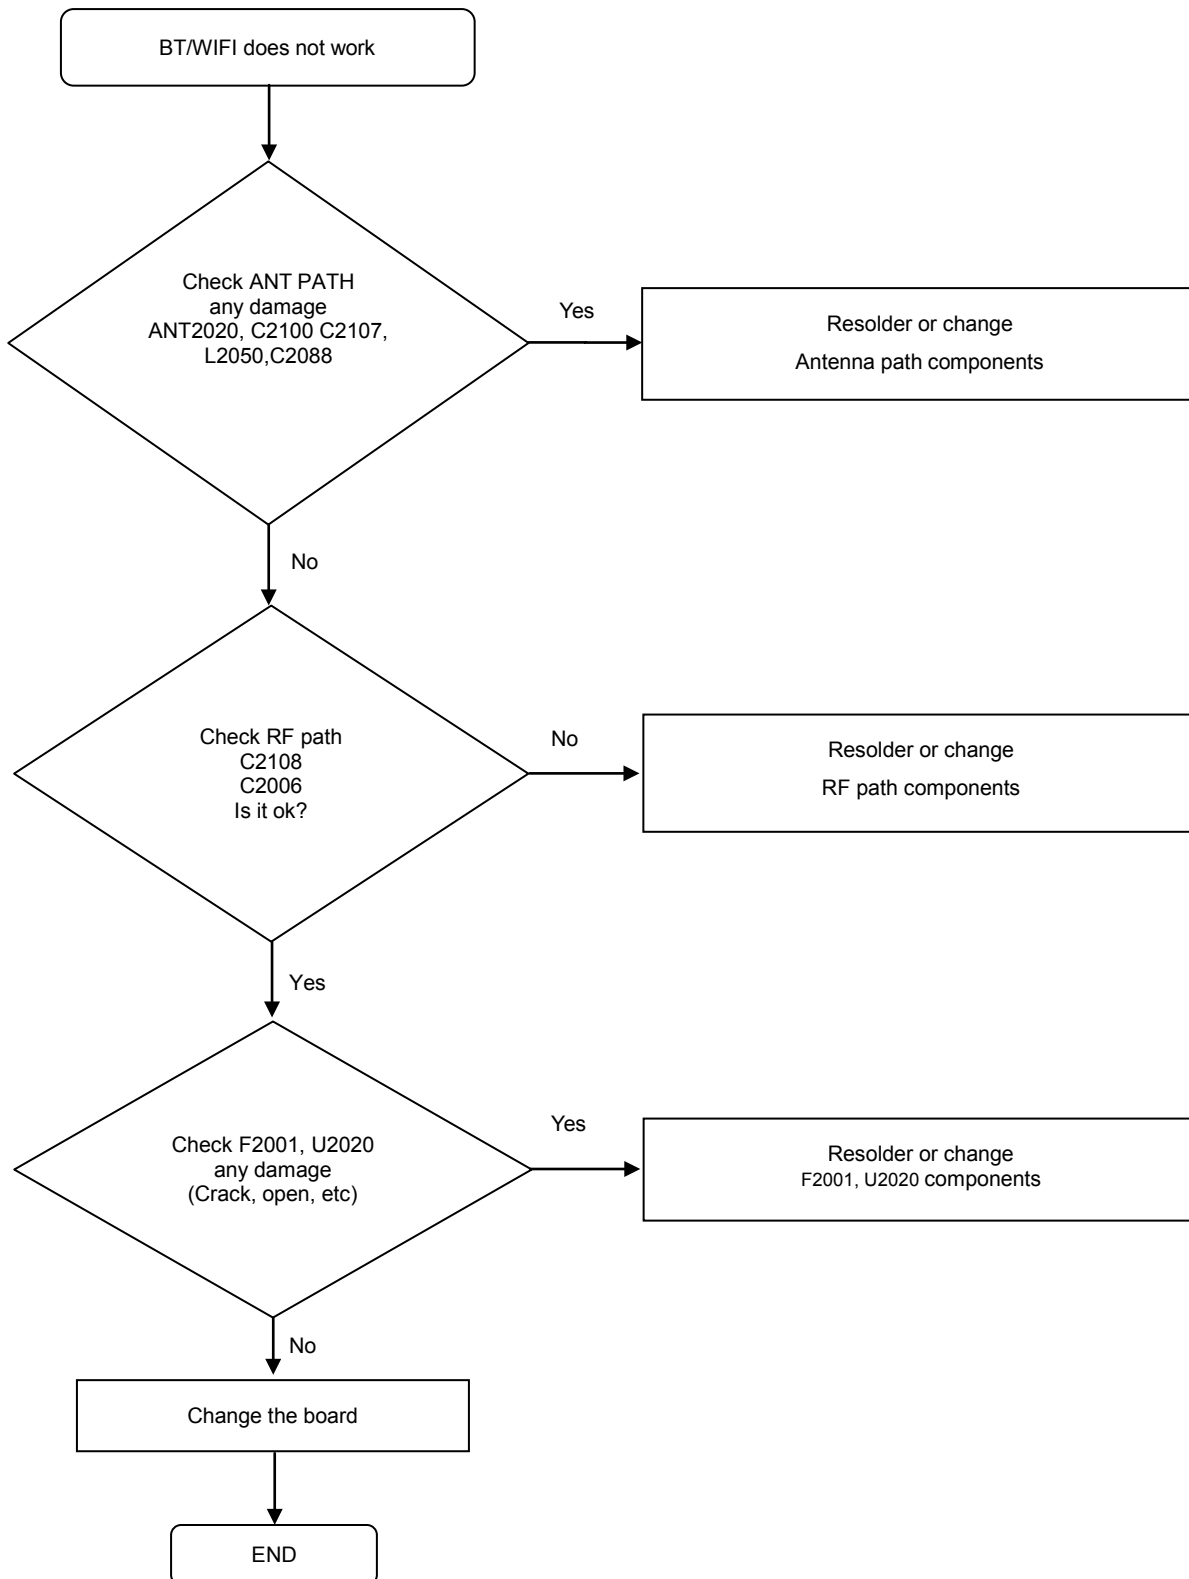


8. Level 3 Repair

8-4-35. GPS

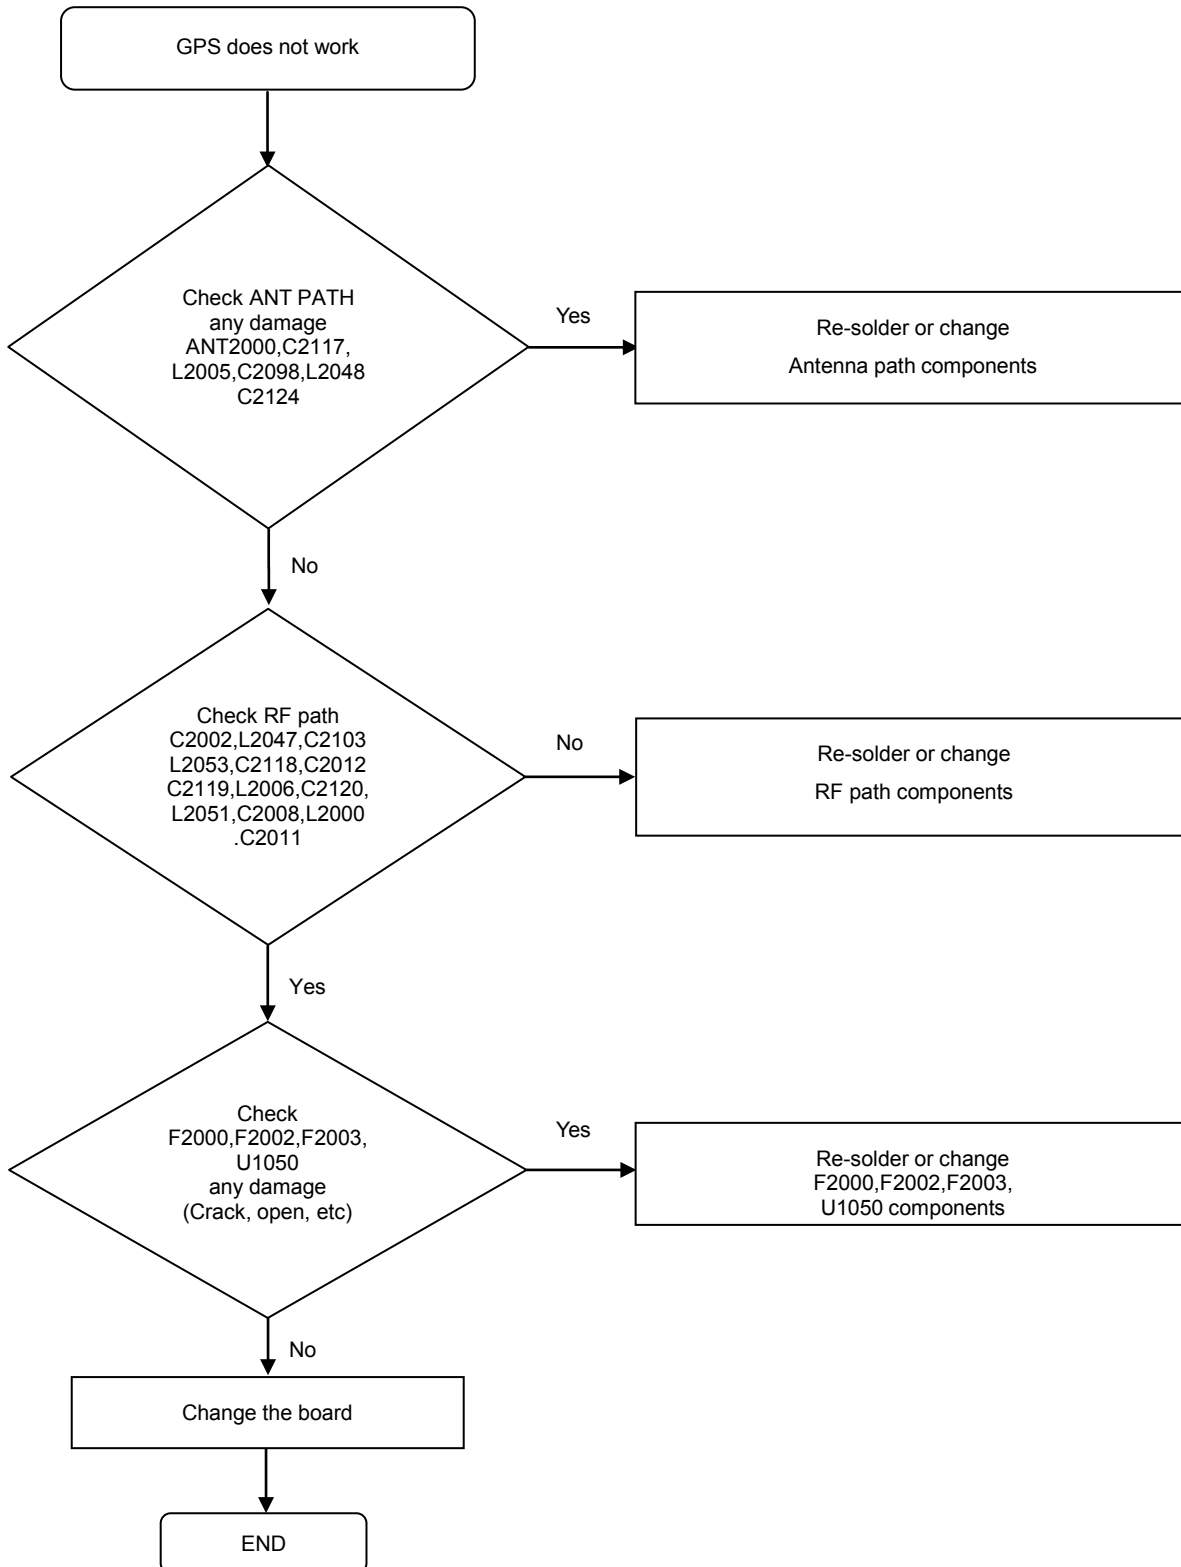

8. Level 3 Repair

8-4-36. FM RADIO

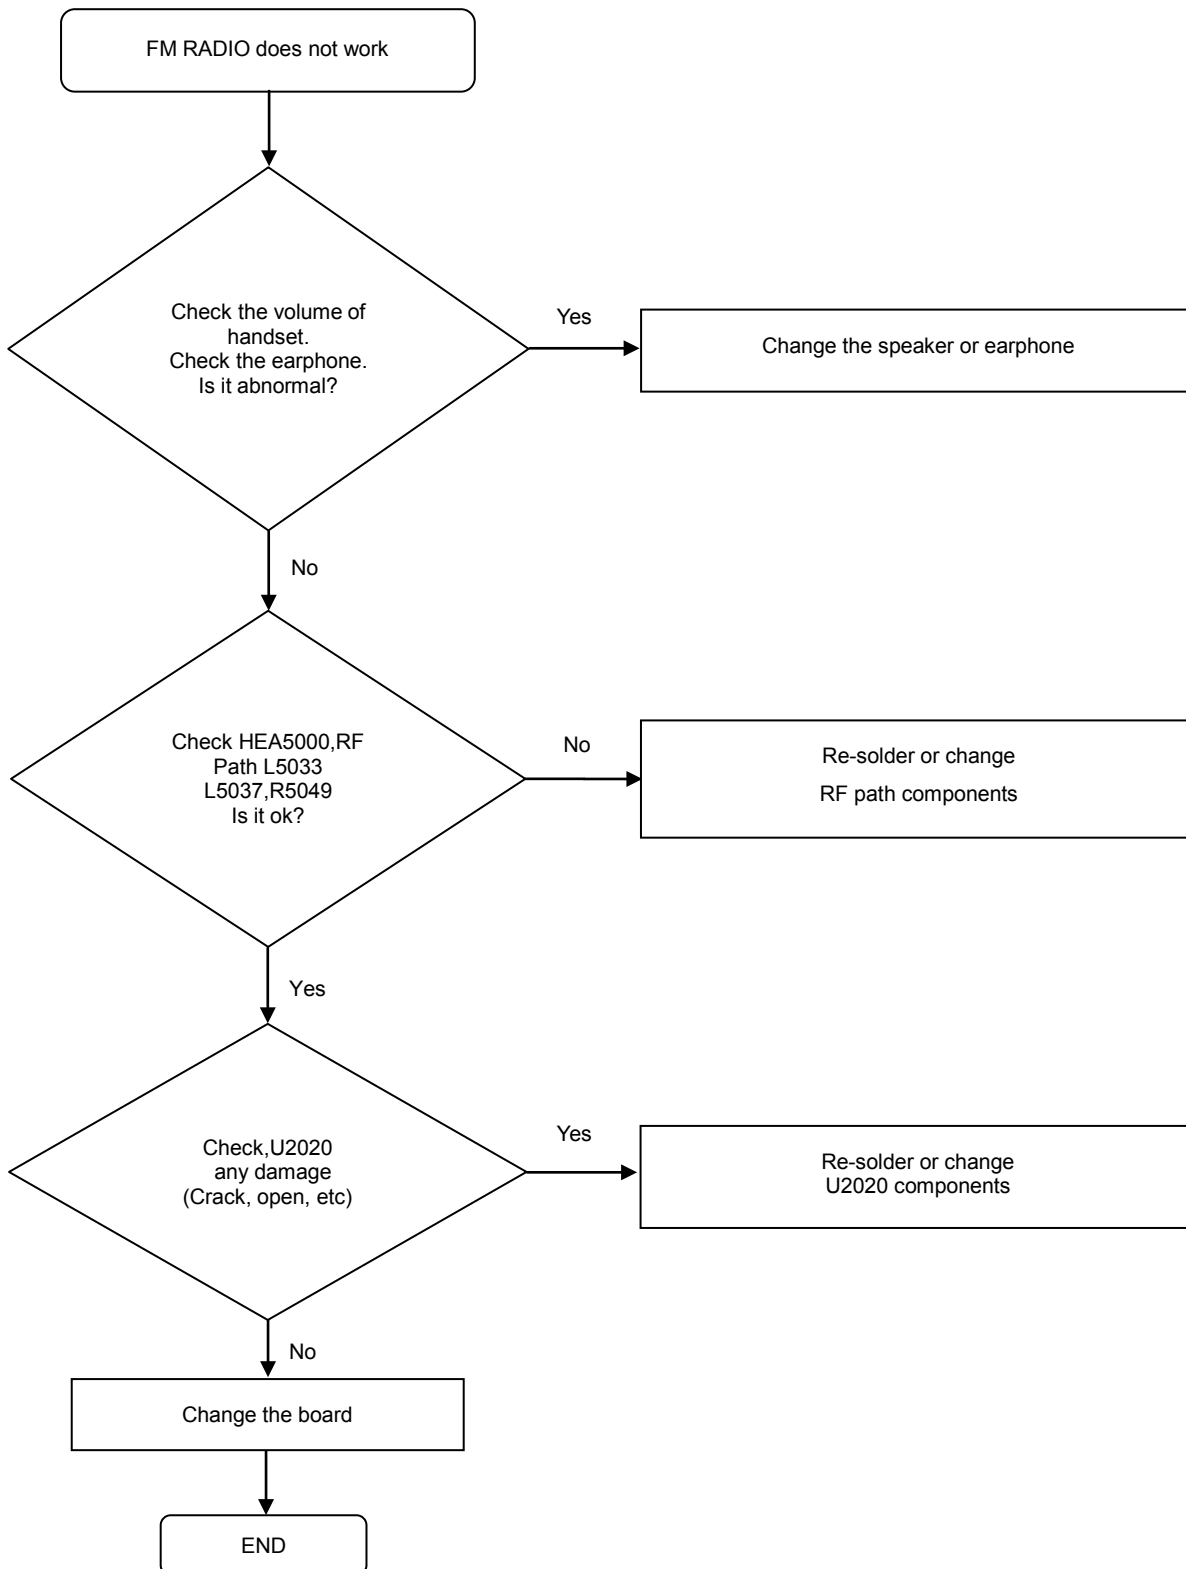

8. Level 3 Repair

8-5. Service Schematics

- NC Point(Top View) U3000 (AP)

