




7-1. Disassembly and Assembly Instructions


7-1-1. Disassembly

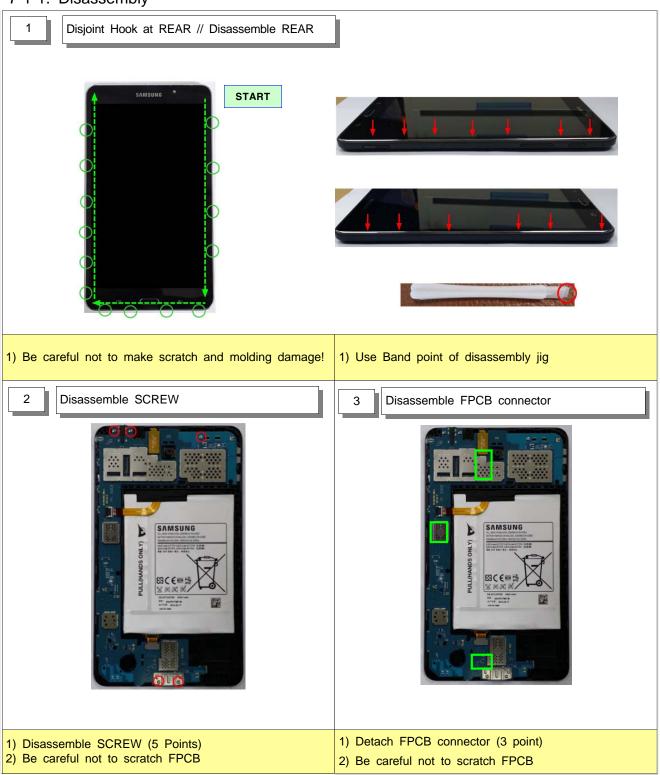



4 Disassemble BATTERY



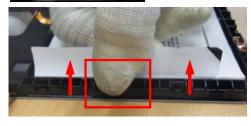

- 1) Pull marked point.
- DISASSEMBLE BATTERY.
 Battery demolition be used only hand.
 The disable tweezers, Driver, JIG

5 Disassemble PBA






e used only hand.

6 Check Battery flatness



Check Battery flatness

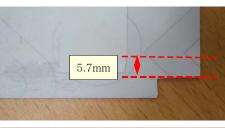



- 1) Prepare the ruler or the card which can check 5.7mm thickness.
- 2) Place the Battery on the flat surface like the picture (*Printed image should be top)



1) Check each part.





- 1) Check the battery flatness using the ruler or the card
- In case of NG, battery should be replaced with new one.



7-1-2. Assembly

