7. Level 2 Repair




7-1. Pre-requisite





7-2. Parts which must be changed after repair

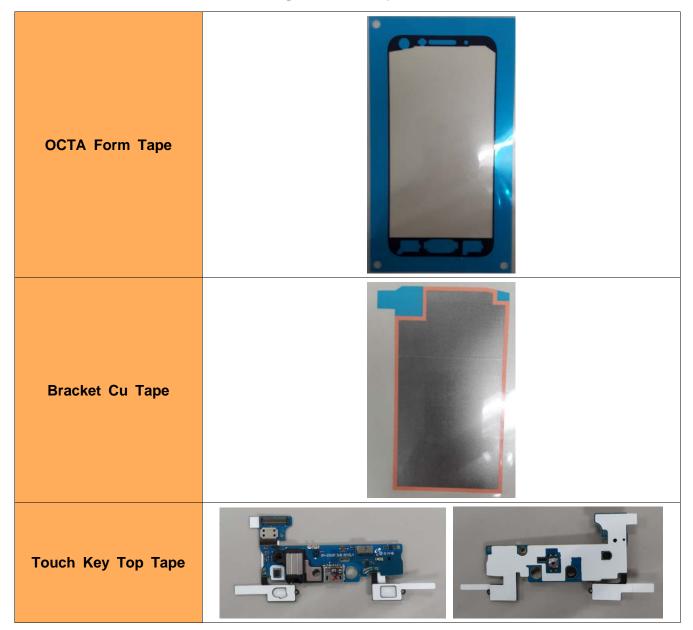



7-3. Disassembly

1





Temperature: 70 ± 10 ° C



- 1) After heating for 10 minutes the decice at $70\sim80\,^{\circ}$ C, take out the device from Mobile dryer.
- Detach the Bracket CU tape care fully from the OCTA Cu sheet using Glass absorber and holder.
 Be careful not to separate LCD from TSP.





4



- 1) Disassemble loosen 14 Point of Bracket
- 1) Disassemble/Detach Bracket and REAR



7



1) Loosen a Screw in PBA Ass'y

 Detach Connector and Coaxial Cable from PBA

8



9



- 1) Detach the PBA from bottom REAR
- 2) Be careful not to damage

1) Detach Main and Sub Camera on PBA





11



- Detach the Receiver, Speaker, Coaxial Cable and Battery
- 1) Detach lower Sub PBA from Bracket
- 2) Be careful not to Damage



7-4. Assembly

1



2



- 1) Assemble lower Sub PBA on Bracket
- Assemble the Upper/Lower SUB PBA and Coaxial Cable, RCV, Speaker, Battery

3



4



- 1) Attach Battery on Bracket
- 2) Press Battery using Battery Pressing JIG.
- 1) Attach Main and Sub Camera on PBA





6



- 1) Assemble PBA on Bracket
- 2) Assemble lower Sub PBA and Main PBA
- 1) Assemble Connector on the PBA Assy
- 2) Assemble Coaxial Cable

7



8



1) Tighten a screw

1) Assemble PBA ass'y and REAR



10



1) Tighten screw the 14 point

- 1) Assemble LCD Connector
- 2) Attach LCD and REAR ass'y

11



1) Press OCTA Window using Window pressing JIG.