



UH-engine compartment fuse box
 UH BAT-connection, engine compartment fuse box connecting to positive pole of battery
 IP-dashboard fuse box
 IP D-connection, dashboard fuse box terminal
 IP G-connection, dashboard fuse box terminal
 IP F-connection, dashboard fuse box terminal
 IP H-connection, dashboard fuse box terminal
 a-main relay power
 E08-engine ECU
 E02-anti-theft ECU
 D06-brake switch

E08_EA-EFI ECU connector 81 holes black
 X05_AA Y05_EA-EFI wiring harness and main wiring harness splicing connector 42 holes black
 E02_PA-anti-theft ECU connector 8 holes black
 D06_PA-brake switch connector 4 holes black
 G35_P-central console ground point
 *For AT
 **For ESP
 ***For ABS

