



1.5 T-water tank dual fans circuit diagram

- UH-engine compartment fuse box
- UH BAT-connection, engine compartment fuse box connecting to positive pole of battery
- IP-dashboard fuse box
- IP D-connection, dashboard fuse box terminal
- IP G-connection, dashboard fuse box terminal
- IP F-connection, dashboard fuse box terminal
- IP H-connection, dashboard fuse box terminal
- M05-water tank cooling fan
- M05_AB-1.5T engine fan connector 3 holes gray
- G01_A-left front ground point in the engine compartment