

# 1. Safety Precautions

---

## 1-1. Repair Precaution

Before attempting any repair or detailed tuning, shield the device from RF noise or static electricity discharges.

Use only demagnetized tools that are specifically designed for small electronic repairs, as most electronic parts are sensitive to electromagnetic forces.

Use only high quality screwdrivers when servicing products. Low quality screwdrivers can easily damage the heads of screws.

Use only conductor wire of the properly gauge and insulation for low resistance, because of the low margin of error of most testing equipment.

We recommend 22-gauge twisted copper wire.

Hand-soldering is not recommended, because printed circuit boards (PCBs) can be easily damaged, even with relatively low heat. Never use a soldering iron with a power rating of more than 100 watts and use only lead-free solder with a melting point below 250°C (482°F).

Prior to disassembling the battery charger for repair, ensure that the AC power is disconnected.

Always use the replacement parts that are registered in the SEC system. Third-party replacement parts may not function properly.

# 1. Safety Precautions

---

## 1-2. ESD(Electrostatically Sensitive Devices) Precaution

Many semiconductors and ESDs in electronic devices are particularly sensitive to static discharge and can be easily damaged by it. We recommend protecting these components with conductive anti-static bags when you store or transport them.

Always use an anti-static strap or wristband and remove electrostatic buildup or dissipate static electricity from your body before repairing ESDs.

Ensure that soldering irons have AC adapter with ground wires and that the ground wires are properly connected.

Use only desoldering tools with plastic tips to prevent static discharge.

Properly shield the work environment from accidental electrostatic discharge before opening packages containing ESDs.

The potential for static electricity discharge may be increased in low humidity environments, such as air-conditioned rooms. Increase the airflow to the working area to decrease the chance of accidental static electricity discharges.

## 2. Specification

### 2-1. GSM General Specification

Item		GSM 850	EGSM 900	DCS1800	PCS1900
Freq. Band[MHz] Uplink/Downlink		824~849 869~894	880~915 925~960	1710~1785 1805~1880	1850~1910 1930~1990
ARFCN range		128~251	0~124 & 975~1023	512~885	512~810
Tx/Rx spacing		45MHz	45MHz	95MHz	80MHz
Mod. Bit rate/ Bit Period		270.833kbps 3.692us	270.833kbps 3.692us	270.833kbps 3.692us	270.833kbps 3.692us
Time Slot Period/ Frame Period		576.9us 4.615ms	576.9us 4.615ms	576.9us 4.615ms	576.9us 4.615ms
Modulation	GSM/ GPRS	0.3GMSK	0.3GMSK	0.3GMSK	0.3GMSK
MS Power		33dBm ~5dBm	33dBm ~5dBm	30dBm ~0dBm	30dBm ~0dBm
Power Class		5pcl ~ 19pcl	5pcl ~ 19pcl	0pcl ~ 15pcl	0pcl ~ 15pcl
Sensitivity		-102dBm	-102dBm	-100dBm	-100dBm
TDMA Mux		8	8	8	8

## 2. Specification

### 2-2. GSM Tx Power Class

TX Power control level	GSM850	TX Power control level	EGSM900	TX Power control level	DCS1800	TX Power control level	PCS1900
5	33±2 dBm	5	33±2 dBm	0	30±3 dBm	0	30±3 dBm
6	31±2 dBm	6	31±2 dBm	1	28±3 dBm	1	28±3 dBm
7	29±2 dBm	7	29±2 dBm	2	26±3 dBm	2	26±3 dBm
8	27±2 dBm	8	27±2 dBm	3	24±3 dBm	3	24±3 dBm
9	25±2 dBm	9	25±2 dBm	4	22±3 dBm	4	22±3 dBm
10	23±2 dBm	10	23±2 dBm	5	20±3 dBm	5	20±3 dBm
11	21±2 dBm	11	21±2 dBm	6	18±3 dBm	6	18±3 dBm
12	19±2 dBm	12	19±2 dBm	7	16±3 dBm	7	16±3 dBm
13	17±2 dBm	13	17±2 dBm	8	14±3 dBm	8	14±3 dBm
14	15±2 dBm	14	15±2 dBm	9	12±4 dBm	9	12±4 dBm
15	13±2 dBm	15	13±2 dBm	10	10±4 dBm	10	10±4 dBm
16	11±3 dBm	16	11±3 dBm	11	8±4 dBm	11	8±4 dBm
17	9±3 dBm	17	9±3 dBm	12	6±4 dBm	12	6±4 dBm
18	7±3 dBm	18	7±3 dBm	13	4±4 dBm	13	4±4 dBm
19	5±3 dBm	19	5±3 dBm	14	2±5 dBm	14	2±5 dBm
-	-	-	-	15	0±5 dBm	15	0±5 dBm

## 2. Specification

### 2-3. WCDMA General Specification

Item	WCDMA2100	WCDMA850	WCDMA900
Freq. Band[MHz] Uplink/Downlink	1922~1977 2112~2167	824~849 869~894	880~915 925~960
ARFCN range	UL: 9612~9888 DL: 10562~10838	UL: 4132~4233 DL: 4357~4458	UL: 2712~2863 DL: 2937~3088
Tx/Rx spacing	190MHz	45MHz	45MHz
Mod. Bit rate/ Bit Period	3.84 Mcps	3.84 Mcps	3.84 Mcps
Time Slot Period/ Frame Period	FrameLength:10ms Slotlength:0.667ms	FrameLength:10ms Slotlength:0.667ms	FrameLength:10ms Slotlength:0.667ms
Modulation	QPSK/HQPSK	QPSK/HQPSK	QPSK/HQPSK
MS Power (dBm)	24dBm~-50dBm	24dBm~-50dBm	24dBm~-50dBm
Power Class	3(max+24dBm)	3(max+24dBm)	3(max+24dBm)
Sensitivity	-106.7dBm	-106.7dBm	-106.7dBm

## 2. Specification

### 2-4-1. LTE General Specification

Item	Band1 (FDD)	Band3 (FDD)	Band5 (FDD)	Band8 (FDD)
Freq. Band[MHz] UL/DL	1920~1980 2110~2170	1710~1785 1805~1880	824~849 869~894	880~915 925~960
ARFCN range UL/DL	18000~18599 0~599	19200~19949 1200~1949	20400~20649 2400~2649	21450~21799 3450~3799
Tx/Rx spacing	190MHz	95MHz	45MHz	45MHz
TCXO Frequency	38.4MHz	38.4MHz	38.4MHz	38.4MHz
Modulation	QPSK/16-QAM/64-QAM	QPSK/16-QAM/64-QAM	QPSK/16-QAM/64-QAM	QPSK/16-QAM/64-QAM
MS Power	-40dBm~ 25dBm	-40dBm~ 25dBm	-40dBm~ 25dBm	-40dBm~ 25dBm
Power Class	3 (max: 23 ±2dBm)	3 (max: 23 ±2dBm)	3 (max: 23 ±2dBm)	3 (max: 23 ±2dBm)
Sensitivity(QPSK, BW 10MHz) (dBm)	-96.3(BW : 10 MHz)	-93.3(BW : 10 MHz)	-94.3(BW : 10 MHz)	-93.3(BW : 10 MHz)

Item	Band40 (TDD)	Band41 (TDD)
Freq. Band[MHz] Uplink/Downlink	2300~2400	2555~2655
ARFCN range	38650~39649	40240~41240
Tx/Rx spacing	/	/
TCXO Frequency	38.4MHz	38.4MHz
Modulation	QPSK/16-QAM /64-QAM	QPSK/16-QAM /64-QAM
MS Power	-40dBm~ 25dBm	-40dBm~ 25dBm
Power Class	3 (max: 23 ±2dBm)	3 (max: 23 ±2dBm)
Sensitivity(QPSK, BW 10MHz) (dBm)	-96.3(BW : 10MHz)	-94.3(BW : 10MHz)

### 3. Product Function

#### Main Function

Item	Description
OS	Android V9.0
RF	[2G] GSM : GSM850 / GSM900 / DCS 1800 / PCS 1900 [3G] WCDMA : B1 / B5 / B8 [4G] LTE FDD : B1 / B3 / B5 / B8 LTE TDD : B40 / B41
Battery	3,500mAh
Base Band	SM6150 / 2GHz, 1.7GHz
Other RF	GPS, Glonass, Beidou, Galileo, BT 5.0, USB 2.0, Wi-Fi 802.11 a/b/g/n/ac (2.4G+5GHz), NFC
Camera	Camera: 3EA Camera ( 32M+5M+8M) with LED Flash, 16MP FF (Front)
LCD	6.3" FHD+, 2340 x 1080
RAM	6GB
Storage	128GB
Sensor	Accelerometer, Fingerprint Sensor, Gyro Sensor, Geomagnetic Sensor, Hall sensor, RGB Light Sensor, Proximity Sensor
Accessory	Charger : 5V/2A or 9 V/1.67 A Data cable : USB Type-C Earjack : Type-C


## 6. Level 1 Repair

### 6-1. S/W Update

#### 6-1-1. Preparation

- S/W Update program : [Fenrir 5.17.xxxx](#)
- Mobile Phone
- Data Cable

#### ※ Settings

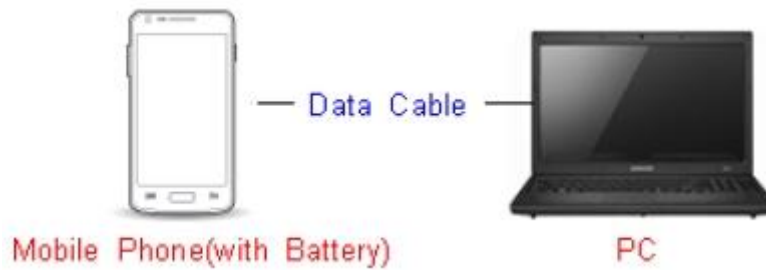

Data Cable : [GH39-02002A](#)



## 6. Level 1 Repair

### 6-1-2. How to use 'Fenrir' S/W update program.

1) Launch Fenrir by clicking on the icon on the desktop




- SVH (Fenrir\_Home) : It uses Home binary which does not have user data area in the memory when flashed to a device. (Keep user data)

- SVC (Fenrir\_Factory) : It uses Factory binary which erases all user data in the memory when flashed to a device. (Clear user data)

- SVA (Fenrir\_All) : It uses Factory and Home binaries. you can download Home and Factory binary in a PC (but requires double HDD storage and NW traffic)


2) Input ID & password

※ You need to reset the ID information in case of PC change and format and repair, hard disk change

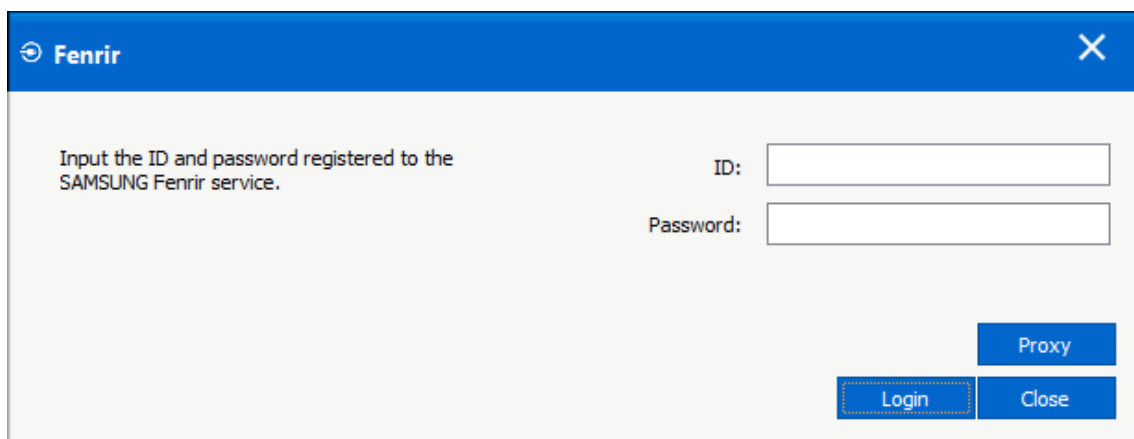


## 6. Level 1 Repair

3) Ensure device has sufficient charge (at least 20%) to start firmware update.

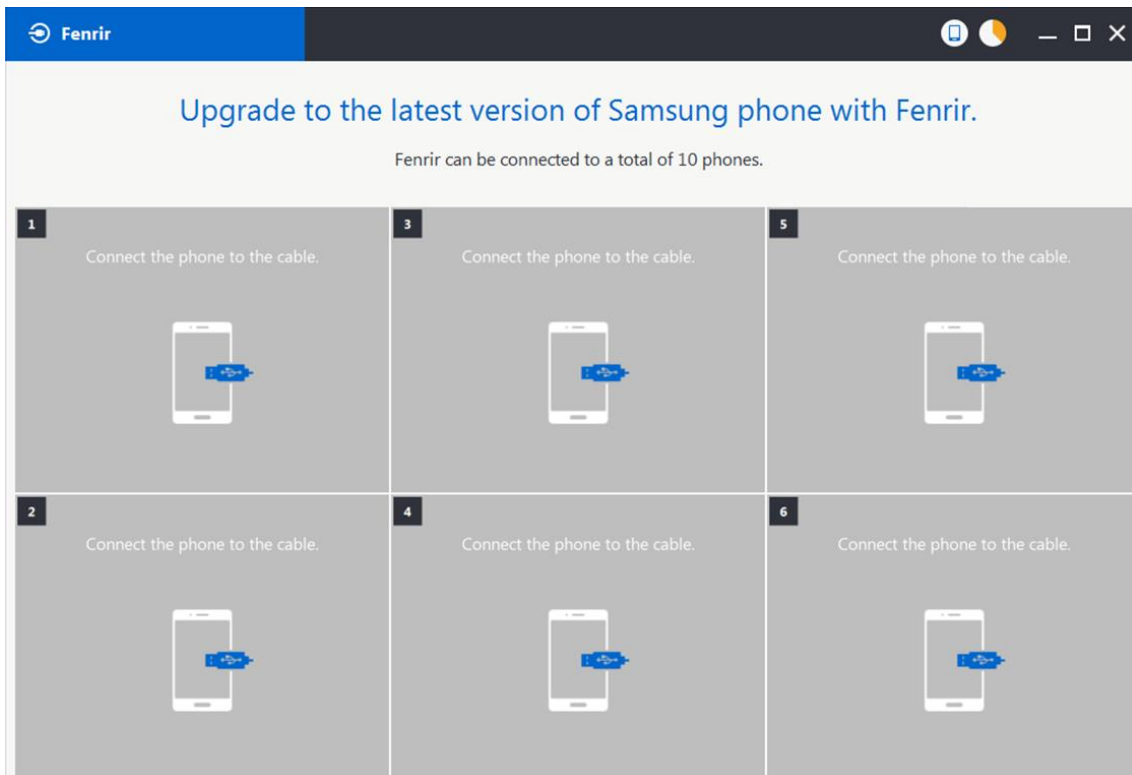


4) Connect the device to PC via data cable.

5) Upon USB connection, you will be presented with below screen.

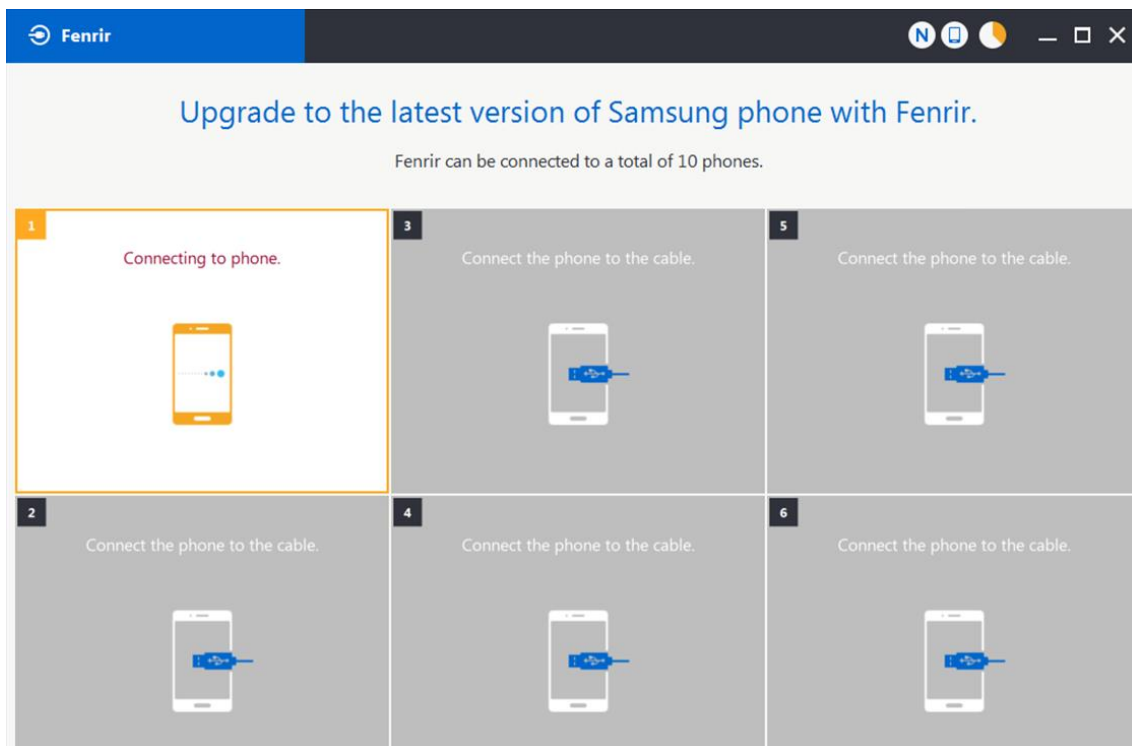


## 6. Level 1 Repair

6) Once device is detected, you will be presented with below screen. To update S/W, select “S/W Update” or to exit select “SVC Connection”. If you select “SVC Connection”, only Fenrir connection history (record) will be stored in the FUS server to support warranty validation. (This is known as “Service Connection” history)

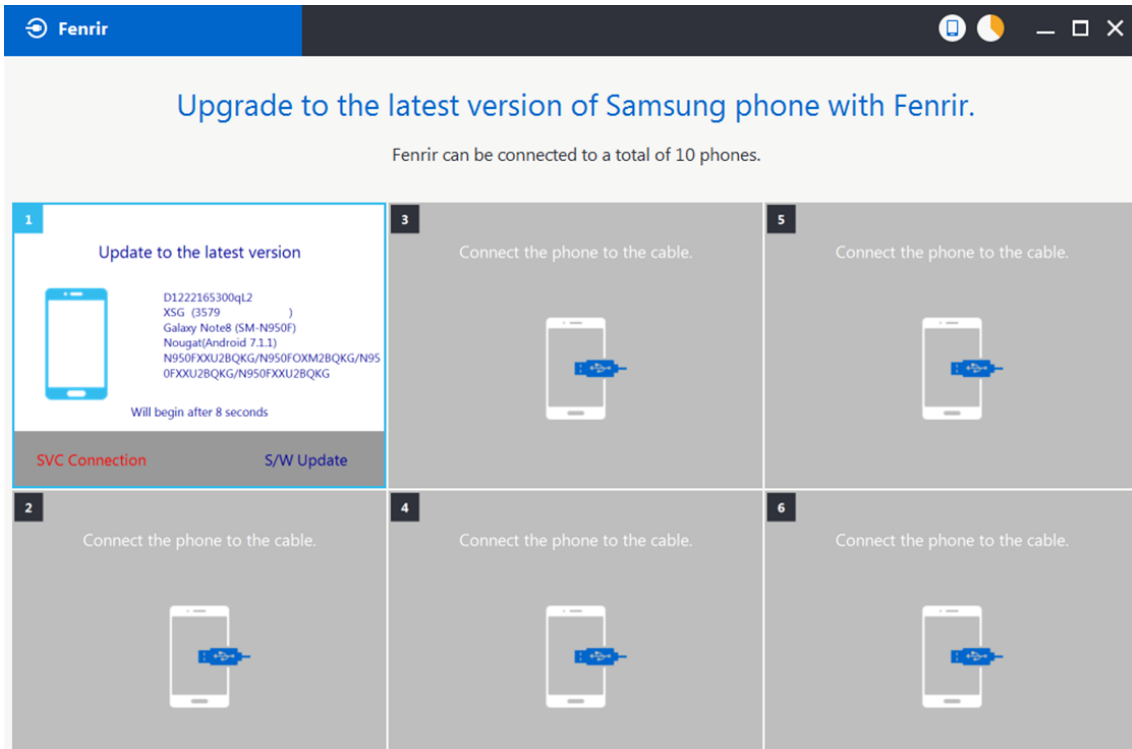


7) Once Fenrir starts, application will display the below screen. And select the Start button & Agree button.

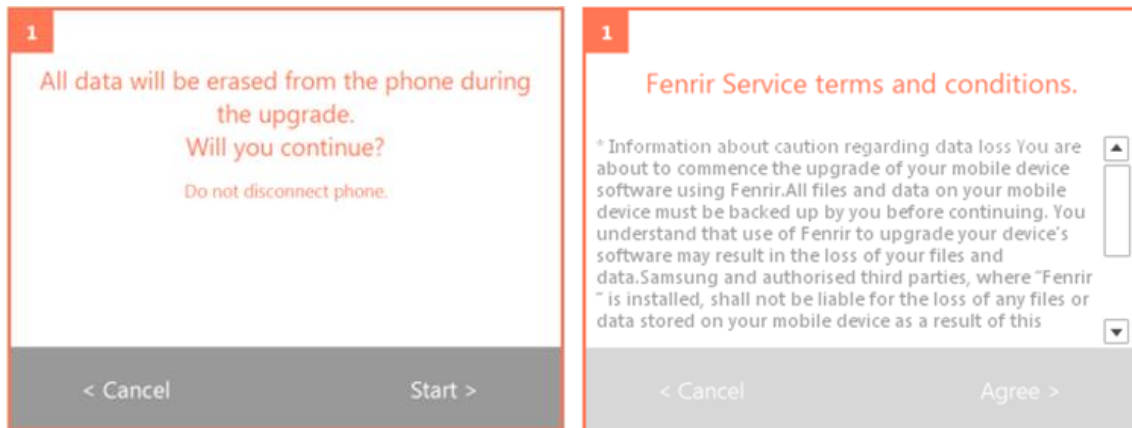


## 6. Level 1 Repair

8) The status circle increases as the update installs. The update process takes approximately 5-10 minutes to complete. Do not disconnect the device from USB during processing.

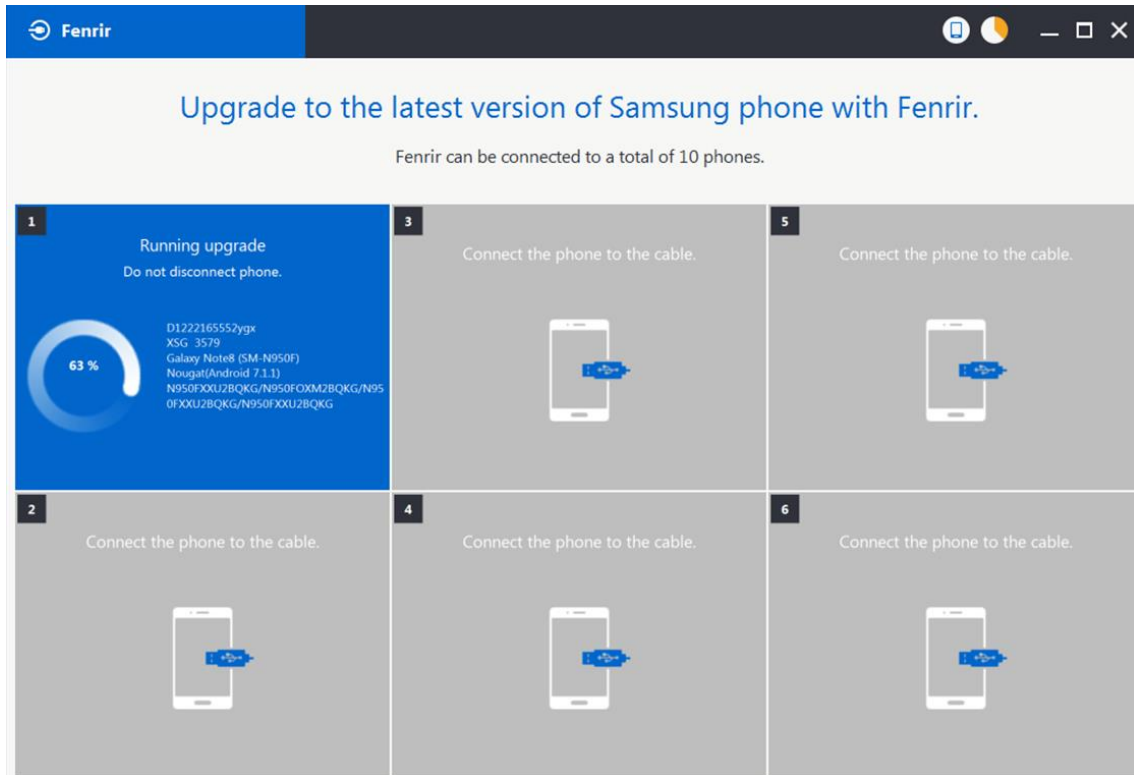

9) Once complete, application will present the below screen indicating update complete. Click Ok and detach device from USB.

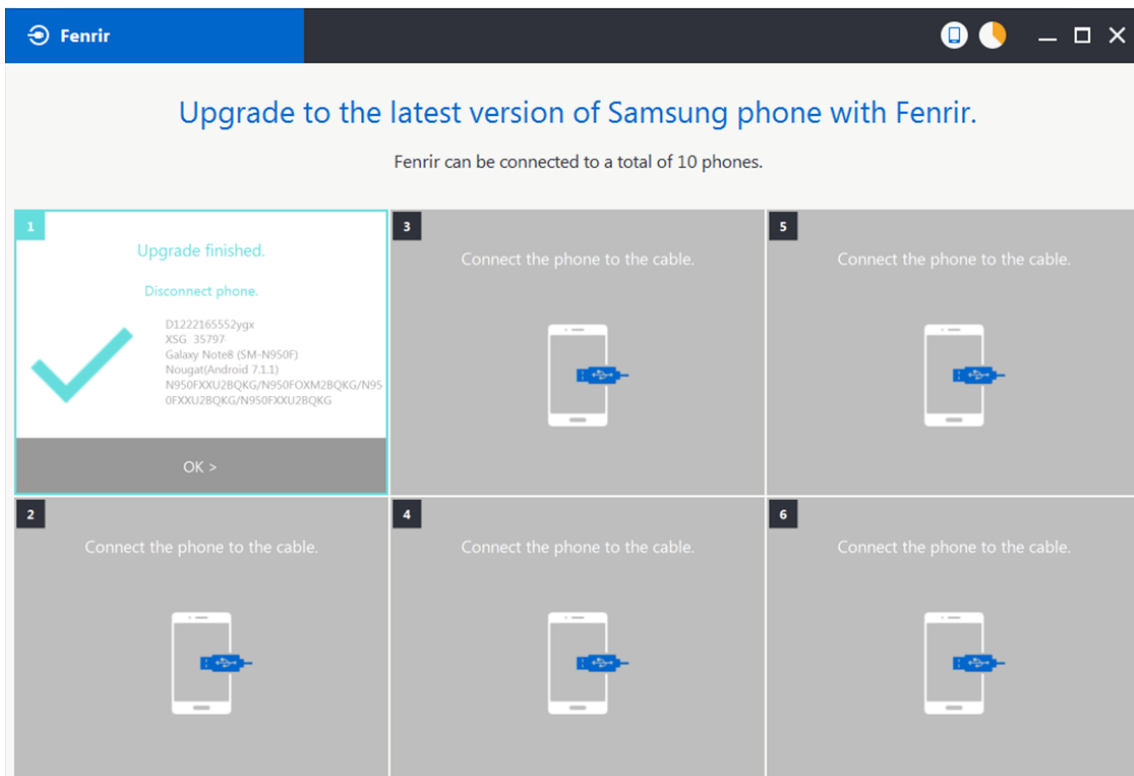

## 6. Level 1 Repair

### 6-2. How to use 'Odin' program


※ S/W Update via Fenrir is mandatory.

Below is the method to use 'Odin' program in any specific case.

#### 6-2-1. Preparation

- Installation program : [Odin3 v3.13.2.exe or above](#)
- Mobile Phone
- Data Cable
- S/W Binary files (downloaded from GSPN)

#### ※ Settings

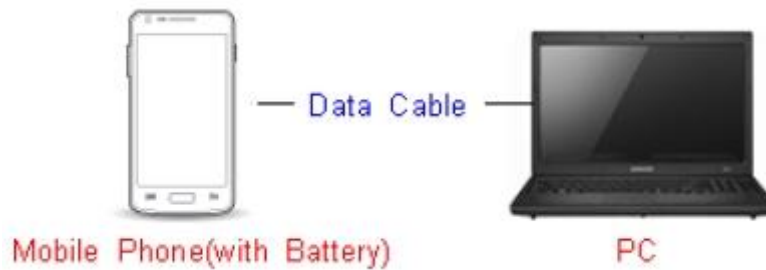


Data Cable : [GH39-02002A](#)

## 6. Level 1 Repair

### 6-2-2. S/W Installation Program (Downloader program)

Open up the S/W Installation Program by executing the "**Odin3 v3.13.2.exe**"

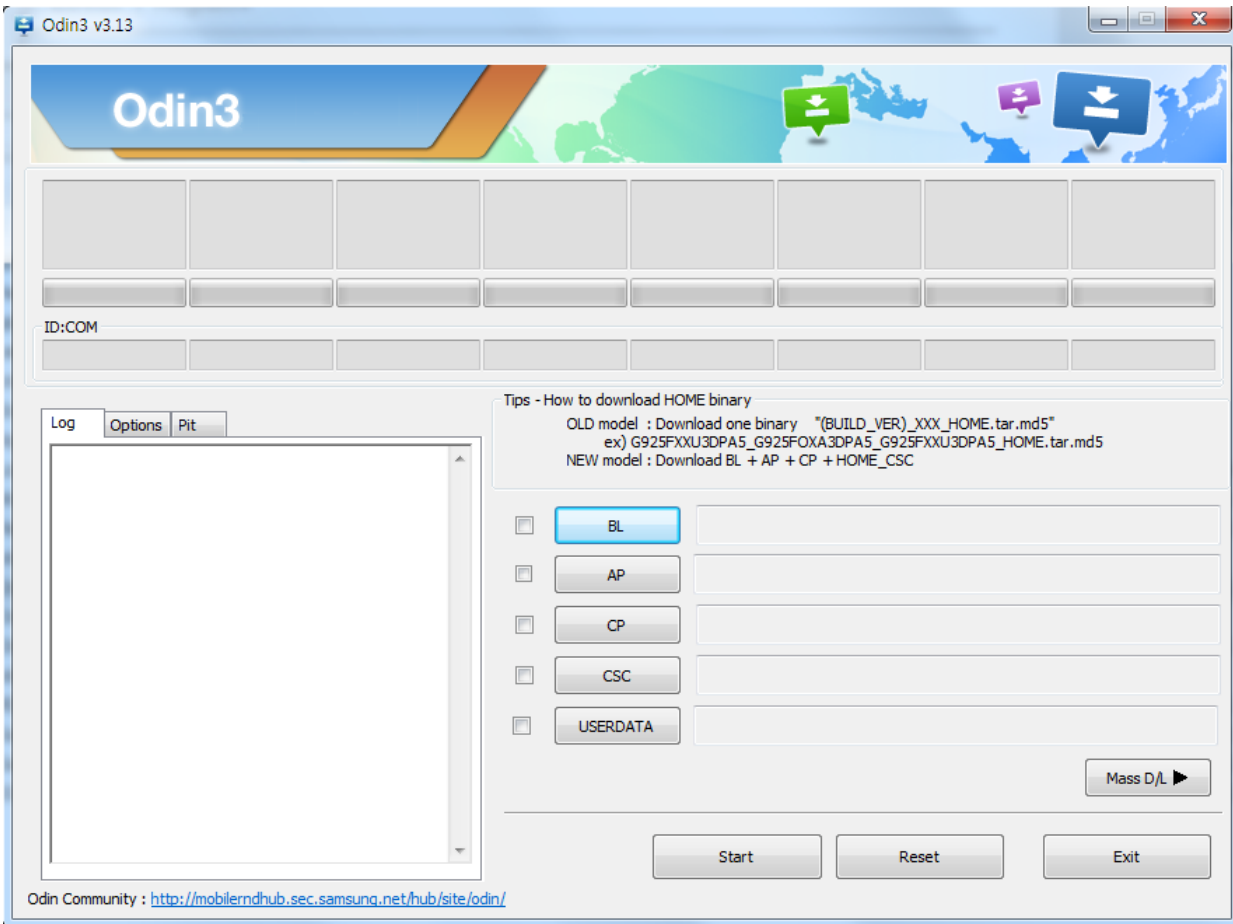


## 6. Level 1 Repair

1. Enable the check mark by click on the following options

- Check Auto Reboot, F. Reset Time, Nand Erase
- Check BL, AP, CP, CSC Files

\* Note : "Odin v3.13.2 or above" checks MD5 checksum just after file selection.

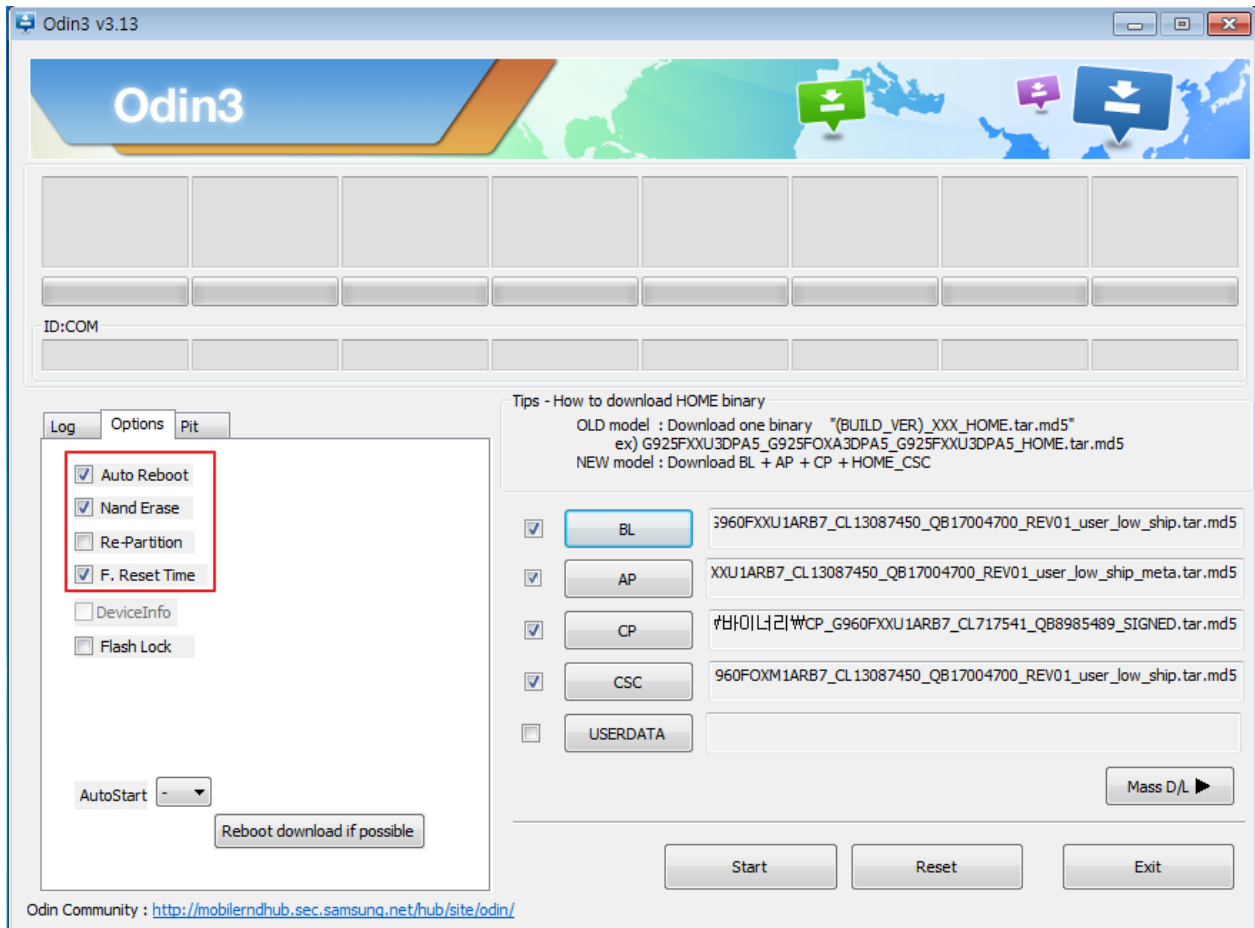

## 6. Level 1 Repair

### 2. Enter into Download Mode

- Enter into Download Mode by pressing Volume up button , Volume down button and connecting USB cable
- Press Volume Up button to download mode.






## 6. Level 1 Repair

### 3. Connect the device to PC via Data Cable.


Make sure that the one of communication ports [ID:COM] box is highlighted in sky blue. The device is now connected with the PC and ready to download the binary files in it.

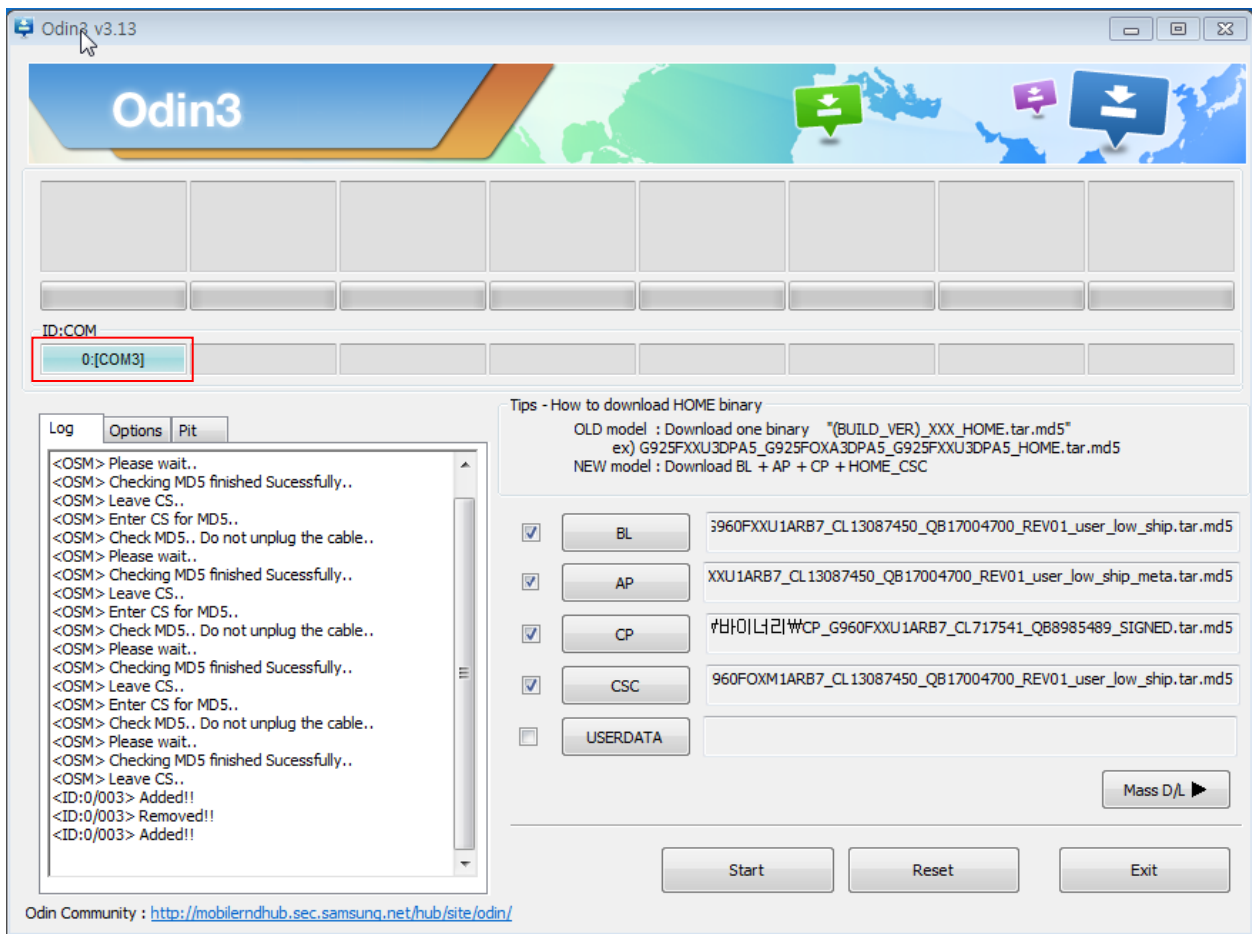

## 6. Level 1 Repair

4. Start downloading the binary files into the device by clicking Start button on the screen.

The green colored "PASS!" sign will appear on the upper-left box if the binary files have been successfully downloaded into the device.

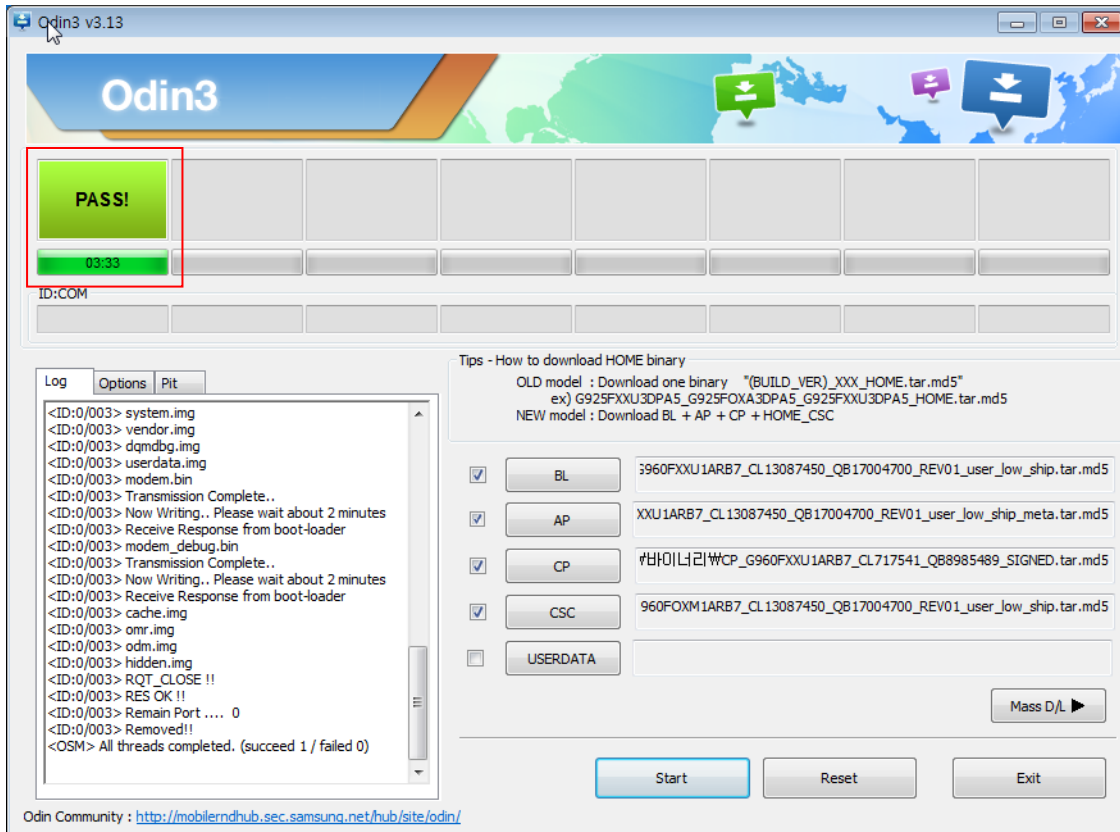

5. Disconnect the device from the Data cable.

6. Once the device boots up, you can check the version of the binary file or name by pressing the following code in sequence; **\*#1234#**

You can perform Factory data Reset by Settings → General Management → Reset

**※ Caution. Never disconnect during the S/W downloading.**


## 6. Level 1 Repair

### 6-3. IMEI writing


#### 6-3-1. Preparation

- New IMEI writing Program has been released.
- Supported Model : Models which CAB files are uploaded on HHPsvc INI File category, instead of ini file.
- Refer to below IMEI writing procedure.

#### - H/W

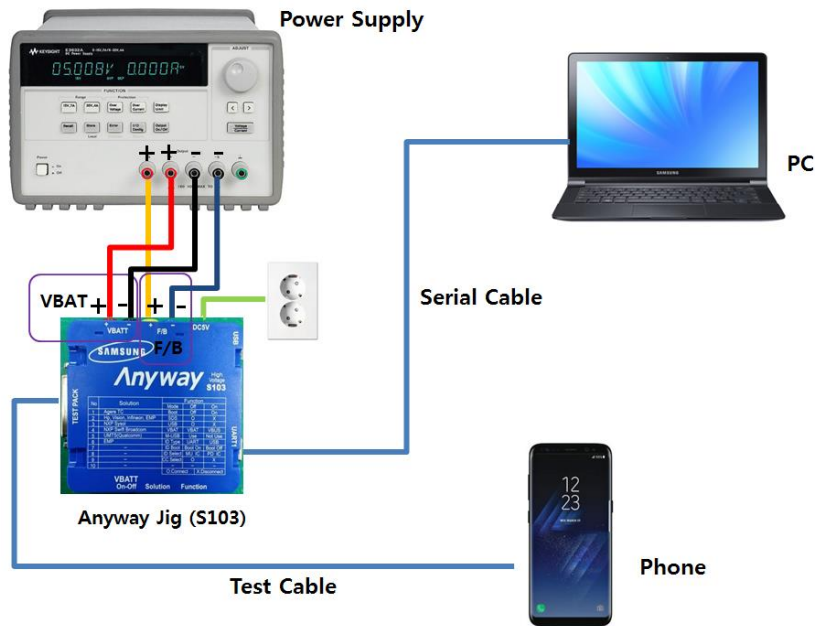

#### - S/W

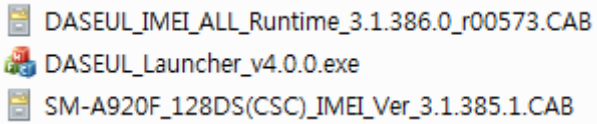① Library Install	To use Daseul, library files should be installed. Refer to SVC Bulletin “(11-82) Daseul (New IMEI writing Program) Library Install guide_rev1.0”
② Launcher	<b>DASEUL_Launcher_v4.0.0</b> or higher -Uploaded on HHPsvc Notice
③ Runtime File	1. <b>DASEUL_IMEI_ALL_Runtime_3.1.386.0_r00573.CAB</b> or higher -Uploaded on HHPsvc Notice 2. Make 'modelName' folder at the same position with launcher & Runtime file. 
④ Model File	Copy Model File under the ' <b>SM-A6060</b> ' folder


## 6. Level 1 Repair

### 6-3-2. IMEI writing Process


#### 1. Run DASEUL\_Launcher\_v4.0.0

DASEUL\_Launcher\_v4.0.0.exe

#### 2. Select Service Mode

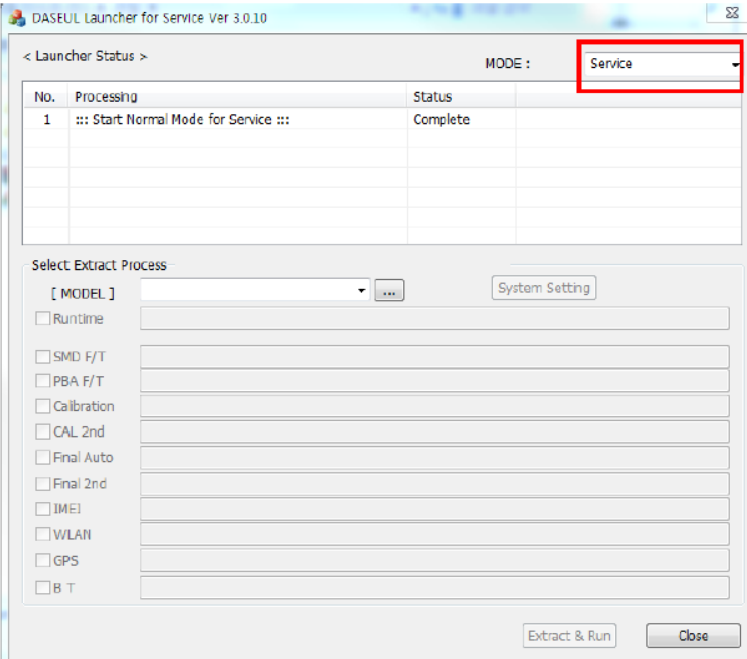


#### 3. Click and Select folder where the Launcher exists

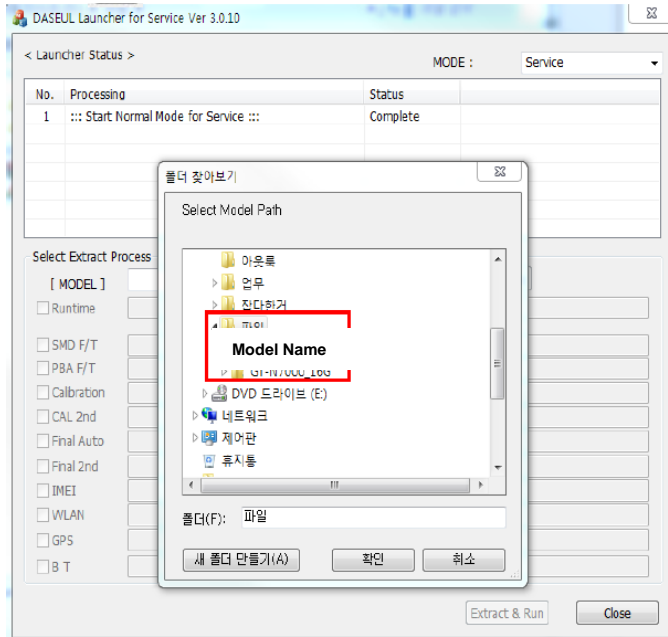


## 6. Level 1 Repair

### 4. Select Model

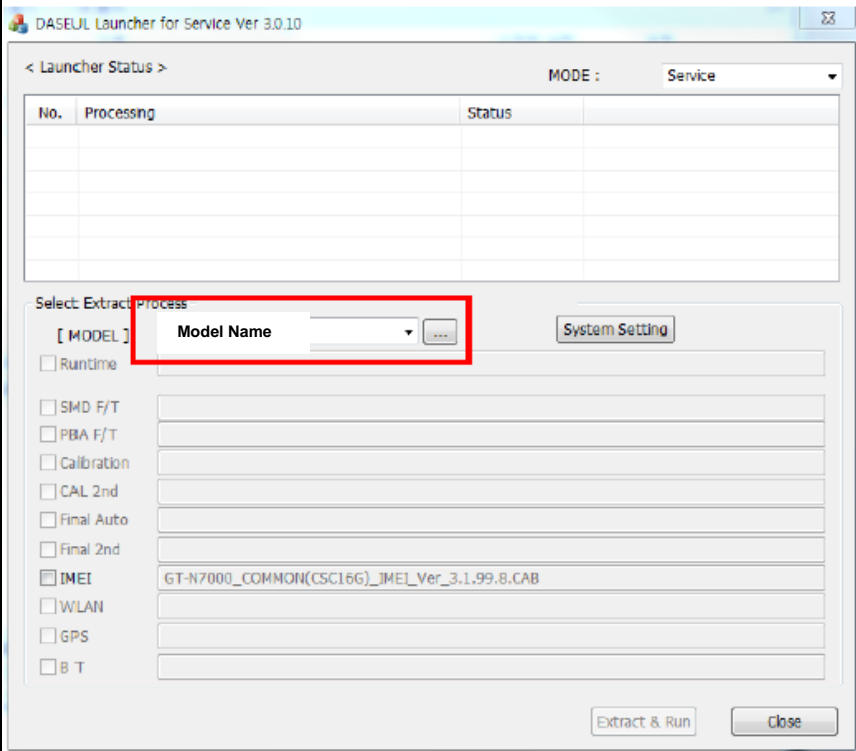


### 5. Check IMEI and click System Setting

※ Once you setup the setting, you don't have to do it again, unless there is change. From second run of the IMEI program, check IMEI and click Extract & Run.

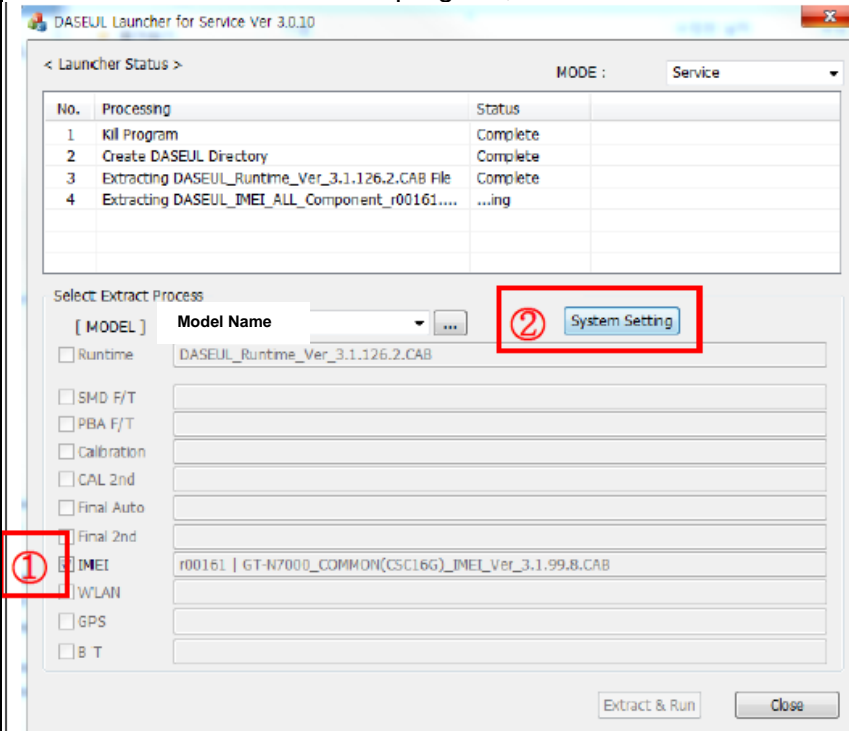

## 6. Level 1 Repair

6. Check IMEI Write / IMEI Check and click IMEI SVC & Repair Option.

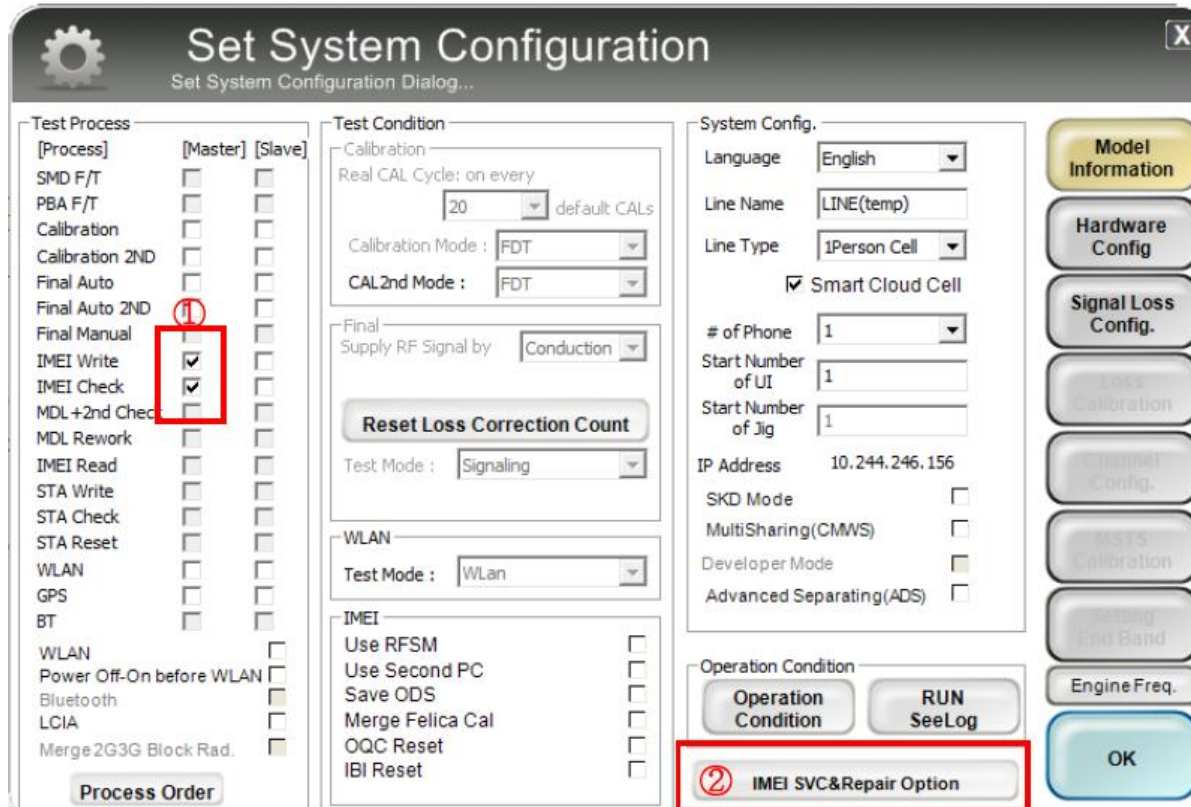

**Set System Configuration**  
Set System Configuration Dialog...

**Test Process**

[Process]	[Master]	[Slave]
SMD F/T	<input type="checkbox"/>	<input type="checkbox"/>
PBA F/T	<input type="checkbox"/>	<input type="checkbox"/>
Calibration	<input type="checkbox"/>	<input type="checkbox"/>
Calibration 2ND	<input type="checkbox"/>	<input type="checkbox"/>
Final Auto	<input type="checkbox"/>	<input type="checkbox"/>
Final Auto 2ND	<input type="checkbox"/>	<input type="checkbox"/>
Final Manual	<input type="checkbox"/>	<input type="checkbox"/>
IMEI Write	<input checked="" type="checkbox"/>	<input type="checkbox"/>
IMEI Check	<input checked="" type="checkbox"/>	<input type="checkbox"/>
MDL +2nd Check	<input type="checkbox"/>	<input type="checkbox"/>
MDL Rework	<input type="checkbox"/>	<input type="checkbox"/>
IMEI Read	<input type="checkbox"/>	<input type="checkbox"/>
STA Write	<input type="checkbox"/>	<input type="checkbox"/>
STA Check	<input type="checkbox"/>	<input type="checkbox"/>
STA Reset	<input type="checkbox"/>	<input type="checkbox"/>
WLAN	<input type="checkbox"/>	<input type="checkbox"/>
GPS	<input type="checkbox"/>	<input type="checkbox"/>
BT	<input type="checkbox"/>	<input type="checkbox"/>
WLAN	<input type="checkbox"/>	<input type="checkbox"/>
Power Off-On before WLAN	<input type="checkbox"/>	<input type="checkbox"/>
Bluetooth	<input type="checkbox"/>	<input type="checkbox"/>
LCIA	<input type="checkbox"/>	<input type="checkbox"/>
Merge 2G3G Block Rad.	<input type="checkbox"/>	<input type="checkbox"/>

**Test Condition**

Calibration  
Real CAL Cycle: on every 20 default CALs  
Calibration Mode: FDT  
CAL2nd Mode: FDT

Final  
Supply RF Signal by: Conduction

**Reset Loss Correction Count**

Test Mode: Signaling

WLAN  
Test Mode: WLAN

IMEI  
Use RFSM   
Use Second PC   
Save ODS   
Merge Felica Cal   
OQC Reset   
IBI Reset

**System Config.**

Language: English  
Line Name: LINE(temp)  
Line Type: 1Person Cell  
 Smart Cloud Cell  
# of Phone: 1  
Start Number of UI: 1  
Start Number of Jig: 1  
IP Address: 10.244.246.156  
SKD Mode   
MultiSharing(CMWS)   
Developer Mode   
Advanced Separating(ADS)


**Operation Condition**

Operation Condition

**IMEI SVC&Repair Option**

**Model Information**  
**Hardware Config**  
**Signal Loss Config.**  
Loss Calibration  
Channel Config.  
MMS Calibration  
Setting End Band  
Engine Freq.  
**OK**

7. Check 'SVC , User Ticket No' and click OK

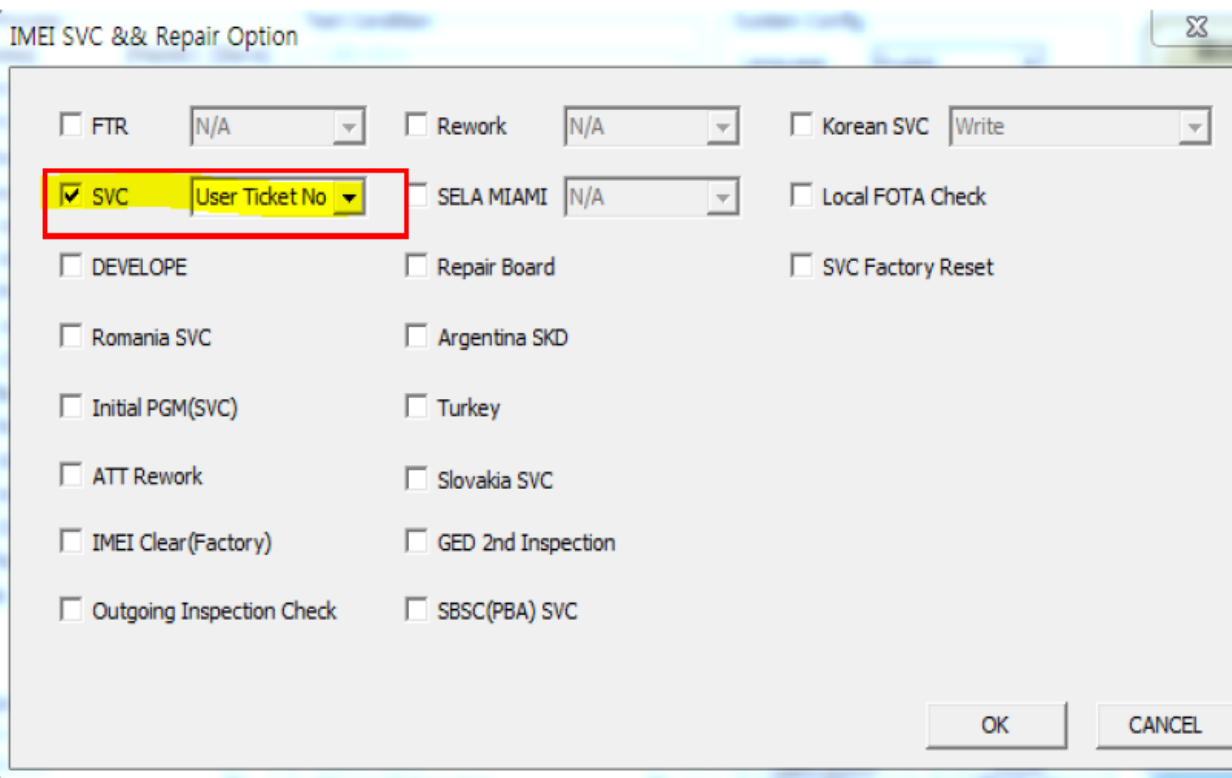

**IMEI SVC && Repair Option**


FTR N/A  Rework N/A  Korean SVC Write  
 SVC User Ticket No  SELA MIAMI N/A  Local FOTA Check  
 DEVELOPE  Repair Board  SVC Factory Reset  
 Romania SVC  Argentina SKD  
 Initial PGM(SVC)  Turkey  
 ATT Rework  Slovakia SVC  
 IMEI Clear(Factory)  GED 2nd Inspection  
 Outgoing Inspection Check  SBSC(PBA) SVC

**OK** **CANCEL**



## 6. Level 1 Repair

### 8. Click 'Hardware Config'

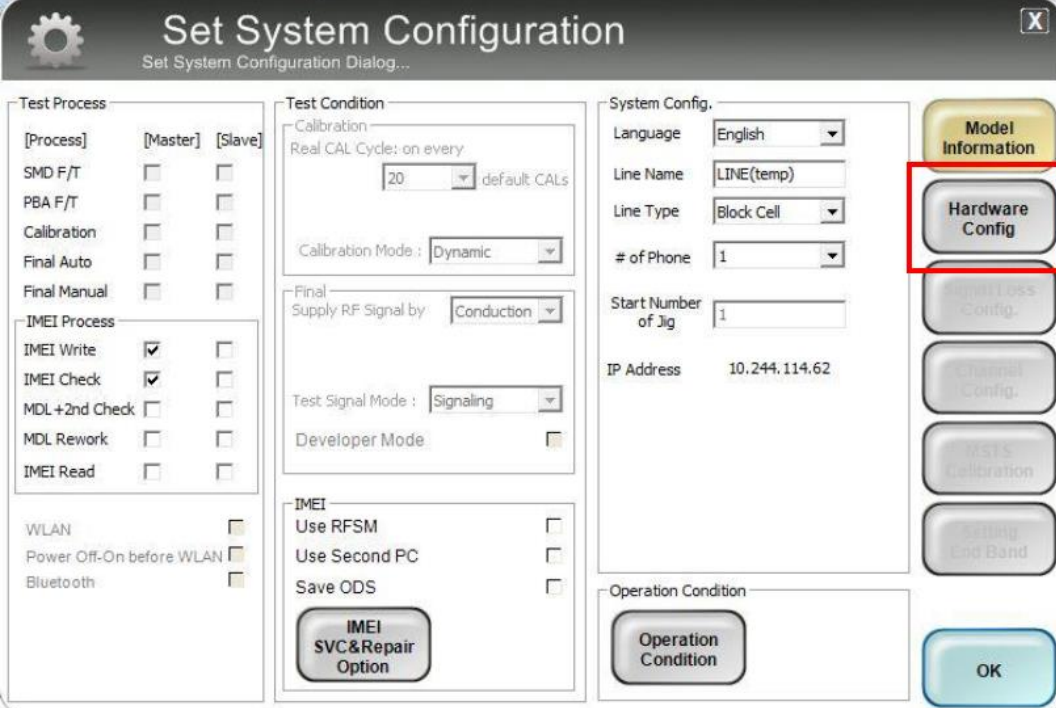

**Set System Configuration**  
Set System Configuration Dialog...

**Test Process**

[Process]	[Master]	[Slave]
SMD F/T	<input type="checkbox"/>	<input type="checkbox"/>
PBA F/T	<input type="checkbox"/>	<input type="checkbox"/>
Calibration	<input type="checkbox"/>	<input type="checkbox"/>
Final Auto	<input type="checkbox"/>	<input type="checkbox"/>
Final Manual	<input type="checkbox"/>	<input type="checkbox"/>

**IMEI Process**

IMEI Write	<input checked="" type="checkbox"/>	<input type="checkbox"/>
IMEI Check	<input checked="" type="checkbox"/>	<input type="checkbox"/>
MDL+2nd Check	<input type="checkbox"/>	<input type="checkbox"/>
MDL Rework	<input type="checkbox"/>	<input type="checkbox"/>
IMEI Read	<input type="checkbox"/>	<input type="checkbox"/>

WLAN   
Power Off-On before WLAN   
Bluetooth

**Test Condition**

Calibration  
Real CAL Cycle: on every  
20 default CALs  
Calibration Mode: Dynamic

Final  
Supply RF Signal by: Conduction

Test Signal Mode: Signaling  
Developer Mode

**IMEI**  
Use RFSM   
Use Second PC   
Save ODS


**System Config.**

Language: English  
Line Name: LINE(temp)  
Line Type: Block Cell  
# of Phone: 1  
Start Number of Jig: 1  
IP Address: 10.244.114.62

**Operation Condition**

Buttons: Model Information, Hardware Config, Signal Loss Config, Channel Config, W/S Calibration, Setting End Band, IMEI SVC&Repair Option, Operation Condition, OK

### 9. Click 'Port Setting'

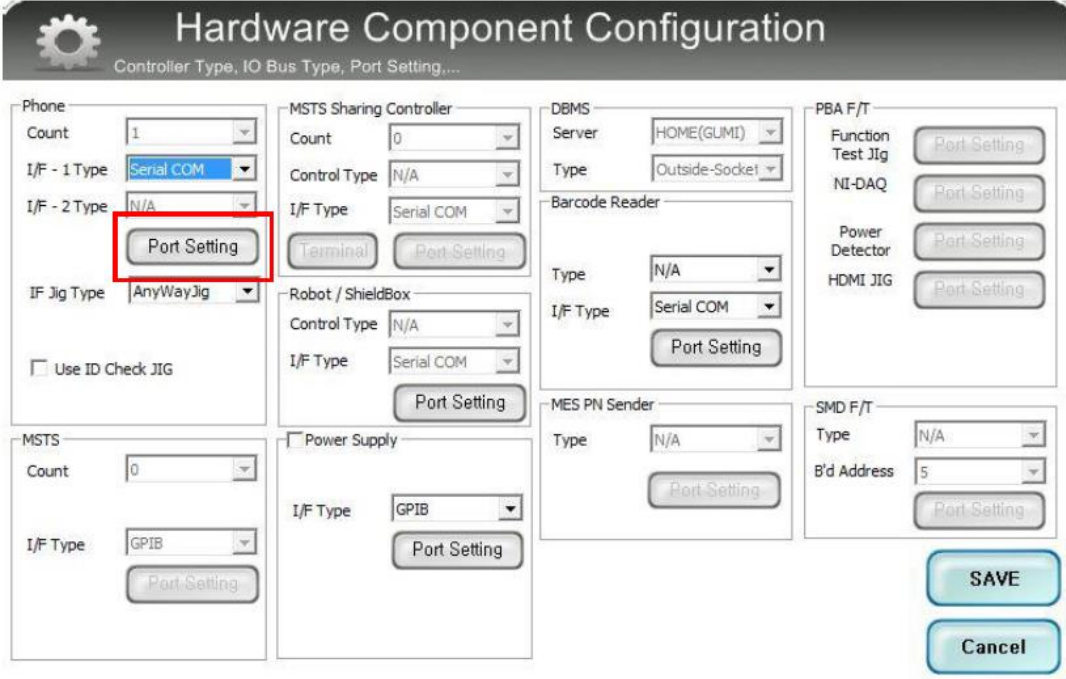

**Hardware Component Configuration**  
Controller Type, IO Bus Type, Port Setting,...

**Phone**  
Count: 1  
I/F - 1 Type: Serial COM  
I/F - 2 Type: N/A  
IF Jig Type: AnyWayJig  
Use ID Check JIG

**MSTS Sharing Controller**  
Count: 0  
Control Type: N/A  
I/F Type: Serial COM  
Terminal Port Setting

**Robot / ShieldBox**  
Control Type: N/A  
I/F Type: Serial COM  
Port Setting

**Power Supply**  
I/F Type: GPIB  
Port Setting

**DBMS**  
Server: HOME(GUMI)  
Type: Outside-Socket

**Barcode Reader**  
Type: N/A  
I/F Type: Serial COM  
Port Setting

**MES PN Sender**  
Type: N/A  
Port Setting

**PBA F/T**  
Function Test Jig Port Setting  
NI-DAQ Port Setting  
Power Detector Port Setting  
HDMI JIG Port Setting

**MSTS**  
Count: 0  
I/F Type: GPIB  
Port Setting

**SMD F/T**  
Type: N/A  
B'd Address: 5  
Port Setting

Buttons: Port Setting, SAVE, Cancel

## 6. Level 1 Repair

### 10. Select Port Number and SAVE

Set IO BUS Configuration

Phone IO Bus Setting

**Common**

BaudRate: 115200  
Data Bit: 8  
Parity: No  
Stop Bit: 1

No.	Port #1
1	1

SAVE  
Cancel

### 11. Click OK to proceed

Set System Configuration  
Set System Configuration Dialog...

Test Process

[Process] [Master] [Slave]

SMD F/T    
PBA F/T    
Calibration    
Final Auto    
Final Manual    
IMEI Process

IMEI Write    
IMEI Check    
MDL +2nd Check    
MDL Rework    
IMEI Read    
WLAN   
Power Off-On before WLAN   
Bluetooth

Test Condition

Calibration  
Real CAL Cycle: on every 20 default CALs  
Calibration Mode: Dynamic  
Final  
Supply RF Signal by: Conduction  
Test Signal Mode: Signaling  
Developer Mode

IMEI  
Use RFSM   
Use Second PC   
Save ODS

IMEI SVC&Repair Option

System Config.

Language: English  
Line Name: LINE(temp)  
Line Type: Block Cell  
# of Phone: 1  
Start Number of Jig: 1  
IP Address: 10.244.114.62

Operation Condition

Operation Condition


Model Information  
Hardware Config  
Signal Loss Config  
Channel Config  
IMEI Calibration  
Spring End Band

OK



## 6. Level 1 Repair

### 12. Click Model Info and OK when pop-up shows

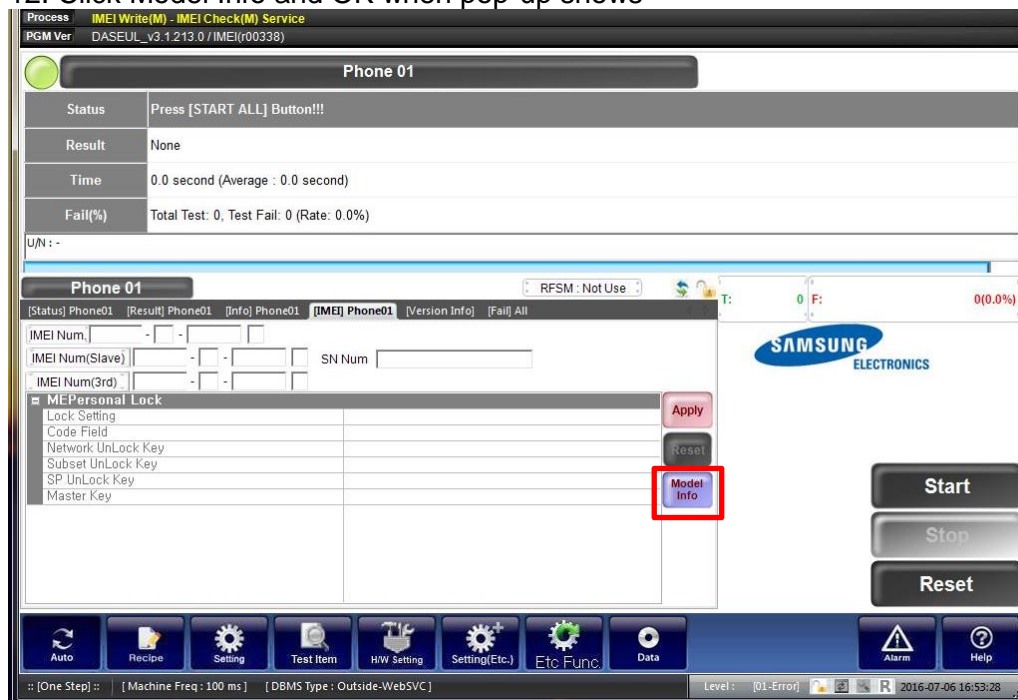


### 13. Click OK




## 6. Level 1 Repair

14. Input SKU\_CODE and BUYER, then click Save button.

✳ Refer to HHPsvc→IMEI Review to check SKU Code and buyer

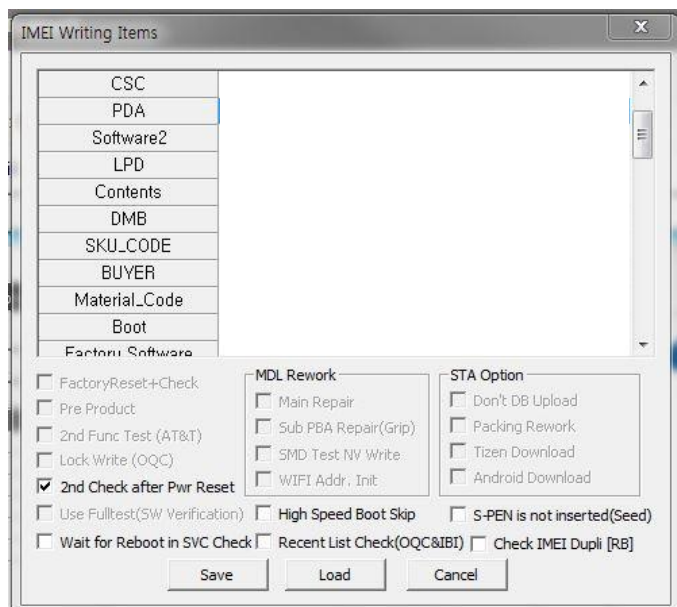


15. Input IMEI Number and click Apply

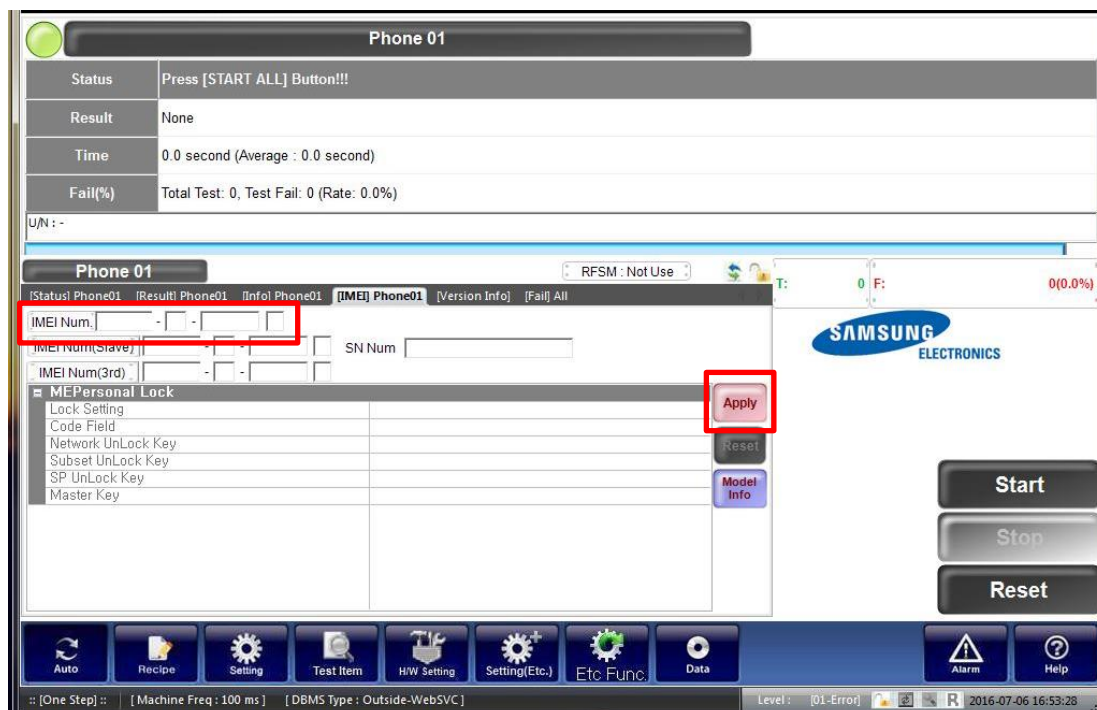

## 6. Level 1 Repair



16. ① Click Start → ② Input IMEI writing ID and Password & OTP → ③ Input Ticket No

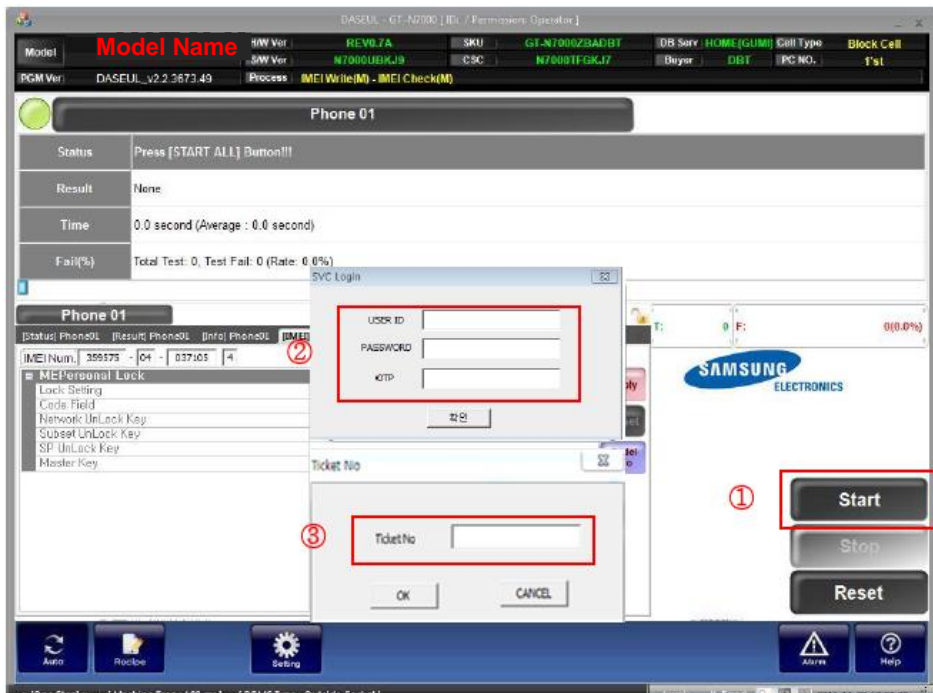

※ OTP(One time Password) : OTP is valid for 6 hours.

After that, you can get new OTP by click the “Forgotten your IMEI OTP PW or Create new IMEI OTP PW” button.

☞ OTP Location : GSPN → Knowledge → HHP svc → Home

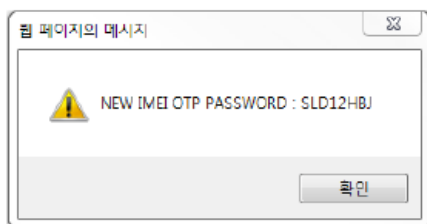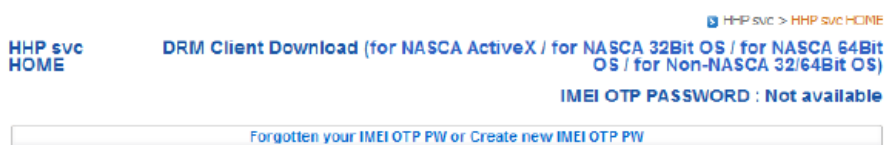


## 6. Level 1 Repair


### 17. Connect the phone to Anyway JIG

- ✧ When you connect the phone, the phone should be turned off.  
After connecting the phone, the phone will be booted automatically.

### 18. IMEI Writing Proceeding

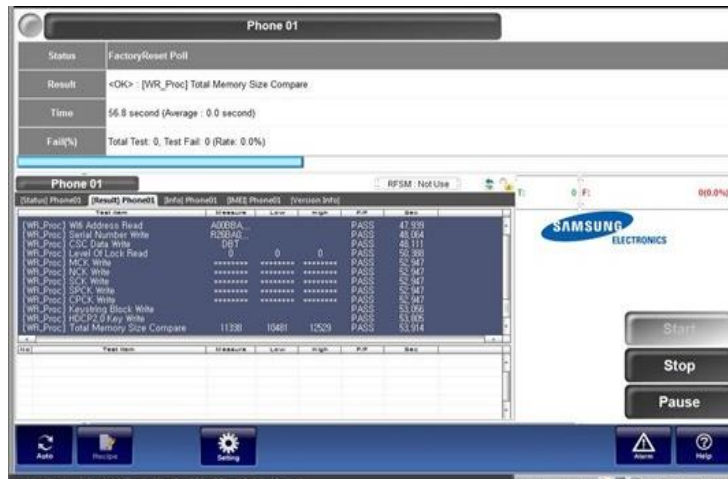

### 19. IMEI Writing Success

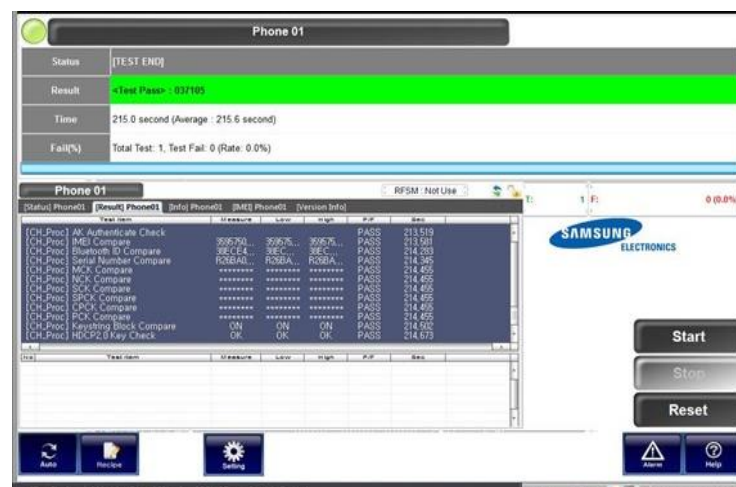

## 9. Reference Abbreviation

---

### Reference Abbreviation

- **AAC**: Advanced Audio Coding.
- **AVC** : Advanced Video Coding.
- **BER** : Bit Error Rate
- **BPSK**: Binary Phase Shift Keying
- **CA** : Conditional Access
- **CDM** : Code Division Multiplexing
- **C/I** : Carrier to Interference
- **DMB** : Digital Multimedia Broadcasting
- **EN** : European Standard
- **ES** : Elementary Stream
- **ETSI**: European Telecommunications Standards Institute
- **MPEG**: Moving Picture Experts Group
- **PN** : Pseudo-random Noise
- **PS** : Pilot Symbol
- **QPSK**: Quadrature Phase Shift Keying
- **RS** : Reed-Solomon
- **SI** : Service Information
- **TDM** : Time Division Multiplexing
- **TS** : Transport Stream